2013

GENERAL DESCRIPTION


The XRT86VX38 is an eight-channel 1.544 Mbit/s or 2.048 Mbit/s DS1/E1/J1 framer and Long-haul/Shorthual LIU integrated solution featuring R^3 technology (Relayless, Reconfigurable, Redundancy) and BITS Timing element. The physical interface is optimized with internal impedance, and with the patented pad structure, the XRT86VX38 provides protection from power failures and hot swapping.

The XRT86VX38 contains an integrated DS1/E1/J1 framer and LIU which provide DS1/E1/J1 framing and error accumulation in accordance with ANSI/ITU_T specifications. Each framer has its own framing synchronizer and transmit-receive slip buffers. The slip buffers can be independently enabled or disabled as required and can be configured to frame to the common DS1/E1/J1 signal formats.

Each Framer block contains its own Transmit and Receive T1/E1/J1 Framing function. There are 3 Transmit HDLC controllers per channel which encapsulate contents of the Transmit HDLC buffers into LAPD Message frames. There are 3 Receive HDLC controllers per channel which extract the payload content of Receive LAPD Message frames from the incoming T1/E1/J1 data stream and write the contents into the Receive HDLC buffers. Each framer also contains a Transmit and Overhead Data Input port, which permits Data Link Terminal Equipment direct access to the outbound T1/E1/J1 frames. Likewise, a Receive Overhead output data port permits Data Link Terminal Equipment direct access to the Data Link Terminal Equipment direct access to the Data Link bits of the inbound T1/E1/J1 frames.

The XRT86VX38 fully meets all of the latest T1/E1/J1 specifications: ANSI T1/E1.107-1988, ANSI T1/E1.403-1995, ANSI T1/E1.231-1993, ANSI T1/E1.408-1990, AT&T TR 62411 (12-90) TR54016, and ITU G-703, G.704, G706 and G.733, AT&T Pub. 43801, and ETS 300 011, 300 233, JT G.703, JT G.704, JT G706, I.431. Extensive test and diagnostic functions include Loop-backs, Boundary scan, Pseudo Random bit sequence (PRBS) test pattern generation, Performance Monitor, Bit Error Rate (BER) meter, forced error insertion, and LAPD unchannelized data payload processing according to ITU-T standard Q.921.

APPLICATIONS AND FEATURES (NEXT PAGE)

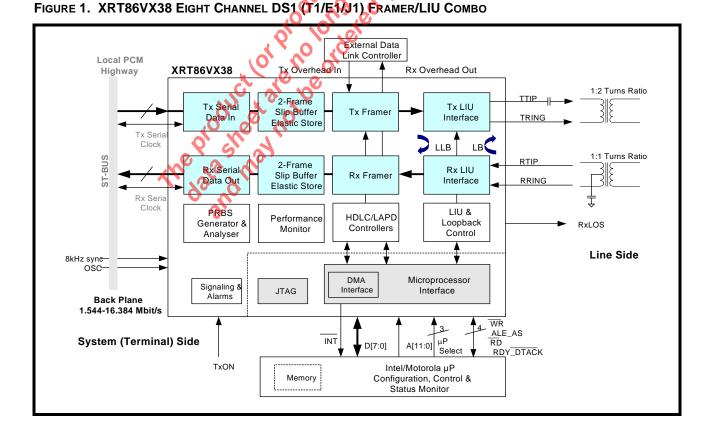

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

APPLICATIONS

- High-Density T1/E1/J1 interfaces for Multiplexers, Switches, LAN Routers and Digital Modems
- SONET/SDH terminal or Add/Drop multiplexers (ADMs)
- T1/E1/J1 add/drop multiplexers (MUX)
- Channel Service Units (CSUs): T1/E1/J1 and Fractional T1/E1/J1
- BITS Timing
- Digital Access Cross-connect System (DACs)
- Digital Cross-connect Systems (DCS)
- Frame Relay Switches and Access Devices (FRADS)
- ISDN Primary Rate Interfaces (PRA)
- PBXs and PCM channel bank
- T3 channelized access concentrators and M13 MUX
- Wireless base stations
- ATM equipment with integrated DS1 interfaces
- Multichannel DS1 Test Equipment
- T1/E1/J1 Performance Monitoring
- Voice over packet gateways
- Routers

FEATURES

- uces needing nanufactured • Supports Section 13 - Synchronization Interface in TU G703 for both Transmit and Receive Paths
- Supports SSM Synchronous Messaging Generation (BOC for T1, National Bits for E1) on the Transmit Path
- Supports SSM Synchronous Messaging Extraction (BOC for T1, National Bits for E1) on the Receive Path
- Supports BITS timing generation on the Transmit Outputs
- Supports BITS timing extraction from NRZ data on the Analog Receive Path
- DS-0 Monitoring on both Transmit and Receive Time Slots
- Supports SSM Synchronization Messaging per ANSI T1.101-1999 and ITU G.704
- Supports a Customized Section 13 Synchronization Interface in G.703 at 1.544MHz
- Independent, full duplex DS1 Tx and Rx Framer/LIUs
- Each channel has full featured Long-haul/Short-haul LIU
- Two 512-bit (two-frame) elastic store, PCM frame slip buffers (FIFO) on TX and Rx provide up to 8.192 MHz asynchronous back plane connections with jitter and wander attenuation
- Supports input PCM and signaling data at 1.544, 2.048, 4.096 and 8.192 Mbits. Also supports 2-channel multiplexed 12.352/16.384 (HMVIP/H.100) Mbit/s on the back plane bus
- Programmable output clocks for Fractional T1/E1/J1
- Supports Channel Associated Signaling (CAS)
- Supports Common Channel Signalling (CCS)
- Supports ISDN Primary Rate Interface (ISDN PRI) signaling





REV. 1.0.4 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION 8-CHANNEL T1/E1/J1 FRAMER/

- Extracts and inserts robbed bit signaling (RBS)
- 3 Integrated HDLC controllers for transmit and receive, each controller having two 96-byte buffers (buffer 0 / buffer 1)
- HDLC Controllers Support SS7
- Timeslot assignable HDLC
- V5.1 or V5.2 Interface
- Automatic Performance Report Generation (PMON Status) can be inserted into the transmit LAPD interface every 1 second or for a single transmission
- Supports SPRM and NPRM
- Alarm Indication Signal with Customer Installation signature (AIS-CI)
- Remote Alarm Indication with Customer Installation (RAI-CI)
- Gapped Clock interface mode for Transmit and Receive.
- Intel/Motorola and Power PC interfaces for configuration, control and status monitoring
- Parallel search algorithm for fast frame synchronization
- Wide choice of T1 framing structures: SF/D4, ESF, SLC®96, T1DM and N-Frame (non-signaling)
- Direct access to D and E channels for fast transmission of data link information
- Full BERT Controller for generation and detection on system and line side of the chip
- PRBS, QRSS, and Network Loop Code generation and detection
- Seven Independent, simultaneous Loop Code Detectors per Channel
- Programmable Interrupt output pin
- Supports programmed I/O and DMA modes of Read-Write access
- The framer block encodes and decodes the T1/E1/J1 Frame serial data
- Detects and forces Red (SAI), Yellow (RAI) and Blue (AIS) Alarms
- Detects OOF, LOF, LOS errors and COFA conditions
- Loopbacks: Local (LLB) and Line remote (LB)
- Facilitates Inverse Multiplexing for ATM
- · Performance monitor with one second polling
- Boundary scan (IEEE 1149.1) TAG test port
- Accepts external 8kHz Sync reference
- 1.8V Inner Core
- 3.3V CMOS operation with 5V tolerant inputs
- 256-pin fpBGA and 329-pin fpBGA package with -40°C to +85°C operation

ORDERING INFORMATION

PART NUMBER	PACKAGE	OPERATING TEMPERATURE RANGE
XRT86VX38IB256	256 PIn Fine Pitch Ball Grid Array	-40°C to +85°C
XRT86VX38IB329	329 PIn Fine Pitch Ball Grid Array	-40°C to +85°C

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



LIST OF TABLES

Table 1:: Register Summary		4
Table 2:: Clock Select Register(CSR)	Hex Address: 0xN100 1	
Table 3:: Line Interface Control Register (LICR)	Hex Address: 0xN101 1	13
Table 4:: General Purpose Input/Output 0 Control Register(GPIOCR0)	Hex Address: 0x0102 1	15
Table 5:: General Purpose Input/Output 1 Control Register(GPIOCR1)	Hex Address: 0x4102 1	16
Table 6:: Framing Select Register (FSR)	Hex Address: 0xN1071	17
Table 7:: Alarm Generation Register (AGR)	Hex Address: 0xN108	19
Table 8:: yellow alarm duration and format when one second rule is not e		
Table 9:: yellow alarm format when one second rule is enforced		
Table 10:: Synchronization MUX Register (SMR)	Hex Address: 0xN1092	
Table 11:: Transmit Signaling and Data Link Select Register (TSDLSR)	Hex Address:0xN10A2	
Table 12:: Framing Control Register (FCR)	Hex Address: 0xN10B2	
Table 13:: Receive Signaling & Data Link Select Register (RSDLSR)	Hex Address: 0xN10C2	
Table 14:: Receive Signaling Change Register 0 (RSCR 0)	HexAddress: 0xN10D	
Table 15:: Receive Signaling Change Register 1(RSCR 1)	Hex Address: 0xN10E	
	Wex Address: 0xN10F	
Table 16:: Receive Signaling Change Register 2 (RSCR 2) Table 17:: Receive In Frame Register (RER)		
Table 17:: Receive In Frame Register (RIFR)	Hex Address: 0xN112	
Table 18:: Data Link Control Register (DLCR1)	Hex Address: 0xN113	
Table 19:: Transmit Data Link Byte Count Register (TDLBCR1)	Wex Address: 0xN114	
Table 20:: Receive Data Link Byte Count Register (RDLBCR1)	Hex Address: 0xN115	
Table 21:: Slip Buffer Control Register (SBCR)	Hex Address: 0xN116	
Table 22:: FIFO Latency Register (FFOLR)	Hex Address: 0xN117	
Table 23:: DMA 0 (Write) Configuration Register (D0WCR) Image: Configuration Register (D0WCR)	Hex Address: 0xN118	
Table 24:: DMA 1 (Read) Configuration Register (D1RCR)	Hex Address: 0xN119	
Table 25:: Interrupt Control Register (ICR)	Hex Address: 0xN11A4	
Table 26:: LAPD Select Register (LAPDSR)	Hex Address: 0xN11B4	12
Table 27:: Customer Installation Alarm Generation Register (CIAGR)	Hex Address: 0xN11C4	13
Table 28:: Performance Report Control Register (PRCRV 🕺 💉	Hex Address: 0xN11D4	14
Table 29:: Gapped Clock Control Register (GCCR)	Hex Address: 0xN11E4	15
Table 30:: Transmit Interface Control Register (TICR)	Hex Address:0xN1204	
Table 31:: Transmit Interface Speed When Multiplexed Mode is Disabled	(TxMUXEN = 0)	18
Table 32:: Transmit Interface Speed when Multiplexed Mode is Enabled		
Table 33:: BERT Control & Status Register (BERTCSR0)	Hex Address: 0xN1215	
Table 34:: Receive Interface Control Register (RICR)	Hex Address: 0xN1225	51
Table 35:: Receive Interface Speed When Multiplexed Mode is Disabled		
Table 36:: Receive Interface Speed when Multiplexed Mode is Enabled (
Table 37:: BERT Control & Status Register (BERTCSR1)	Hex Address: 0xN1235	
Table 38:: Loopback Code Control Register - Code 0 (LCCR0)	Hex Address: 0xN1245	
Table 39:: Transmit Loopback Coder Register (TLCR)	Hex Address: 0xN1255	
Table 40:: Receive Loopback Activation Code Register - Code 0 (RLACF		
Table 41:: Receive Loopback Deactivation Code Register - Code 0 (RLD	CR0) Hex Address: 0xN1275	
	Hex Address: 0xN1286	
Table 43:: Defect Detection Enable Register (DDER)	Hex Address: 0xN129	
Table 44:: Loopback Code Control Register - Code 1 (LCCR1)	Hex Address: 0xN124	
Table 45:: Receive Loopback Activation Code Register - Code 1 (RLACR		
Table 46:: Receive Loopback Deactivation Code Register - Code 1 (RLD	-	
Table 47:: Loopback Code Control Register - Code 2 (LCCR2)	Hex Address: 0xN12D	
Table 48:: Receive Loopback Activation Code Register - Code 2 (RLACF		
Table 49:: Receive Loopback Deactivation Code Register - Code 2 (RLD	-	
Table 50:: Transmit LoopCode Generation Switch (TLCGS)	Hex Address: 0xN1406	
	0xN1416	
Table 52:: Transmit SPRM and NPRM Control Register (TSPRMCR)	Hex Address: 0xN1426	
Table 53:: Data Link Control Register (DLCR2)	Hex Address: 0xN1436	
Table 54:: Transmit Data Link Byte Count Register (TDLBCR2)	Hex Address: 0xN1447	
Table 55:: Receive Data Link Byte Count Register (RDLBCR2)	Hex Address: 0xN1457	
Table 56:: Loopback Code Control Register - Code 3 (LCCR3)	Hex Address: 0xN1467	′2
Table 57:: Receive Loopback Activation Code Register - Code 3 (RLACF		
Table 58:: Receive Loopback Deactivation Code Register - Code 3 (RLD		73



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Table 59:: Loopback Code Control Register - Code 4 (LCCR4) Hex Address: 0xN14974 Table 60:: Receive Loopback Activation Code Register - Code 4 (RLACR4) Hex Address: 0xN14A75 Table 61:: Receive Loopback Deactivation Code Register - Code 4 (RLDCR4) Hex Address: 0xN14B75 Hex Address: 0xN14C76 Table 62:: Loopback Code Control Register - Code 5 (LCCR5) Table 63:: Receive Loopback Activation Code Register - Code 5 (RLACR5) Hex Address: 0xN14D77 Table 64:: Receive Loopback Deactivation Code Register - Code 5 (RLDCR5) Hex Address: 0xN14E77 Table 65:: Loopback Code Control Register - Code 6 (LCCR6) Hex Address: 0xN14F78 Table 66:: Receive Loopback Activation Code Register - Code 6 (RLACR6) Hex Address: 0xN150 79 Table 67:: Receive Loopback Deactivation Code Register - Code 6 (RLDCR6) Hex Address: 0xN151 79 Table 68:: Data Link Control Register (DLCR3) Hex Address: 0xN153 80 Table 69:: Transmit Data Link Byte Count Register (TDLBCR3) Hex Address: 0xN154 82 Hex Address: 0xN155 83 Table 70:: Receive Data Link Byte Count Register (RDLBCR3) Table 71:: Loopback Code Control Register - Code 7 (LCCR7) Hex Address: 0xN156 84 Table 72:: Receive Loopback Activation Code Register - Code 7 (RLACR7) Hex Address: 0xN157 85 Table 73:: Receive Loopback Deactivation Code Register - Code 7 (RLDCR7) Hex Address: 0xN158 85 Table 74:: BERT Control Register (BCR) Hex Address: 0xN163 86 Table 76:: SSM BOC Control Register (BOCCR 0xN170h) 88 Table 78:: SSM Receive FDL Match 1 Register (RFDLMR1 0xN172h)

 Table 79:: SSM Receive FDL Match 2 Register (RFDLMR2 0xN173h)
 90

 Table 80:: SSM Receive FDL Match 3 Register (RFDLMR3 0xN174h)
 90

 Table 82:: SSM Transmit Byte Count Register (TBCR 0xN176h) Table 83:: Receive DS-0 Monitor Registers (RDS0MR) Hex Address: Table 85:: Device ID Register (DEVID) Table 86:: Revision ID Register (REVID) Table 87:: Transmit Channel Control Register 0-23 (TCCR 0-23) Table 88:: Transmit User Code Register 0-23 (TUCR 0-23) Table 89:: Transmit Signaling Control Register 0-23 (TSCR 0-28) Hex Address: 0xN340 to 0xN357 97 Table 90:: Receive Channel Control Register 0-23 (RCCR 0-23) Hex Address: 0xN360 to 0xN377 99 Table 91:: Receive User Code Register 0-23 (RUCR 0-23) Hex Address: 0xN380 to 0xN397 101 Table 92:: Receive Signaling Control Register 0-23 (RSCR 0-23) Hex Address: 0xN3A0 to 0xN3B7 102 Hex Address: 0xN3C0 to 0xN3D7 104 Table 93:: Receive Substitution Signaling Register 0-23 (RSSR 0-23) Table 94:: Receive Signaling Array Register () to 23 (RSAR 0-23) Hex Address: 0xN500 to 0xN517 105 Table 95:: LAPD Buffer 0 Control Register (LAPDBCR0) Hex Address: 0xN600 106 Hex Address: 0xN700 106 Table 96:: LAPD Buffer 1 Control Register (LAPDBCR1) Table 97:: PMON Receive Line Code Violation Counter MSB (RLCVCU) Hex Address: 0xN900 107 Table 98:: PMON Receive Line Code Violation Counter LSB (RLCVCL) Hex Address: 0xN901 107 Table 100:: PMON Receive Framing Alignment Bit Error Counter LSB (RFAECL) Hex Address: 0xN903 108 Table 101:: PMON Receive Severely Errored Frame Counter (RSEFC) Hex Address: 0xN904 109 Table 102:: PMON Receive CRC-6BIT Error Counter - MSB (RSBBECU) Hex Address: 0xN905 110 Table 103:: PMON Receive CRC-6 Bit Error Counter - LSB (RSBBECL) Hex Address: 0xN906 110 Table 104:: PMON Receive Slip Counter (RSC) Hex Address: 0xN909 111 Table 105:: PMON Receive Loss of Frame Counter (RLFC) Hex Address: 0xN90A 111 Table 106:: PMON Receive Change of Frame Alignment Counter (RCFAC) Hex Address: 0xN90B 111 Table 107:: PMON LAPD1 Frame Check Sequence Error Counter 1 (LFCSEC1) Hex Address: 0xN90C 112 Table 108:: PRBS Bit Error Counter MSB (PBECU) Hex Address: 0xN90D 112 Table 109:: PRBS Bit Error Counter LSB (PBECL) Hex Address: 0xN90E 112 Table 110:: Transmit Slip Counter (TSC) Hex Address: 0xN90F 113 Table 111:: Excessive Zero Violation Counter MSB (EZVCU) Hex Address: 0xN910 113 Table 112:: Excessive Zero Violation Counter LSB (EZVCL) Hex Address: 0xN911 113 Table 113:: PMON LAPD2 Frame Check Sequence Error Counter 2 (LFCSEC2) Hex Address: 0xN91C 114 Table 114:: PMON LAPD2 Frame Check Sequence Error Counter 3 (LFCSEC3) Hex Address: 0xN92C 114 Table 115:: Block Interrupt Status Register (BISR) Hex Address: 0xNB00 115 Table 116:: Block Interrupt Enable Register (BIER) Hex Address: 0xNB01 117 Table 117:: Alarm & Error Interrupt Status Register (AEISR) Hex Address: 0xNB02 119

A New Direction in Mixed-Signal REV. 1.0.4

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Table 118:: Alarm & Error Interrupt Enable Register (AEIER) Hex Address: 0xNB03 121 Table 119:: Framer Interrupt Status Register (FISR) Hex Address: 0xNB04 122 Table 120:: Framer Interrupt Enable Register (FIER) Hex Address: 0xNB05 124 Table 121:: Data Link Status Register 1 (DLSR1) Hex Address: 0xNB06 126 Table 122:: Data Link Interrupt Enable Register 1 (DLIER1) Hex Address: 0xNB07 128 Table 123:: Slip Buffer Interrupt Status Register (SBISR) Hex Address: 0xNB08 130 Table 124:: Slip Buffer Interrupt Enable Register (SBIER) Hex Address: 0xNB09 133 Table 126:: Receive Loopback Code 0 Interrupt Enable Register (RLCIER0) Hex Address: 0xNB0B 136 Table 127:: Excessive Zero Status Register (EXZSR) Hex Address: 0xNB0E 137 Table 128:: Excessive Zero Enable Register (EXZER) Hex Address: 0xNB0F 137 Table 129:: SS7 Status Register for LAPD1 (SS7SR1) Hex Address: 0xNB11138 Table 130:: SS7 Enable Register for LAPD1 (SS7ER1) Table 131:: RxLOS/CRC Interrupt Status Register (RLCISR) Hex Address: 0xNB12 139 Table 132:: RxLOS/CRC Interrupt Enable Register (RLCIER) Hex Address: 0xNB13 139 Table 134:: Receive Loopback Code 1 Interrupt Enable Register (RLCIER1) Hex Address: 0xNB15 141 Table 135:: Data Link Status Register 2 (DLSR2) Hex Address: 0xNB16 142 Table 136:: Data Link Interrupt Enable Register 2 (DLIER2) Table 137:: SS7 Status Register for LAPD2 (SS7SR2) Table 138:: SS7 Enable Register for LAPD2 (SS7ER2) Table 140:: Receive Loopback Code 2 Interrupt Enable Register (RLCIER2) Hex Address: 0xNB1B 148 Table 142:: Receive Loopback Code 3 Interrupt Enable Register (RCIER3) Hex Address: 0xNB1D 150 Table 144:: Receive Loopback Code 4 Interrupt Enable Register (RLCIER4) Hex Address: 0xNB1F 152 Table 146:: Receive Loopback Code 5 Interrupt Enable Register (RLCIER5) Hex Address: 0xNB21 154 Table 148:: Receive Loopback Code 6 Interrupt Enable Register (RLCIER6) Hex Address: 0xNB23 156 Table 150:: Receive Loopback Code 7 Interrupt Enable Register (RLCIER7) Hex Address: 0xNB25 158 Table 151:: Data Link Status Register 3 (DLSR3) Hex Address: 0xNB26 159 Hex Address: 0xNB27 161 Table 152:: Data Link Interrupt Enable Register 3 (DLIER3) Table 153:: SS7 Status Register for LAPD3 (SS7SR3) Hex Address: 0xNB28 163 Table 154:: SS7 Enable Register for LAPD3 (SS7ER3) Hex Address: 0xNB29 163 Table 155:: Customer Installation Alarm Status Register (CIASR) Hex Address: 0xNB40164 Table 156:: Customer Installation Alarm Status Register (CIAIER) Hex Address: 0xNB41165 Table 157:: T1 BOC Interrupt Status Register (BOCISR 0xNB70h)166 Table 158:: T1 BOC Interrupt Enable Register (BOCIER 0xNB71h)168 Table 161:: LIU Channel Control Register 0 (LIUCCR0) Table 163:: LIU Channel Control Register 1 (LIUCCR1) Hex Address: 0x0FN1 174 Table 164:: LIU Channel Control Register 2 (LIUCCR2) Hex Address: 0x0FN2 176 Hex Address: 0x0FN3 178 Table 165:: LIU Channel Control Register 3 (LIUCCR3) Table 166:: LIU Channel Control Interrupt Enable Register (LIUCCIER) Hex Address: 0x0FN4 180 Table 167:: LIU Channel Control Status Register (LIUCCSR) Hex Address: 0x0FN5 182 Table 168:: LIU Channel Control Interrupt Status Register (LIUCCISR) Hex Address: 0x0FN6 185 Table 169:: LIU Channel Control Cable Loss Register (LIUCCCCR) Hex Address: 0x0FN7 187 Table 170:: LIU Channel Control Arbitrary Register 1 (LIUCCAR1) Hex Address: 0x0FN8 187 Table 171:: LIU Channel Control Arbitrary Register 2 (LIUCCAR2) Hex Address: 0x0FN9 187 Table 172:: LIU Channel Control Arbitrary Register 3 (LIUCCAR3) Hex Address: 0x0FNA 188 Table 173:: LIU Channel Control Arbitrary Register 4 (LIUCCAR4) Hex Address: 0x0FNB 188 Table 174:: LIU Channel Control Arbitrary Register 5 (LIUCCAR5) Hex Address: 0x0FNC 188 Table 175:: LIU Channel Control Arbitrary Register 6 (LIUCCAR6) Hex Address: 0x0FND 189 Table 176:: LIU Channel Control Arbitrary Register 7 (LIUCCAR7) Hex Address: 0x0FNE 189 Table 177:: LIU Channel Control Arbitrary Register 8 (LIUCCAR8) Hex Address: 0x0FNF 189



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Table 178:: LIU Global Control Register 0 (LIUGCR0) Table 179:: LIU Global Control Register 1 (LIUGCR1) Table 180:: LIU Global Control Register 2 (LIUGCR2) Table 181:: LIU Global Control Register 3 (LIUGCR3) Table 182:: LIU Global Control Register 4 (LIUGCR4) Table 183:: LIU Global Control Register 5 (LIUGCR5)

Hex Address: 0x0FE0 190	i
Hex Address: 0x0FE1 192	
Hex Address: 0x0FE2 193	
Hex Address: 0x0FE4 193	
Hex Address: 0x0FE9 194	
Hex Address: 0x0FEA 195	

The produce are not be ordered to be ordered

DESCRIPTION OF THE CONTROL REGISTERS - T1 MODE

All address on this register description is shown in HEX format.

FUNCTION	Symbol	Нех				
Control Registers (0xN100 - 0xN1FF)						
Clock and Select Register	CSR	0xN100				
Line Interface Control Register	LICR	0xN101				
General Purpose Input/Output Control 0	GPIOCR0	0x0102				
General Purpose Input/Output Control 1	GPIOCR1	0x4102				
Reserved	is d	0xN103 - 0xN106				
Framing Select Register	FSR	0xN107				
Alarm Generation Register	AGR	0xN108				
Synchronization MUX Register	SMR	0xN109				
Transmit Signaling and Data Link Select Register	TSDLSR	0xN10A				
Framing Control Register	FCR	0xN10B				
Receive Signaling & Data Link Select Register	RSDLSR	0xN10C				
Receive Signaling Change Register 0	RSCR0	0xN10D				
Receive Signaling Change Register 1	RSCR1	0xN10E				
Receive Signaling Change Register 2	RSCR2	0xN10F				
Reserved - E1 mode only	-	0xN110 - 0xN111				
Receive In-Frame Register	RIFR	0xN112				
Data Link Control Register 1	DLCR1	0xN113				
Transmit Data Link Byte Count Register	TDLBCR1	0xN114				
Receive Data Link Byte Count Register 1	RDLBCR1	0xN115				
Slip Buffer Control Register	SBCR	0xN116				
FIFO Latency Register	FIFOLR	0xN117				
DMA 0 (Write) Configuration Register	D0WCR	0xN118				
DMA 1 (Read) Configuration Register	D1RCR	0xN119				
Interrupt Control Register	ICR	0xN11A				
LAPD Select Register	LAPDSR	0xN11B				
Customer Installation Alarm Generation Register	CIAGR	0xN11C				
Performance Report Control Register	PRCR	0xN11D				
Gapped Clock Control Register	GCCR	0xN11E				
Transmit Interface Control Register	TICR	0xN120				





8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

FUNCTION	SYMBOL	Hex
BERT Control & Status - Register 0	BERTCSR0	0xN121
Receive Interface Control Register	RICR	0xN122
BERT Control & Status - Register 1	BERTCSR1	0xN123
Loopback Code Control Register - Code 0	LCCR0	0xN124
Transmit Loopback Code Register	TLCR	0xN125
Receive Loopback Activation Code Register - Code 0	RLACR0	0xN126
Receive Loopback Deactivation Code Register - Code 0	RLDCR0	0xN127
Receive LoopCode Detection Switch	BLCDS	0xN128
Defect Detection Enable Register	DDER	0xN129
Loopback Code Control Register - Code 1	LCCR1	0xN12A
Receive Loopback Activation Code Register - Code 1	RLACR1	0xN12B
Receive Loopback Deactivation Code Register - Code 1	RLDCR1	0xN12C
Loopback Code Control Register - Code 2	LCCR2	0xN12D
Receive Loopback Activation Code Register - Code 2	RLACR2	0xN12E
Receive Loopback Deactivation Code Register - Code 2	RLDCR2	0xN12F
Reserved - E1 mode only	-	0xN130 - 0xN13F
Transmit LoopCode Generation Switch	TLCGS	0xN140
Loopcode Timer Select	LCTS	0xN141
Transmit SPRM and NPRM Control Register 0	TSPRMCR	0xN142
Data Link Control Register 2	DLCR2	0xN143
Transmit Data Link Byte Count Register 2	TDLBCR2	0xN144
Receive Data Link Byte Count Register 2	RDLBCR2	0xN145
Loopback Code Control Register - Code 3	LCCR3	0xN146
Receive Loopback Activation Code Register - Code 3	RLACR3	0xN147
Receive Loopback Deactivation Code Register - Code 3	RLDCR3	0xN148
Loopback Code Control Register - Code 4	LCCR4	0xN149
Receive Loopback Activation Code Register - Code 4	RLACR4	0xN14A
Receive Loopback Deactivation Code Register - Code 4	RLDCR4	0xN14B
Loopback Code Control Register - Code 5	LCCR5	0xN14C
Receive Loopback Activation Code Register - Code 5	RLACR5	0xN14D
Receive Loopback Deactivation Code Register - Code 5	RLDCR5	0xN14E
Loopback Code Control Register - Code 6	LCCR6	0xN14F
Receive Loopback Activation Code Register - Code 6	RLACR6	0xN150



FUNCTION	Symbol	HEX					
Receive Loopback Deactivation Code Register - Code 6	RLDCR6	0xN151					
Data Link Control Register 3	DLCR3	0xN153					
Transmit Data Link Byte Count Register 3	TDLBCR3	0xN154					
Receive Data Link Byte Count Register 3	RDLBCR3	0xN155					
Loopback Code Control Register - Code 7	LCCR7	0xN156					
Receive Loopback Activation Code Register - Code 7	RLACR7	0xN157					
Receive Loopback Deactivation Code Register - Code 7	RLDCR7	0xN158					
BERT Control Register	BCR	0xN163					
SSM BOC Control Register	BOCCR	0xN170					
SSM Receive FDL Register	REDLR	0xN171					
SSM Receive FDL Match 1 Register	RFDLMR1	0xN172					
SSM Receive FDL Match 2 Register	RFDLMR2	0xN173					
SSM Receive FDL Match 3 Register	RFDLMR3	0xN174					
SSM Transmit FDL Register	TFDLR	0xN175					
SSM Transmit Byte Count Register	TBCR	0xN176					
Receive DS-0 Monitor Registers	RDS0MR	0xN15F - 0xN1CF					
Transmit DS-0 Monitor Registers	TDS0MR	0xN1D0 - 0xN1EF					
Device ID Register	DEVID	0x1FE					
Revision Number Register	REVID	0x1FF					
Time Slot (payload) Control (0xN300 0xN3FF)		•					
Transmit Channel Control Register 0-23	TCCR 0-23	0xN300 - 0xN317					
Transmit User Code Register 0-23	TUCR 0-23	0xN320 - 0xN337					
Transmit Signaling Control Register 0-23	TSCR 0-23	0xN340 - 0xN357					
Receive Channel Control Register 0-23	RCCR 0-23	0xN360 - 0xN377					
Receive User Code Register 0-23	RUCR 0-23	0xN380 - 0xN397					
Receive Signaling Control Register 0-23	RSCR 0-23	0xN3A0 - 0xN3B7					
Receive Substitution Signaling Register 0-23	RSSR 0-23	0xN3C0 - 0xN3D7					
Receive Signaling Array (0xN500 - 0xN51F)							
Receive Signaling Array Register 0	RSAR0-23	0xN500 - 0xN517					
LAPDn Buffer 0							
LAPD Buffer 0 Control Register	LAPDBCR0	0xN600 - 0xN660					



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

FUNCTION	SYMBOL	Нех					
LAPDn Buffer 1							
LAPD Buffer 1 Control Register	LAPDBCR1	0xN700 - 0xN760					
Performance Monitor							
Receive Line Code Violation Counter: MSB	RLCVCU	0xN900					
Receive Line Code Violation Counter: LSB	RLCVCL	0xN901					
Receive Frame Alignment Error Counter: MSB	RFAECU	0xN902					
Receive Frame Alignment Error Counter: LSB	RFAECL	0xN903					
Receive Severely Errored Frame Counter	RSEFC	0xN904					
Receive Synchronization Bit (CRC-6) Error Counter: MSB	RSBBECU	0xN905					
Receive Synchronization Bit (CRC-6) Error Counter: LSB	RSBBECL	0xN906					
Reserved - E1 Mode Only	21	0xN907 - 0xN908					
Receive Slip Counter	RSC	0xN909					
Receive Loss of Frame Counter	RLFC	0xN90A					
Receive Change of Frame Alignment Counter	RCOAC	0xN90B					
LAPD Frame Check Sequence Error counter 1	LFCSEC1	0xN90C					
PRBS bit Error Counter: MSB	PBECU	0xN90D					
PRBS bit Error Counter: LSB	PBECL	0xN90E					
Transmit Slip Counter	TSC	0xN90F					
Excessive Zero Violation Counter: MSB	EZVCU	0xN910					
Excessive Zero Violation Counter LSB	EZVCL	0xN911					
LAPD Frame Check Sequence Error counter 2	LFCSEC2	0xN91C					
LAPD Frame Check Sequence Error counter 3	LFCSEC3	0xN92C					
Interrupt Generation/Enable Register Address Map (0xNB00 - 0xI	NB41)						
Block Interrupt Status Register	BISR	0xNB00					
Block Interrupt Enable Register	BIER	0xNB01					
Alarm & Error Interrupt Status Register	AEISR	0xNB02					
Alarm & Error Interrupt Enable Register	AEIER	0xNB03					
Framer Interrupt Status Register	FISR	0xNB04					
Framer Interrupt Enable Register	FIER	0xNB05					
Data Link Status Register 1	DLSR1	0xNB06					
Data Link Interrupt Enable Register 1	DLIER1	0xNB07					
Slip Buffer Interrupt Status Register	SBISR	0xNB08					



FUNCTION	Symbol	HEX
Slip Buffer Interrupt Enable Register	SBIER	0xNB09
Receive Loopback code 0 Interrupt and Status Register	RLCISR0	0xNB0A
Receive Loopback code 0 Interrupt Enable Register	RLCIER0	0xNB0B
Reserved - E1 Mode Only	-	0xNB0C - 0xNB0D
Excessive Zero Status Register	EXZSR	0xNB0E
Excessive Zero Enable Register	EXZER	0xNB0F
SS7 Status Register for LAPD 1	SS7SR1	0xNB10
SS7 Enable Register for LAPD 1	SS7ER1	0xNB11
RxLOS/CRC Interrupt Status Register	RLCISR	0xNB12
RxLOS/CRC Interrupt Enable Register	RLCIER	0xNB13
Receive Loopback code 1 Interrupt and Status Register	RLCISR1	0xNB14
Receive Loopback code 1 Interrupt Enable Register	RLCIER1	0xNB15
Data Link Status Register 2	DLSR2	0xNB16
Data Link Interrupt Enable Register 2	DLIER2	0xNB17
SS7 Status Register for LAPD 2	SS7SR2	0xNB18
SS7 Enable Register for LAPD 2	SS7ER2	0xNB19
Receive Loopback code 2 Interrupt and Status Register	RLCISR2	0xNB1A
Receive Loopback code 2 Interrupt Enable Register	RLCIER2	0xNB1B
Receive Loopback code 3 Interrupt and Status Register	RLCISR3	0xNB1C
Receive Loopback code 3 Interrupt Enable Register	RLCIER3	0xNB1D
Receive Loopback code 4 Interrupt and Status Register	RLCISR4	0xNB1E
Receive Loopback code 4Interrupt Enable Register	RLCIER4	0xNB1F
Receive Loopback code 5 Interrupt and Status Register	RLCISR5	0xNB20
Receive Loopback code 5 Interrupt Enable Register	RLCIER5	0xNB21
Receive Loopback code 6 Interrupt and Status Register	RLCISR6	0xNB22
Receive Loopback code 6 Interrupt Enable Register	RLCIER6	0xNB23
Receive Loopback code 7 Interrupt and Status Register	RLCISR7	0xNB24
Receive Loopback code 7 Interrupt Enable Register	RLCIER7	0xNB25
Data Link Status Register 3	DLSR3	0xNB26
Data Link Interrupt Enable Register 3	DLIER3	0xNB27
SS7 Status Register for LAPD 3	SS7SR3	0xNB28
SS7 Enable Register for LAPD 3	SS7ER3	0xNB29
Customer Installation Alarm Status Register	CIASR	0xNB40



FUNCTION	SYMBOL	Нех					
Customer Installation Alarm Interrupt Enable Register	CIAIER	0xNB41					
BOC Interrupt Status Register	BOCISR	0xNB70					
BOC Interrupt Enable Register	BOCIER	0xNB71					
Reserved	-	0xNB72 - 0xNB73					
BOC Unstable Interrupt Status Register	BOCUSR	0xNB74					
BOC Unstable Interrupt Enable Register	BOCUER	0xNB75					
LIU Register Summary - Channel Control Registers	<u>.</u>						
LIU Channel Control Register 0	LIUCCRO	0x0FN0					
LIU Channel Control Register 1	LIUCCR1	0x0FN1					
LIU Channel Control Register 2	LUCCR2	0x0FN2					
LIU Channel Control Register 3	LIUCCR3	0x0FN3					
LIU Channel Control Interrupt Enable Register	LIUCCIER	0x0FN4					
LIU Channel Control Status Register	LIUCCSR	0x0FN5					
LIU Channel Control Interrupt Status Register	LIUCCISR	0x0FN6					
LIU Channel Control Cable Loss Register	LIUCCCCR	0x0FN7					
LIU Channel Control Arbitrary Register 1	LIUCCAR1	0x0FN8					
LIU Channel Control Arbitrary Register 2	LIUCCAR2	0x0FN9					
LIU Channel Control Arbitrary Register 3	LIUCCAR3	0x0FNA					
LIU Channel Control Arbitrary Register 4	LIUCCAR4	0x0FNB					
LIU Channel Control Arbitrary Register 5	LIUCCAR5	0x0FNC					
LIU Channel Control Arbitrary Register 6	LIUCCAR6	0x0FND					
LIU Channel Control Arbitrary Register 7	LIUCCAR7	0x0FNE					
LIU Channel Control Arbitrary Register 8	LIUCCAR8	0x0FNF					
Reserved	-	0x0F80 - 0x0FDF					
LIU Register Summary - Global Control Registers							
LIU Global Control Register 0	LIUGCR0	0x0FE0					
LIU Global Control Register 1	LIUGCR1	0x0FE1					
LIU Global Control Register 2	LIUGCR2	0x0FE2					
LIU Global Control Register 3	LIUGCR3	0x0FE4					
LIU Global Control Register 4	LIUGCR4	0x0FE9					

A New Direction in Mixed-Signal REV. 1.0.4

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 1: REGISTER SUMMARY

FUNCTION	Symbol	Нех
LIU Global Control Register 5	LIUGCR5	0x0FEA
Reserved	-	0x0FEB - 0x0FFF

The product are not be ordered to be and many the product are not be ordered to be and the product of the ordered to be and the orde



1.0 REGISTER DESCRIPTIONS - T1 MODE

All address on this register description is shown in HEX format

TABLE 2: CLOCK SELECT REGISTER(CSR)

HEX ADDRESS: 0xN100

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	LCV Insert	R/W	0	Line Code Violation Insertion This bit is used to force a Line Code Violation (LCV) on the transmit output of TTIP/TRING. A "0" to "1" transition on this bit will cause a single LCV to be inserted on the transmit output of TTIP/TRING.
6	Set T1 Mode	R/W	0	 T1 Mode select This bit is used to program the individual channel to operate in either T1 or E1 mode. 0 = Configures the selected channel to operate in E1 mode. 1 = Configures the selected channel to operate in T1 mode.
5	Sync All Transmit- ters to 8kHz	R/W	0	 Sync All Transmit Framers to 8kHz This bit permits the user to configure the Transmit T1 Framer block to synchronize its "transmit output" frame alignment with the 8kHz signal that is derived from the MCLK PLL, as described below. 0 - Disables the "Sync all Transmit Framers to 8kHz" feature. 1 - Enables the "Sync all Transmit Framers to 8kHz" feature. Note: This bit is only active if the MCLK PLL is used as the "Timing Source" for the Transmit T1 Framer" blocks. CSS[1:0] of this register allows users to select the transmit source of the framer.
4	Clock Loss Detect	R/W	t of et not	 Clock Loss Detect Enable/Disable Select This bit enables a clock loss protection feature for the Framer whenever the recovered line clock is used as the timing source for the transmit section. If the LIU loses clock recovery, the Clock Distribution Block will detect this occurrence and automatically begin to use the internal clock derived from MCLK PLL as the Transmit source, until the LIU is able to regain clock recovery. 0 = Disables the clock loss protection feature. 1 = Enables the clock loss protection feature. Note: This bit needs to be enabled in order to detect the clock closs detection interrupt status (address: 0xNB00, bit 5)
3:2	Reserved	R/W	00	Reserved

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 2: CLOCK SELECT REGISTER(CSR)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION	
1:0	CSS[1:0]	R/W	01	Clock Source Select These bits select the timing source for the Transmit T1 Framer block. These bits can also determine the direction of TxSERCLK, TxSYNC, and TxMSYNC in base rate operation mode (1.544MHz Clock mode). In Base Rate (1.544MHz Clock Mode):		SERCLK, TxSYNC,
				CSS[1:0]	TRANSMIT SOURCE FOR THE TRANSMIT T1 FRAMER BLOCK	DIRECTION OF TXSERCLK
				00/11	Loop Timing Mode The recovered line clock is cho- sen as the timing source.	Output
				01	External Timing Mode The Transmit Serial Input Clock from the TxSERCLK_n input pin is chosen as the timing source.	Input
				10	Internal Timing Mode The MCLK PLL is chosen as the timing source.	Output
			4	depe OxN ⁻ Svor	YNC/TxMSYNC can be programme ending on the setting of SYNC INV bi 109, bit 4. Please see Register pronization Mux Register (SMR - 0x gh-Speed or multiplexed modes, TxS IC are all configured as INPUTS only	it in Register Address Description for the N109) Table 10. SERCLK, TxSYNC,
		theda	andmay	Notes: In Hi and TXMS Y		



HEX ADDRESS: 0xN100



TABLE 3: LINE INTERFACE CONTROL REGISTER (LICR)

HEX ADDRESS: 0xN101

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	FORCE_LOS	R/W	0	Force Transmit LOS (To the Line Side) This bit permits the user to configure the transmit direction circuitry (within the channel) to transmit the LOS pattern to the remote terminal equipment, as described below. 0 - Configures the transmit direction circuitry to transmit "normal" traffic. 1 - Configures the transmit direction circuitry to transmit the LOS Pattern.
6	Reserved	R/W	0	Single Rail Mode This bit can only be set if the LIU Block is also set to single rail mode. See Register 0xNFE0, bit 7. 0 - Dual Rail 1 - Single Rail
5:4	LB[1:0]	R/W		Framer Loopback Selection These bits are used to select any of the following loop-back modes for the framer section. For QU loopback modes, see the LIU configuration registers. LB[1:0] TYPES OF LOOPBACK SELECTED 00 Normal Mode (No LoopBack) 01 Framer Local LoopBack: When framer local loopback is enabled, the transmit PCM input data is looped back to the receive PCM output data. The receive input data at RTIP/RRING is ignored while an All Ones Signal is transmitted out to the line interface. 10 Framer Far-End (Remote) Line LoopBack: When framer remote loopback is enabled, the digital data enters the framer interface, however does not enter the framing blocks. The receive digital data from the LIU is allowed to pass through the LIU Decoder/ Encoder circuitry before returning to the line interface. 11 Framer Payload LoopBack: When framer payload loopback is enabled, the raw data within the receive time slots are looped back to the transmit framer block where the data is re-framed according to the transmit timing.
3:2	Reserved	R/W	0	Reserved

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 3: LINE INTERFACE CONTROL REGISTER (LICR)

HEX ADDRESS: 0xN101

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	Encode B8ZS	R/W	0	 Encode AMI or B8ZS/HDB3 Line Code Select This bit enables or disables the B8ZS/HDB3 encoder on the transmit path. 0 = Enables the B8ZS encoder. 1 = Disables the B8ZS encoder. Note: When B8ZS encoder is disabled, AMI line code is used.
0	Decode AMI/B8ZS	R/W	0	Decode AMI or B8ZS/HDB3 Line Code Select This bit enables or disables the B8ZS/HDB3 decoder on the receive path. 0 = Enables the B8ZS decoder. 1 = Disables the B8ZS decoder. Note: When B8ZS decoder is disabled, AMI line code is received.

Le creder. Les tre BZS decorrectes Torre Vien BZS decorrectes Torrectes Torrectes





8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 4: GENERAL PURPOSE INPUT/OUTPUT 0 CONTROL REGISTER(GPIOCR0) Hex Address: 0x0102

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	GPIO0_3DIR GPIO0_2DIR GPIO0_1DIR GPIO0_0DIR	R/W	1111	 GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 Direction These bits permit the user to define the General Purpose I/O Pins, GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 as either Input pins or Output pins, as described below. 0 - Configures GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 to function as input pins. 1 - Configures GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 to function as output pins. 1. If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as input pins, then the user can monitor the state of these input pins by reading out the state of Bit 3-0 (GPIO0_3/GPIO0_2/GPIO0_0) within this register. 2. If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as output pins, then the user can control the state of these output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of these output pins by writing the appropriate value into Bit 3-0 (GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0) within this register.
3-0	GPIO0_3 GPIO0_2 GPIO0_1 GPIO0_0	R/W		 GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 Control The exact function of this bit depends upon whether General Purpose I/ O Pins, GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 have been configured to function as input or output pins, as described below. If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as input pins; If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as input pins, then the user can monitor the state of the corresponding input pins, then the user can monitor the state of the corresponding input pin by reading out the state of these bits. NoTE: If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as input pins, then writing to this particular register will have no effect on the state of this pin. If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as output pins: If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as output pins; If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as output pins; If GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 are configured to function as output pins; then the user can control the state of the corresponding output pin by writing the appropriate value to these bits. NOTE: GPIO0_3/GPIO0_2/GPIO0_1/GPIO0_0 can be configured to function as input or output pins, by writing the appropriate value to Bit 7-4 (GPIO0_3DIR/GPIO0_2DIR/GPIO0_1DIR/ GPIO0_0DIR) within this register.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	GPIO1_3DIR GPIO1_2DIR GPIO1_1DIR GPIO1_0DIR	R/W	0000	 GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 Direction These bits permit the user to define the General Purpose I/O Pins, GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 as either Input pins or Output pins, as described below. 0 - Configures GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 to function as input pins. 1 - Configures GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 to function as output pins. 1. If GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 are configured to function as input pins by reading out the state of Bit 3-0 (GPIO1_2/GPIO1_1/GPIO1_0) within this register. 2. If GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 are configured to function as output pins, then the user can control the state of these output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of function as output pins, then the user can control the state of these output pins by writing the appropriate value into Bit 3-0 (GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0) within this register.
3-0	GPIO1_3 GPIO1_2 GPIO1_1 GPIO1_0	R/W	ouce a and may	GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 Control The exact function of this bit depends upon whether General Purpose I/ O Pins, GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 have been configured to function as input or output pins, as described below. If GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 are configured to function as input pins: If GPIO1_3/GPIO1_2/GPIO1_1/GPIO1_0 are configured to function as input pins, then the user can monitor the state of the corresponding input pinby reading out the state of these bits. Note: If GPIO1_3/GPIO1_2/GPIO1_2/GPIO1_1/GPIO1_0 are configured to f GPIO1_3/GPIO1_2/GPIO1_2/GPIO1_1/GPIO1_0 are configured to If GPIO1_3/GPIO1_2/GP



HEX ADDRESS: 0x4102



TABLE 6: FRAMING SELECT REGISTER (FSR)

HEX ADDRESS: 0xN107

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Signaling update on Superframe Boundaries	R/W	0	 Enable Robbed-Bit Signaling Update on Superframe Boundary on Both Transmit and Receive Direction This bit enables or disables robbed-bit signaling update on the superframe boundary for both the transmit and receive side of the framer. On the Receive Side: If signaling update is enabled, signaling data on the receive side (RxSIG pin and Signaling Array Register - RSAR) will be updated on the superframe boundary, otherwise, signaling data will be updated as soon as it is received. On the Transmit Side: If signaling update is enabled, any signaling data changes on the transmit side will be transmitted on the superframe boundary, otherwise, signaling data changes on the transmit side will be transmitted as soon as it is changed. 0 - Disables the signaling update feature for both transmit and receive. 1 - Enables the signaling update feature for both transmit and receive.
6	Force CRC Errors	R/W	0	Force CRC Errors (To the Line Side) This bit permits the user to force the Transmit T1 Framer block to transmit CRC errors within the outbound T1 data-stream, as depicted below. 0 - Disables CRC error transmission on the outbound T1 stream. 1 - Enables CRC error transmission on the outbound T1 stream.
5	J1_MODE	R/W	or or no	 Mode This bit is used to configure the device in J1 mode. Once the device is configured in J1 mode, the following two changes will happen: CRC calculation is done in J1 format. The J1 CRC6 calculation is based on the actual values of all 4632 bits in a T1 multiframe including Fe bits instead of assuming all Fe bits to be a one in T1 format. Receive and Transmit Yellow Alarm signal format is interpreted per the J1 standard. (J1-SF or J1-ESF) Configures the device in T1 mode. (Default) Configures the device in J1 mode. Note: Users can select between J1-SF or J1-ESF by setting this bit and the T1 Framing Mode Select Bits[2:0] (Bits 2-0 within this register).
4	ONEONLY	R/W	0	 Allow Only One Sync Candidate This bit is used to specify one of the synchronization criteria that the Receive T1 Framer block employs. 0 - Allows the Receive T1 Framer to select any one of the winners in the matching process when there are two or more valid synchronization patterns appear in the required time frame. 1 - Allows the Receive T1 Framer to declare success of match when there is only one candidate left in the required time frame.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 6: FRAMING SELECT REGISTER (FSR)

HEX ADDRESS: 0xN107

Віт	FUNCTION	Түре	DEFAULT		Desc	RIPTION-C	PERATIO	N		
3	FASTSYNC	R/W	0	Faster Sync A This bit is use Receive T1 Fr enabled, the F earlier. The ta with correct F- to declare "SY	d to specify or ramer block er Receive T1 Fr ble below spe -bits that the T	mploys. If amer Blo cifies the 1 Receiv	f this "Fas ck will de number ve framer	ster Sync clare syn of conseo must rec	Algorit chroniz cutive fi eive in	hm" is tation rames
					Framing		stSync = 0	Fasts		
					ESF	5	96	4	8	
					SF		48	24	4	
					Ne	50	48	24	4	
					SLC ® 96		48	24	4	
				0 - Disables F 1 - Enables F/						
2-0	FSI[2:0]	R/W 000 T1 Framing Mode Select [2:0] These three bits permit the user to select the that the channel is to operate in. Bit 2 is MSB and Bit 0 is LSB. The following ferent framing formats that can be selected by three bits accordingly. NOTE: Changing Framing formats 'on the fly T1 Framer block to undergo a "Refra Framing FS[2] FSF 0 X SF Note: Note: Note: Note			blowing ta elected by	able show / configur	vs the fi ing the	ive dif- se		
		or	nern		Framing	FS[2]	FS[1]	FS[0]		
		0,0	ma.		ESF	0	Х	Х		
	\sim	992	6		SF	1	0	1		
		ð			N	1	1	0		
					T1DM	1	1	1		
					SLC®96	1	0	0		





TABLE 7: ALARM GENERATION REGISTER (AGR)

HEX ADDRESS: 0xN108

XRT86VX38

Віт

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 7: ALARM GENERATION REGISTER (AGR)

FUNCTION TYPE DEFAULT

5-4	YEL[1:0]	R/W	00	The exact fu alarm rule is	m (RAI) Duration and Format nction of these bits depends on whether or not the one-second yellow enforced. (Bit 7 of this register). The decoding of these bits are Table 8 and Table 9 below.
				TABLE 8: Y	ELLOW ALARM DURATION AND FORMAT WHEN ONE SECOND RULE IS NOT ENFORCED
				YEL[1:0]	YELLOW ALARM DURATION AND FORMAT
				00	Disable the transmission of yellow alarm
			the ate		 SF or N mode: RAI is transmitted as bit 2 = 0 (second MSB) in all DS0 data channel. T1DM mode: RAI is transmitted as Y bit = 0 (6th bit in the SYNC byte). ESF mode: If YEL[0] bit is set 'high' for a duration shorter or equal to the time required to transmit 255 patterns of 1111_111_0000_0000 on the 4-kbit/s data link bits (M1-M12). RAI is transmitted for 255 patterns.of 1111_111_0000_0000 (approximately 1 second) If YEL[0] bit is set 'high' for a duration longer than the time required to transmit 255 patterns of 1111_111_0000_0000 (approximately 1 second) If YEL[0] bit is set 'high' for a duration longer than the time required to transmit 255 patterns of 1111_111_0000_0000 (approximately 1 second) If YEL[0] bit is set 'high' for a duration longer than the time required to transmit 255 patterns of 1111_111_0000_0000 (approximately 1 second) If YEL[0] bit forms another pulse during the RAI transmission, it resets the pattern counter and extends the RAI duration for another 255 patterns of 1111_111_10000_0000. (approximately 1 second) SF mode: RAI is transmitted as a "1" in the Fs bit of frame 12 (This is RAI for J1 SF standard). T1DM mode: RAI is controlled by the duration of YEL[1] bit. This allows continuous RAI of any length.
				11	SF, N, and T1DM mode: RAI format is the same as described above when YEL[1:0] is set
					to'01'. ESF mode:
					RAI duration is the same as described above when YEL[1:0] is set to'01', except that format of RAI is transmitted as 255 patterns of 1111_1111_1111_1111 (sixteen ones) on the 4kbits/s data link bits instead of 255 patterns of 1111_1111_0000_0000.
					Note: 255 patterns of 1111_1111_1111_is the J1 ESF RAI standard)

HEX ADDRESS: 0xN108

DESCRIPTION-OPERATION





TABLE 7: ALARM GENERATION REGISTER (AGR)

HEX ADDRESS: 0xN108

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION	
5-4	YEL[1:0]	R/W	00	continued)	
				TABLE 9: YELLOW ALARM FORMAT WHEN ONE SECOND R	ULE IS ENFORCED
				YEL[1:0] YELLOW ALARM FORMAT	
				00 Disable the transmission of yellow alarm	
		- Ine	produce and and	 01 SF or N mode: RAI is transmitted as bit 2 = 0 (second MSB) in a T1DM mode: RAI is transmitted as Y-bit = 0 (6th bit in the SY ESF mode: YEL[1:0] controls the format of RAI. When YEL[is transmitted as 255 patterns of 1111_111_000 kbit/s data link (M1-M12) (approximately 1 second ALARM_ENB (Bit 6 of this tegister) controls the described below. 1. If ALARM_ENB (Bit 6 of this tegister) controls the described below. 1. If ALARM_ENB bit is set 'high' for a duration the time required to transmit 1111_1111_0000_0000 on the 4-kbit/s date is transmitted for 255 patterns. (approxim 2, If ALARM_ENB bit is set 'high' for a duration for 255 patterns. (approxim 2, If ALARM_ENB bit is set 'high' for a duration for another pulse transmission, it resets the pattern courdinates until ALARM_ENB bit is set 'logs' for a duration for another 255 patterns (approxim 2, If ALARM_ENB forms another pulse transmission, it resets the pattern courdinates until ALARM_ENB bit is set 'logs' for a duration for another 255 patterns (approxim 2, If ALARM_ENB forms another pulse transmission, it resets the pattern courdinates until ALARM_ENB bit is set 'logs' for the time of an another 255 patterns (approxim 3, If ALARM_ENB forms another pulse transmission, it resets the pattern courdinates are the patte	NC byte). 1:0] is set to'01', RAI 20_0000 on the 4- and). a duration of RAI as ation shorter or equal t 255 pattern of ta link (M1-M12), RAI hately 1 second) ation longer than the 55 patterns of ta link (M1-M12), RAI w'. a during an alarm iter and extends the ns.(approximately 1 <i>een termination of the</i> <i>ent RAI is enforced.</i> 12 (This is RAI for J1 NC byte). B bit. This allows en YEL[1:0] is set hen YEL[1:0] is set as 255 patterns of pits (J1 ESF stan-

TABLE 7: ALARM GENERATION REGISTER (AGR)

BIT FUNCTION TYPE DEFAULT

511	1 SINGTION		BEI AUEI			
3-2	Transmit AIS Pattern Select[1:0]	R/W	00	These two bits p 1. To select the transmit to the r 2. To command	attern Select[1:0]: bermit the user to do the following. appropriate AIS Pattern that the Transmit T1 Framer block we mote terminal equipment, and (via Software Control) the Transmit T1 Framer block to trans IS Pattern to the remote terminal equipment, as depicted be	smit
				AISG[1:0]	TYPES OF AIS PATTERNS TRANSMITTED	
				00/10	Disable AIS Alarm Generation The Transmit T1 Framer block will transmit "normal" T1 traffic to the remote terminal equipment.	
				01	Enable Unframed AIS Alarm Generation Transmit T1 Framer block will transmit an Unframed All Ones Pattern, as an AIS Pattern.	
				11	Enable Framed AIS Alarm Generation Transmit T1 Framer block will transmit a Framed, All Ones Pattern, as the AIS Pattern.	
					mal operation (e.g., to configure the Transmit T1 Framer bl t normal T1 traffic) the user should set this bit to "[X, 0]"	lock to
1-0	AIS Defect Declaration Criteria [1:0]	R/W	00	These bits perm	Iaration Criteria[1:0]: It the user to specify the types of AIS Patterns that the Recein ust detect before it will declare the AIS defect condition.	ive T1
				AISD[1:0]	AIS Defect Declaration Criteria	
00/10 AIS Detection Disa AIS Defect Condition 01 Enable Unframed ReceiveT1 Framer	AIS Detection Disabled AIS Defect Condition will NOT be declared.					
	Enable Unframed and Framed AIS Alarm Detection ReceiveT1 Framer block will detect both Unframed and Framed AIS pattern					
			1.93	11	Enable Framed AIS Alarm Detection Receive T1 Framer block will detect only Framed AIS pat- tern	



HEX ADDRESS: 0xN108

DESCRIPTION-OPERATION



TABLE 10: SYNCHRONIZATION MUX REGISTER (SMR)

HEX ADDRESS: 0xN109

XRT86VX38

		DEFAULT	DESCRIPTION-OPERATION
Reserved	-	-	Reserved
/FRAMEALIGN	R/W	0	Transmit Multiframe Sync Alignment This bit forces Transmit T1 framer block to align with the backplane
			multiframe boundary (TxMSYNC_n). 0 = Do not force the transmit T1 framer block to align with the TxM- SYNC signal.
			1 = Force the transmit T1 framer block to align with the TxMSYNC signal.
			Note: This bit is not used in base rate (1.544MHz Clock) mode.
<i>I</i> SYNC	R/W	0	Transmit Super Frame Boundary This bit provides an option to use the transmit single frame boundary (TxSYNC) as the transmit multi-frame boundary (TxMSYNC) in high speed or multiplexed modes in 1.544MHz clock mode (base rate), the TxMSYNC is used as the transmit superframe boundary, in other clock modes (i.e. high speed or multiplexed modes), TxMSYNC is used as an input transmit clock for the backplane interface. 0 = Configures the TxSYNC as a single frame boundary. 1 = Configures the TxSYNC as a superframe boundary (TxMSYNC) in high-speed or multiplexed mode. Note: This bit is not used in base rate (1.544MHz Clock) mode.

tenfigures 1 = Configures in high-speed of Note: This bit

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 10: SYNCHRONIZATION MUX REGISTER (SMR)

HEX ADDRESS: 0xN109

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4	Transmit Frame Sync Select	R/W	0 UCC are	 Transmit Frame Sync Select This bit permits the user to configure the System-Side Terminal Equipment or the T1 Transmit Framer to dictate whenever the Transmit T1 Framer block will initiate its generation and transmission of the very next T1 frame. If the system side controls, then all of the following will be true. 1. The corresponding TxSync_n and TxMSync_n pins will function as input pins. 2. The Transmit T1 Framer block will initiate its generation of a new T1 frame whenever it samples the corresponding "TxSync_n" input pin "high" (via the TxSerClk_n input clock signal). 3. The Transmit T1 Framer block will initiate its generation of a new Multiframe whenever it samples the corresponding "TxMSync_n" input pin "high". This bit can also be used to select the direction of the transmit single frame boundary (TxSYNC) and multi-frame boundary (TxMSYNC) depending on whether XSERCLK is chosen as the timing source for the transmit section of the transmer. (CSS[1:0] = 01 in register 0xN100) If TxSERCLK is chosen as the timing source: 0 = Configures TxSYNC and TxMSYNC as outputs. (Chip Controls) If either Recovered Line Clock, MCLK PLL is chosen as the timing source; 0 = Configures TxSYNC and TxMSYNC as outputs. (Chip Controls) If either Recovered Line Clock, MCLK PLL is chosen as the timing source; 0 = Configures TxSYNC and TxMSYNC as inputs. (System Side Controls) If either Recovered Line Clock, MCLK PLL is chosen as the timing source; 0 = Configures TxSYNC and TxMSYNC as inputs. (System Side Controls) IF either Recovered Clock is chosen as the transmit clock if CSS[1:0] of the Clock Select Register (Register Address: 0xN100) is set to b01. Recovered Clock is chosen as the transmit clock if CSS[1:0] is set to b00 or b11; Internal Clock is chosen as the transmit clock if CSS[1:0] is set to b00.
0-Z	Neserveu	0,0	st al	
	×.	931	dmay	







TABLE 10: SYNCHRONIZATION MUX REGISTER (SMR)

HEX ADDRESS: 0xN109

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	CRC-6 Bits Source Select	R/W	0	 CRC-6 Bits Source Select This bit permits the user to specify the source of the CRC-6 bits, within the outbound T1 data-stream, as depicted below. 0 - Configures the Transmit T1 Framer block to internally compute and insert the CRC-6 bits within the outbound T1 data-stream. 1 - Configures the Transmit T1 Framer block to externally accept data from the TxSer_n input pin, and to insert this data into the CRC-6 bits within the outbound T1 data-stream. This bit is ignored if CRC Multiframe Alignment is disabled
0	Framing Bits Source Select	R/W	0	Framing Bits Source Select This bit is used to specify the source for the Framing bits that will be inserted into the outbound T1 frames. The Framing bits can be gen- erated internally or inserted from the transmit serial input pin. (TxSER_n input pin) 0 = Configures the Transmit T1 Framer block to internally generate and insert the Framing bits into the outbound T1 data stream. 1 = Configures the Transmit T1 Framer block to externally accept framing bits from the TxSer_n input pin, and to insert this data to the outbound T1 data-stream.

a configures the Tra framing bits from the Tra outbound Tri data-stree

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 11: TRANSMIT SIGNALING AND DATA LINK SELECT REGISTER (TSDLSR)

HEX ADDRESS:0xN10A

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION	Π
7	Reserved	-	-	Reserved	
6	Reserved	-	-	Reserved	
5-4	TxDLBW[1:0]	R/W	00	Transmit Data Link Bandwidth[1:0] These two bits are used to select the bandwidth for data link message transmission. Data Link messages can be transmitted at a 4kHz rate or at a 2kHz rate on odd or even framing bits depending of the configuration of these three bits. The table below specifies the four different configurations. TxDLBW[1:0] TRANSMIT DATA LINK BANDWIDTH SELECTED 00 Data link bits are inserted in every frame. Facility Data Link Bits (FDL) is a 4kHz data link channel. 01 Data link bits are inserted in every other frame. Facility Data Link Bits (FDL) is a 2kHz data link channel carried by odd framing bits (Frames 1,5,9,) 10 Data link bits are inserted in every other frame. Facility Data Link Bits (FDL) is a 2kHz data link channel carried by odd framing bits (Frames 1,5,9,) 10 Data link bits are inserted in every other frame. Facility Data Link Bits (FDL) is a 2kHz data link channel carried by even framing bits (Frames 3,7,11) 10 Reserved	on
3-2	TxDE[1:0]	R/W	U ^C 00 ST	Note: This bit only applies to T1 ESF framing format. For SLC and N framing formats, FDL is a 4kHz data link channel. F T1DM, FDL is a 8kHz data link channel. Transmit D/E TimeSlot Source Select[1:0]: These two bits specify the source for transmit D/E time slots. The table below shows the different sources from which D/E time slots	For
		e 9'	2 21	can be inserted.	
		20.0	γ_{U}	TxDE[1:0] Source for Transmit D/E Timeslots	11
		6		00 TxSER_n input pin - The D/E time slots are inserted from the transmit serial data input pin (TxSER_n) pin.	
				01 Transmit LAPD Controller - The D/E time slots are inserted from LAPD Controller.	
				10 Reserved	11
				11 TxFRTD_n - The D/E time slots are inserted from the transmit fractional input pin.	



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 11: TRANSMIT SIGNALING AND DATA LINK SELECT REGISTER (TSDLSR)

HEX ADDRESS:0xN10A

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
1-0	TxDL[1:0]	R/W	00	These two bits inserted in the	Link Source Select [1:0] specify the source for data link bits that will be outbound T1 frames. The table below shows the three es from which data link bits can be inserted.
				TxDL[1:0]	SOURCE FOR DATA LINK BITS
				00	 Transmit LAPD Controller #1 / SLC96 Buffer - The Data Link bits are inserted from the Transmit LAPD Controller #1 or SLC96 Buffer. Note: LAPD Controller #1 is the only LAPD controller that can be used to transport LAPD messages through the data link bits
				01	TxSER_n input pin - The Data Link bits are inserted from the transmit serial data input pin (TxSER_n) pin.
				10	TxOH input pin - The Data Link bits are inserted from the transmit overhead input pin. (TxOH_n)
				10	Data Link bits are forced to 1.

-

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reframe	R/W	0	Force Reframe A '0' to '1' transition will force the Receive T1 Framer to restart the synchronization process. This bit field is automatically cleared (set to 0) after frame synchronization is reached.
6	Framing with CRC Checking	R/W	1	Framing with CRC Checking in ESF This bit permits the user to include CRC verification as a part of the "T1/ESF Framing Alignment" process. If the user enables this feature, then the Receive T1 Framer block will also check and verify that the incoming T1 data-stream contains correct CRC data, prior to declaring the "In-Frame" condition. 0 - CRC Verification is NOT included in the "Framing Alignment" pro- cess. 1 - Receive T1 Framer block will also check for correct CRC values prior to declaring the "In-Frame" condition.
5-3	LOF Tolerance[2:0]	R/W	000	LOF Defect Declaration Tolerance[2:0]: These bits along with the LOF_RANGE[2:0] bits are used to define the LOF Defect Declaration criteria. The Receive T1 Framer block will declare the LOF defect condition anytime it detects "LOF_Tolerance[2:0]" out of "LOF_Range[2:0] framing bit errors within the incoming T1 data-stream. The recommended LOF_TOLR value is 2. Note: A "0" value for LOF_TOLR is internally blocked. A LOF_TOLF value must be specified.
2-0	LOF_Range[2:0]	R/W	ollice a	 LOF Defect Declaration Range[2:0]: These bits along with the "LOF_Tolerance[2:0] bits are used to define the "LOF Defect Declaration" criteria. The Receive T1 Framer block will declare the LOF Defect condition anytime it has received "LOF Tolerance[2:0] out of "LOF_Range[2:0] framing bit errors, within the incoming T1 data-stream. The recommended LOF_ANG value is 5. NOTE: A "0" value for LOF_RANG is internally blocked. A LOF_RANG value must be specified.



HEX ADDRESS: 0xN10B



TABLE 13: RECEIVE SIGNALING & DATA LINK SELECT REGISTER (RSDLSR)

HEX ADDRESS: 0xN10C

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7	Reserved	-	-	Reserved	
6	Reserved	-	-	Reserved	
5-4	RxDLBW[1:0]	R/W	00	These two bits se Data Link messag on odd or even fra	Ik Bandwidth[1:0]: lect the bandwidth for data link message reception. ges can be received at a 4kHz rate or at a 2kHz rate aming bits depending on the configuration of these low specifies the different configurations.
				RxDLBW[1:0]	RECEIVE DATALINK BANDWIDTH SELECTED
				00	Received Data link bits are extracted in every frame. Facility Data Link Bits (FDL) is a 4kHz data link channel.
				01	Received Data link bits are extracted in every other frame. Facility Data Link Bits (FDL) is a 2kHz data link channel carried by odd framing bits (Frames 1,5,9)
				ucts et bein	Received Data link bits are extracted in every other frame. Facility Data Link Bits (FDL) is a 2kHz data link channel carried by even framing bits (Frames 3,7,11)
			40		Reserved
			t of P	N framing	nly applies to T1 ESF framing format. For SLC96 and g formats, FDL is a 4kHz data link channel. For T1DM, 8kHz data link channel.
3-2	RxDE[1:0]	R/W	00 00		e-Slot Destination Select[1:0]:
	the	of s	mayn		the user to specify the "destination" circuitry that will ess the D/E-Time-slot within the incoming T1 data-
		ge suc		RxDE[1:0]	DESTINATION CIRCUITRY FOR RECEIVE D/E TIME-SLOT
				00	RxSER_n output pin - The D/E time slots are output to the receive serial data output pin (RxSER_n) pin.
				01	Receive LAPD Controller Block - The D/E time slots are output to Receive LAPD Controller Block.
				10	Reserved
				11	RxFRTD_n output pin- The D/E time slots are output to the receive fractional output pin.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 13: RECEIVE SIGNALING & DATA LINK SELECT REGISTER (RSDLSR)

HEX ADDRESS: 0xN10C

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
1-0	RxDL[1:0]	R/W	00	These bits specify	nk Destination Select[1:0]: y the destination circuitry, that is used to process the <i>i</i> thin the incoming T1 data-stream.
				RxDL[1:0]	DESTINATION CIRCUITRY FOR RECEIVE DATA-LINK
				00	Receive LAPD Controller Block # 1 andRxSER_n - The Data Link bits are routed to theReceive LAPD Controller block #1 and theRxSER_n output pinNote:LAPD Controller #1 is the only LAPD controller that can be used to extract LAPD messages through the data link bits
				01	RxSER_n . The Data Link bits are routed to the RxSER_n output pin.
				10	RxOH_n and RxSER_n - The Data Link bits are routed to the RxOH_n and RxSER_n output pins.
				11	Data Link bits are forced to 1.
				m	ain SI

The base from the set of the set





TABLE 14: RECEIVE SIGNALING CHANGE REGISTER 0 (RSCR 0)

HEX ADDRESS: 0xN10D

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Ch. 0	RUR	0	These bits indicate whether the Channel Associated signaling data, associated with Time-Slots 0 through 7 within the incoming T1 data-
6	Ch. 1	RUR	0	stream, has changed since the last read of this register, as depicted
5	Ch.2	RUR	0	below. 0 - CAS data (for Time-slots 0 through 7) has NOT changed since the
4	Ch.3	RUR	0	last read of this register.
3	Ch.4	RUR	0	1 - CAS data (for Time-slots 0 through 7) HAS changed since the I read of this register.
2	Ch.5	RUR	0	Notes: This register is only active if the incoming T1 data-stream is
1	Ch.6	RUR	0	using Channel Associated Signaling.
0	Ch.7	RUR	0	the received

TABLE 15: RECEIVE SIGNALING CHANGE REGISTER 1(RSCR 1) 0xN10E

FUNCTION Түре DEFAULT Description-Operation Віт These bits indicate whether the Channel Associated signaling data, 7 Ch.8 RUR 0 associated with Time-Slots 8 through 15 within the incoming T1 data-6 Ch.9 RUR 0 stream, has changed since the last read of this register, as depicted below. RUR 0 5 Ch.10 0 CAS data (for Time-slots 8 through 15) has NOT changed since the 0 last read of this register. 4 Ch.11 RUR 1 - CAS data (for Time-slots 8 through 15) HAS changed since the last 3 Ch.12 RUR 0 read of this register. This register is only active if the incoming T1 data-stream is using RUR 2 Ch.13 0 Channel Associated Signaling. 1 Ch.14 RUR 0 Ø 0 Ch.15 RUR 0

TABLE 16: RECEIVE SIGNALING CHANGE REGISTER 2 (RSCR 2)

HEX ADDRESS:

HEX ADDRESS:

0xN10F

Віт	FUNCTION	TYPE	DEFAULT	DESCRIPTION-OPERATION
7	Ch.16	RUR	0	These bits indicate whether the Channel Associated signaling data, associ- ated with Time-Slots 16 through 23 within the incoming T1 data-stream, has
6	Ch.17	RUR	0	changed since the last read of this register, as depicted below.
5	Ch.18	RUR	0	 0 - CAS data (for Time-slots 16 through 23) has NOT changed since the last read of this register. 1 - CAS data (for Time-slots 16 through 23) HAS changed since the last read of this register. NOTE: This register is only active if the incoming T1 data-stream is using Channel Associated Signaling.
4	Ch.19	RUR	0	
3	Ch.20	RUR	0	
2	Ch.21	RUR	0	
1	Ch.22	RUR	0	
0	Ch.23	RUR	0	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 17: RECEIVE IN FRAME REGISTER (RIFR)

HEX ADDRESS: 0xN112

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	In Frame	RO	0	In Frame State This READ-ONLY bit indicates whether the Receive T1 Framer block is currently declaring the "In-Frame" condition with the incoming T1 data- stream. 0 - Indicates that the Receive T1 Framer block is currently declaring the LOF (Loss of Frame) Defect condition. 1 - Indicates that the Receive T1 Framer block is currently declaring itself to be in the "In-Frame" condition.
6	Reserved	-	-	Reserved (For E1 Mode Only)
5	AIS_Ingress	R/W	0	AIS Ingress Generation This bit is used to send an AIS signal (unframed all ones) on the receiver output RxSER. 0 - Disabled 1 - Rx AIS Ingress Generation Enabled
4	FRAlarmMask	R/W	0	Framer Alarm Mask This bit can be used to mask the alarms associated with the Framing Mode that is selected. Regardless of the framing mode, this bit will mask to following alarms: LOF, IF, COFA, COMFA, FE, SE, and FMD. By default, the alarms are NOT masked. 0 - Disabled 1 - Framing Alarms Masked
3	DS0Yel	R/W	o oduct oducet	DS-0 Yellow Alarm Generation (T1 Mode Only) This bit is used to send a DS-0 Yellow alarm to TTip/TRing Egress direc- tion regardless of what framing format is used if bit 2 in this register is set to "0". If bit 2 is set to "1", then the Yellow Alarm is sent to RxSER on the Ingress side. DS-0 Yellow Alarm is defined as bit 2 = 0 (second MSB) in all DS-0 data channels. 0 - Disabled 1 DS-0 Yellow Alarm Generation Enabled
2	DS0Yel_Switch	R/W	andma	 DS-0 Yellow Alarm Switch Bit (T1 Mode Only) This bit is used to set the direction of the DS-0 Yellow Alarm as described in bit 3 of this register. 0 - DS-0 Yellow Egress (TTip/TRing) Generation 1 - DS-0 Yellow Ingress (RxSER) Generation
1-0	Reserved	-	-	Reserved (For E1 Mode Only)



TABLE 18: DATA LINK CONTROL REGISTER (DLCR1)

HEX ADDRESS: 0xN113

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	SLC-96 Data Link Enable	R/W	0	 SLC®96 DataLink Enable This bit permits the user to configure the channel to support the transmission and reception of the "SLC-96 type" of data-link message. 0 - Channel does not support the transmission and reception of "SLC-96" type of data-link messages. Regular SF framing bits will be transmitted. 1 - Channel supports the transmission and reception of the "SLC-96" type of data-link messages. This bit is only active if the channel has been configured to operate in either the SLC-96 or the ESF Framing formats.
6	MOS ABORT Disable	R/W	0	 MOS ABORT Disable: This bit permits the user to either enable or disable the "Automatic MOS ABORT" feature within Transmit HDLC Controller # 1. If the user enables this feature, then Transmit HDLC Controller block # 1 will automatically transmit the ABORT Sequence (e.g., a zero followed by a string of 7 consecutive "1s") whenever it abruptly transitions from transmitting a MOS type of message, to transmitting a BOS type of message. If the user disables this feature, then the Transmit HDLC Controller Block # 1 will NOT transmit the ABORT sequence, whenever it abruptly transitions from transmitting a MOS type of message. If the user disables this feature, then the Transmit HDLC Controller Block # 1 will NOT transmit the ABORT sequence, whenever it abruptly transitions from transmitting a MOS-type of message to transmitting a BOS-type of message. 0 - Enables the "Automatic MOS Abort" feature 1 Disables the "Automatic MOS Abort" feature
5	Rx_FCS_DIS	R/W	or anot	Receive Frame Check Sequence (FCS) Verification Enable/Dis- able This bit permits the user to configure the Receive HDLC Controller Block # 1 to compute and verify the FCS value within each incoming LAPD message frame. 0 - Enables FCS Verification 1 - Disables FCS Verification
4	AutoRx	R.W.	0	Auto Receive LAPD Message This bit configures the Receive HDLC Controller Block #1 to discard any incoming BOS or LAPD Message frame that exactly match which is currently stored in the Receive HDLC1 buffer. 0 = Disables this "AUTO DISCARD" feature 1 = Enables this "AUTO DISCARD" feature.
3	Tx_ABORT	R/W	0	 Transmit ABORT This bit configures the Transmit HDLC Controller Block #1 to transmit an ABORT sequence (string of 7 or more consecutive 1's) to the Remote terminal. 0 - Configures the Transmit HDLC Controller Block # 1 to function normally (e.g., not transmit the ABORT sequence). 1 - Configures the Transmit HDLC Controller block # 1 to transmit the ABORT Sequence.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 18: DATA LINK CONTROL REGISTER (DLCR1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	Tx_IDLE	R/W	0	Transmit Idle (Flag Sequence Byte) This bit configures the Transmit HDLC Controller Block #1 to uncon- ditionally transmit a repeating string of Flag Sequence octets (0X7E) in the data link channel to the Remote terminal. In normal condi- tions, the Transmit HDLC Controller block will repeatedly transmit the Flag Sequence octet whenever there is no MOS message to transmit to the remote terminal equipment. However, if the user invokes this "Transmit Idle Sequence" feature, then the Transmit HDLC Controller block will UNCONDITIONALLY transmit a repeat- ing stream of the Flag Sequence octet (thereby overwriting all out- bound MOS data-link messages). 0 - Configures the Transmit HDLC Controller Block # 1 to transmit
				 data-link information in a "normal" manner. 1 - Configures the Transmit HDLC Controller block # 1 to transmit a repeating string of Flag Sequence Octets (0x7E). Note: This bit is ignored if the Transmit HDLC1 controller is operating in the BOS Mode - bit 0 (MOS/BOS) within this register is set to 0.
1	Tx_FCS_EN	R/W	o Juct are	 Transmit LAPD Message with Frame Check Sequence (FCS) This bit permits the user to configure the Transmit HDLC Controller block # 1 to compute and append FCS octets to the "back-end" of each outbound MOS data-link message. 0 - Configures the Transmit HDLC Controller block # 1 to NOT compute and append the FCS octets to the back-end of each outbound MOS data-link message. 1 - Configures the Transmit HDLC Controller block # 1 TO COM-PUTE and append the FCS octets to the back-end of each outbound MOS data-link message. Note: This bit is ignored if the transmit HDLC1 controller has been configured to operate in the BOS mode - bit 0 (MOS/BOS) within this register is set to 0.
0	MOS/BOS	R/WO	d may n	 Message Oriented Signaling/Bit Oriented Signaling Send This bit permits the user to enable LAPD transmission through HDLC Controller Block # 1 using either BOS (Bit-Oriented Signaling) or MOS (Message-Oriented Signaling) frames. 0 - Transmit HDLC Controller block # 1 BOS message Send. 1 - Transmit HDLC Controller block # 1 MOS message Send. Note: This is not an Enable bit. This bit must be set to "0" each time a BOS is to be sent.



TABLE 19: TRANSMIT DATA LINK BYTE COUNT REGISTER (TDLBCR1)

HEX ADDRESS: 0xN114

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxHDLC1 BUFAvail/ BUFSel	R/W	0	 Transmit HDLC1 Buffer Available/Buffer Select This bit has different functions, depending upon whether the user is writing to or reading from this register, as depicted below. If the user is writing data into this register bit: 0 - Configures the Transmit HDLC1 Controller to read out and transmit the data, residing within "Transmit HDLC1 Buffer # 0", via the Data Link channel to the remote terminal equipment. 1 - Configures the Transmit HDLC1 Controller to read out and transmit the data, residing within the "Transmit HDLC1 Buffer #1", via the Data Link channel to the remote terminal equipment. If the user is reading data from this register bit: 0 - Indicates that "Transmit HDLC1 Buffer # 0" is the next available buffer. In this case, if the user vishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC1 Message Buffer, he/she should proceed to write this message into "Transmit HDLC1 Buffer # 0" - Address location: 0xN600. 1 - Indicates that "Transmit HDLC1 Buffer # 1" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC1 Message Buffer, he/she should proceed to write this message into "Transmit HDLC1 Buffer # 0" - Address location: 0xN600. 1 - Indicates that "Transmit HDLC1 Buffer # 1" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC1 Message Buffer, he/she should proceed to write this message into "Transmit HDLC1 Buffer # 1" - Address location: 0xN700. Nore: If one of these Transmit HDLC1 buffers contain a message which has yet to be completely read-in and processed for transmission by the Transmit HDLC1 controller, then this bit will automatically reflect the value corresponding to the next available buffer when it is read. Changing this bit to the in-
6-0	TDLBC[6:0]	R/W	6000000 2 7 0 0	Image: Use buffer is not permitted. Transmit HDLC1 Message - Byte Count The exact function of these bits depends on whether the Transmit HDLC 1 Controller is configured to transmit MOS or BOS messages to the Remote Terminal Equipment. In BOS MODE: These bit fields contain the number of repetitions the BOS message must be transmitted before the Transmit HDLC1 controller generates the Transmit End of Transfer (TxEOT) interrupt and halts transmission. If these fields are set to 00000000, then the BOS message will be transmitted for an indefinite number of times. In MOS MODE: These bit fields contain the length, in number of octets, of the message to be transmitted. The length of MOS message specified in these bits include header bytes such as the SAPI, TEI, Control field, however, it does not include the FCS bytes.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 20: RECEIVE DATA LINK BYTE COUNT REGISTER (RDLBCR1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RBUFPTR	R/W	0	 Receive HDLC1 Buffer-Pointer This bit Identifies which Receive HDLC1 buffer contains the most recently received HDLC1 message. 0 - Indicates that Receive HDLC1 Buffer # 0 contains the contents of the most recently received HDLC message. 1 - Indicates that Receive HDLC1 Buffer # 1 contains the contents of the most recently received HDLC1 Buffer # 1 contains the contents of the most recently received HDLC1 Buffer # 1 contains the contents of the most recently received HDLC1 Buffer # 1 contains the contents of the most recently received HDLC1 Buffer # 1 contains the contents of the most recently received HDLC1 Buffer # 1 contains the contents of the most recently received HDLC message.
6-0	RDLBC[6:0]	R/W	0000000	Receive HDLC Message - byte count The exact function of these bits depends on whether the Receive HDLC Controller Block #1 is configured to receive MOS or BOS messages. In BOS Mode: These seven bits contain the number of repetitions the BOS mes- sage must be received before the Receive HDLC1 controller gener- ates the Receive End of Transfer (RxEOT) interrupt. If these bits are set to "0000000", the message will be received indefinitely and no Receive End of Transfer (RxEOT) interrupt will be generated. In MOS Mode: These seven bits contain the size in bytes of the HDLC1 message that has been received and written into the Receive HDLC buffer. The length of MOS message shown in these bits include header bytes such as the SAPI, TEI, Control field, AND the FCS bytes.

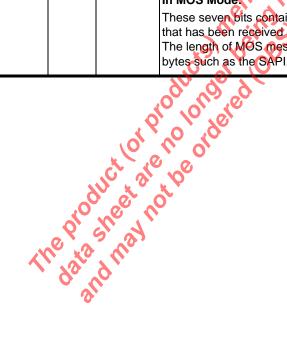






TABLE 21: SLIP BUFFER CONTROL REGISTER (SBCR)

HEX ADDRESS: 0xN116

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxSB_ISFIFO	R/W	0	 Transmit Slip Buffer Mode This bit permits the user to configure the Transmit Slip Buffer to function as either "Slip-Buffer" Mode, or as a "FIFO", as depicted below. 0 - Configures the Transmit Slip Buffer to function as a "Slip-Buffer". 1 - Configures the Transmit Slip Buffer to function as a "FIFO". Note: Transmit slip buffer is only used in high-speed or multiplexed mode where TxSERCLKn must be configured as inputs only. Users must make sure that the "Transmit Direction" timing (i.e. TxMSYNC) and the TxSerClk input clock signal are synchronous to prevent any transmit slips from occuring. Note: The data latency is dictated by FIFO Latency in the FIFO Latency Register (register 0xN117).
6-5	Reserved	-	-	Reserved
4	SB_FORCESF	R/W	0	Force Signaling Freeze This bit permits the user to freeze any signaling update on the RxSIGn output pin as well as the Receive Signaling Array Register -RSAR (0xN500- 0xN51F) until this bit is cleared. 0 = Signaling on RxSIG and RSAR is updated immediately. 1 = Signaling on RxSIG and RSAR is not updated until this bit is set to '0'.
3	SB_SFENB	R/W		Signal Freeze Enable Upon Buffer Slips This bit enables signaling freeze for one multiframe after the receive buffer slips. If signaling freeze is enabled, then the "Receive Channel" will freeze all sig- naling updates on RxSIG pin and RSAR (0xN500-0xN51F) for at least "one- multiframe" period, after a "slip-event" has been detected within the "Receive Slip Buffer" 0 = Disables signaling freeze for one multi-frame after receive buffer slips. 1 = Enables signaling freeze for one multi-frame after receive buffer slips.
2	SB_SDIR	R/W	du et	Stip Buffer (RxSync) Direction SelectThis bit permits user to select the direction of the receive frame boundary(RxSYNC) signal if the receive buffer is enabled. (i.e. SB_ENB[1:0] = 01 or10). If slip buffer is bypassed, RxSYNC is always an output pin.0 = Selects the RxSync signal as an output1 = Selects the RxSync signal as an input

TABLE 21: SLIP BUFFER CONTROL REGISTER (SBCR)

HEX ADDRESS: 0xN116

Віт	FUNCTION	Түре	DEFAULT		DESCRIP	TION-OPERATIO	N		
1	SB_ENB(1) SB_ENB(0)	R/w R/W	0	Receive Slip Buffer Mode Select These bits select modes of operation for the receive slip buffer. These two bits also select the direction of RxSERCLK and RxSYNC in base clock rate (2.048MHz). The following table shows the corresponding slip buffer modes as well as the direction of the RxSYNC/RxSERCLK according to the setting of these two bits.					
				SB_ENB [1:0]	RECEIVE SLIP BUFFER MODE SELECT	DIRECTION OF RXSERCLK	DIRECTION OF RXSYNC		
				00/11	Receive Slip Buffer is bypassed	Output	Output		
				01	Slip Buffer Mode	Input Ine	Depends on the setting of SB_SDIR (bit 2 of this register) If SB_SDIR = 0: RxSYNC = Output If SB_SDIR = 1: RxSYNC = Input		
					FIFO Mode, FIFO data latency can be programmed by the FIFO Latency Register' (Address = 0xN117)	Input	Depends on the setting of SB_SDIR (bit 2 of this register) If SB_SDIR = 0: RxSYNC = Output If SB_SDIR = 1: RxSYNC = Input		
			duc	the		al for this partic	input pin is synchronized to ular channel to prevent any		

TABLE 22: FIFO LATENCY REGISTER (FFOLR

Віт		TYPE	DEFAULT	DESCRIPTION-OPERATION
7-5	Reserved		-	Reserved
4-0	Rx Slip Buffer FIFO	R/W	00100	Receive Slip Buffer FIFO Latency[4:0]:
	Latency[4:0]			These bits permit the user to specify the "Receive Data" Latency (in terms of RxSerClk_n clock periods), whenever the Receive Slip Buffer has been configured to operate in the "FIFO" Mode.
				Note: These bits are only active if the Receive Slip Buffer has been configured to operate in the FIFO Mode.





TABLE 23: DMA 0 (WRITE) CONFIGURATION REGISTER (D0WCR)

HEX ADDRESS: 0xN118

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	DMA0 RST	R/W	0	 DMA_0 Reset This bit resets the transmit DMA (Write) channel 0. 0 = Normal operation. 1 = A zero to one transition resets the transmit DMA (Write) channel 0.
6	DMA0 ENB	R/W	0	DMA_0 Enable This bit enables the transmit DMA_0 (Write) interface. After a transmit DMA is enabled, DMA transfers are only requested when the transmit buffer status bits indicate that there is space for a complete message or cell. The DMA write channel is used by the external DMA controller to transfer data from the external memory to the HDLC buffers within the T1 Framer. The DMA Write cycle starts by T1 Framer asserting the DMA Request (REQ0) low', then the external DMA controller should drive the DMA Acknowledge (ACK0) 'low' to indicate that it is ready to start the transfer. The external DMA controller should place new data on the Microprocessor data bus each time the Write Signal is Strobed low if the WR is configured as a Write Strobe. If WR is configured as a direction signal, then the external DMA controller would place new data on the Microprocessor data bus each time the Read Signal (RD) is Strobed low. 0 = Disables the transmit DMA_0 (Write) interface
5	WR TYPE	R/W	orpror	Write Type Select This bit selects the function of the WR signal. 0 = WR functions as a direction signal (indicates whether the current bus cycle is a read or write operation) and RD functions as a data strobe signal. V=WR functions as a write strobe signal
4 - 3	Reserved	3	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Reserved
2	DMA0_CHAN(2)	R/W	0	Channel Select
1	DMA0_CHAN(1)	R/W	0	These three bits select which T1 channel within the XRT86VX38 uses the Transmit DMA_0 (Write) interface.
0	DMA0_CHAN(0)	RING	0	000 = Channel 0 001 = Reserved 001 = Channel 2 011 = Reserved 1xx = Reserved

TABLE 24: DMA 1 (READ) CONFIGURATION REGISTER (D1RCR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-6	Reserved	-	-	Reserved
7	DMA1 RST	R/W	0	 DMA_1 Reset This bit resets the Receive DMA (Read) Channel 1 0 = Normal operation. 1 = A zero to one transition resets the Receive DMA (Read) channel 1.
6	DMA1 ENB	R/W	0	DMA1_ENB This bit enables the Receive DMA_1 (Read) interface. After a receive DMA is enabled, DMA transfers are only requested when the receive cell buffer contains a complete message or cell. The DMA read channel is used by the T4 Framer to transfer data from the HDLC buffers within the T1 Framer to external memory. The DMA Read cycle starts by T1 Framer asserting the DMA Request (REQ1) 'low', then the external DMA controller should drive the DMA Acknowledge (ACK1) 'low' to indicate that it is ready to receive the data. The T1 Framer should place new data on the Microprocessor data bus each time the Read Signal is Strobed low if the RD is configured as a Read Strobe. If RD is configured as a direction signal, then the T1 Framer would place new data on the Microprocessor data bus each time the Write Signal (WR) is Strobed low. 0 = Disables the DMA_1 (Read) interface
5	RD TYPE	R/W	0	READ Type Select This bit selects the function of the \overline{RD} signal. $0 = \overline{RD}$ functions as a Read Strobe signal $1 \in \overline{RD}$ acts as a direction signal (indicates whether the current bus cycle is a read or write operation), and \overline{WR} works as a data strobe.
4 - 3	Reserved	-	XU-XO	Reserved
2	DMA1_CHAN(2)	R/W		Channel Select
1	DMA1_CHAN(1)	R/W	9 0 g	These three bits select which T1 channel within the chip uses the Receive DMA_1 (Read) interface.
0	DMA1_CHAN(0)	R/W	ndat	000 = Channel 0 001 = Reserved 001 = Channel 2 011 = Reserved 1xx = Reserved



HEX ADDRESS: 0xN119

XRT86VX38

N REGISTER (D1RCR)



TABLE 25: INTERRUPT CONTROL REGISTER (ICR)

HEX ADDRESS: 0xN11A

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-3	Reserved	-	-	Reserved
2	INT_WC_RUR	R/W	0	Interrupt Write-to-Clear or Reset-upon-Read Select This bit configures all Interrupt Status bits to be either Reset Upon Read or Write-to-Clear 0= Configures all Interrupt Status bits to be Reset-Upon-Read (RUR). 1= Configures all Interrupt Status bits to be Write-to-Clear (WC).
1	ENBCLR	R/W	0	 Interrupt Enable Auto Clear This bit configures all interrupt enable bits to clear or not clear after reading the interrupt status bit. 0= Configures all Interrupt Enable bits to not cleared after reading the interrupt status bit. The corresponding Interrupt Enable bit will stay 'high' after reading the interrupt status bit. 1= Configures all interrupt Enable bits to clear after reading the interrupt status bit. The corresponding interrupt enable bit will be set to 'low' after reading the interrupt status bit.
0	INTRUP_ENB	R/W	0	Interrupt Enable for Framer_n This bit enables or disables the entire T1 Framer Block for Interrupt Generation. 0 = Disables the T1 framer block for Interrupt Generation 1 = Enables the T1 framer block for Interrupt Generation

This bit General 0=Disal 1= Enable 1



TABLE 26: LAPD SELECT REGISTER (LAPDSR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
[7:5]	Reserved	-	-	Reserved
4	HDLC3en	R/W	1	HDLC Controller 3 Enable This bit is used to enable or disable HDLC Controller 3. By default, the HDLC controller is Enabled, this bit set to "1". If the HDLC con- troller is disabled while transmitting a message, BOS will disrupt the transmission and send all ones, MOS will send the flag sequence. 0 - Disabled 1 - Enabled
3	HDLC2en	R/W	1	HDLC Controller 2 Enable This bit is used to enable or disable HDLC Controller 2. By default, the HDLC controller is Enabled, this bit set to "1". If the HDLC con- troller is disabled while transmitting a message, BOS will disrupt the transmission and send all ones, MOS will send the flag sequence. 0 - Disabled 1 - Enabled
2	HDLC1en	R/W	1	HDLC Controller 1 Enable This bit is used to enable or disable HDLC Controller 1. By default, the HDLC controller is Enabled, this bit set to "1". If the HDLC con- troller is disabled while transmitting a message, BOS will disrupt the transmission and send all ones, MOS will send the flag sequence. 0 - Disabled 1 - Enabled
[1:0]	HDLC Controller Select[1:0]	R/W	uct are	 HDLC Controller Select[1:0]: These bits permit the user to select any of the three (3) HDLC Controllers that he/she will use within this particular channel, as depicted below. 00 & 11 - Selects HDLC Controller # 1 01 - Selects HDLC Controller # 2 10 - Selects HDLC Controller # 3
	4	10 ato	id me	



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 27: CUSTOMER INSTALLATION ALARM GENERATION REGISTER (CIAGR)

HEX ADDRESS: 0xN11C

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
[7:4]	Reserved	-	-	Reserved
[3:2]	CIAG	R/W	00	CI Alarm Transmit (Only in ESF)
				These two bits are used to enable or disable AIS-CI or RAI-CI generation in T1 ESF mode only.
				Alarm Indication Signal-Customer Installation (AIS-CI) and Remote Alarm Indication-Customer Installation (RAI-CI) are intended for use in a network to differentiate between an issue within the network or the Customer Installation (CI).
				AIS-CI AIS-CI is an all ones signal with an embedded signature of 01111100 11111111 (right-to left) which recurs at 386 bit intervals in- the DS-1 signal.
				Remote Alarm Indication - Customer Installation (RAI-CI) is a repeti- tive pattern with a period of 1.08 seconds. It comprises 0.99 sec- onds of RAI message (00000000 11111111 Right-to-left) and a 90 ms of RAI-CI signature (00111110 11111111 Right to left) to form a RAI-CI signal. RAI-CI applies to T1 ESF framing mode only.
				00/11 = Disables RAI-CI or AIS-CI alarms generation
				01 = Enables unframed AIS-CI alarm generation
				10 = Enables RAI-CI alarm generation
[1:0]	CIAD	R/W	00	CI Alarm Detect (Only in ESF) These two bits are used to enable or disable RAI-CI or AIS-CI alarm detection in T1 ESF mode only.
				00/11 = Disables the RAI-CI or AIS-CI alarm detection
			2°	01 = Enables the unframed AIS-CI alarm detection
			0, 0,	10 Enables the RAI-CI alarm detection

The produce are not be the produce are not be and may not be

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 28: PERFORMANCE REPORT CONTROL REGISTER (PRCR)

Віт	FUNCTION	Түре	DEFAULT			DESCRIPTION-OPERATION
7	LBO_ADJ_ENB	R/W	0	T A tc E L P 1 0	his bit is used to djustment featur IS condition, the o one setting low CQC[4:0] bits in r ine Build Out). T oses when an A - Enables the tr - Disables the t	uild Out Auto Adjustment: • enable or disable the transmit line build out auto re. When the transmitter of the device is sending • transmit line build out will automatically be adjust ver if this feature is enabled. (Please refer to the egister 0xNF00 for different settings of Transmit This feature is designed to for power saving pur- IS signal is being transmitted. ansmit line build out auto adjustment feature. ransmit line build out auto adjustment feature. the is only available for T1 short haul applications.
6	RLOS_OUT_ENB	R/W	1	T fc p p 0	ut pins. When th or all conditions. ull "High" during resent on RTIP - Disables the F	enable or disable the Receive LOS (RLOS_n) out- is bit is set "Low", the RLOS_n pin will be tri-stated When this bit is set "High", the RLOS_n pin will a LOS condition and pull "Low" when data is
5	FAR_END	R/W	0	0	AR_END = Near-End ena = Far-End enat	
[4:3]	NPRM	R/W	00 O	0 0 fc	Ge Single NPR	A performance report issued. M performance report issued when a write of 00 is e of 01. ormance report issued every second automatically
2	C/R_Blt	R/W	sheeth	Т р 0	erformance repo - Outgoing C/R	er to control the value of C/R bit within an outgoing ort. bit will be set to'0' bit will be set to'1'
[1:0]	APCR	R/W	00	T st A b	hese bits autom tatus so that it ca utomatic perforr its transition fror	atically generates a summary report of the PMON an be inserted into an out going LAPD message. nance report can be generated every time these n 'b00' to 'b01'or automatically every one second. describes the different APCR[1:0] bits settings.
					APCR[1:0]	SOURCE FOR RECEIVE D/E TIMESLOTS
					00/11	No performance report issued
					01	Single performance report is issued when these bits transitions from 'b00' to b'01'.
					10	Automatically issues a performance report every one second





TABLE 29: GAPPED CLOCK CONTROL REGISTER (GCCR)

HEX ADDRESS: 0xN11E

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	FrOutclk	R/W	0	Framer Output Clock Reference This bit is used to enable or disable high-speed T1 rate on the T1OSCCLK and the E1OSCCLK output pins. By default, the output clock reference on T1OSCCLK and E1OSCCLK output pins are set to 1.544MHz/2.048MHz respectively. By setting this bit to a "1", the output clock reference on the T1OSCLK and the E1OSCCLK are changed to 49.408MHz/ 65.536MHz respectively. 0 = Disables high-speed rate to be output on the T1OSCCLK and E1OSCCLK output pins. 1 = Enables high-speed rate to be output on the T1OSCCLK and E1OSCCLK output pins.
[6:2]	Reserved	-	-	Reserved
1	TxGCCR	R/W	orod	Transmit Gapped Clock Interface This bit is used to enable or disable the transmit gapped clock inter- face operating at 2.048Mbit/s in DS-1 mode. In this application, 63 gaps (missing data) are inserted so that the overall bit rate is reduced to 1.544Mbit/s. If the transmit Gapped Clock Interface is enabled: TxMSYNC is used as the 2.048MHz Gapped Clock Input. TXSER is used as the 2.048MHz Gapped Data Input. TXSERCLK must be a 1.544MHz clock input. 0 = Disables the transmit gapped clock interface. 1 = Enables the transmit gapped clock interface.
0	RxGCCR	R/W	or are the	Receive Gapped Clock Interface This bit is used to enable or disable the receive gapped clock inter- face operating at 2.048Mbit/s in DS-1 mode. In this application, 63 gaps (missing data) are extracted so that the overall bit rate is reduced to 1.544Mbit/s. If the Receive Gapped Clock Interface is enabled: RxSERCLK should be configured as a Gapped clock input at 2.048MHz so that a 2.048MHz Gapped Clock can be applied to the Framer block. RxSER is used as the 2.048MHz Gapped Data Output. The position of the gaps will be determined by the gaps placed on RxSERCLK by the user. 0 = Disables the Receive Gapped Clock Interface 1 = Enables the Receive Gapped Clock Interface

TABLE 30: TRANSMIT INTERFACE CONTROL REGISTER (TICR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxSyncFrD	R/W	0	 Tx Synchronous fraction data interface This bit selects whether TxCHCLK or TxSERCLK will be used for fractional data input if fractional interface is enabled. If TxSERCLK is selected to clock in fractional data input, TxCHCLK will be used as an enable signal 0 = Fractional data Is clocked into the chip using TxChCLK if fractional data interface is enabled. 1 = Fractional data is clocked into the chip using TxSerClk. TxChClk is used as fractional data enable. Note: The Time Slot Identifier Pins (TxChn[4:0]) still indicates the time slot number if fractional data interface is not enabled. Fractional Interface is enabled by setting TxFr1544 to 1
6	Reserved	-	-	Reserved
5	TxPLClkEnb/ TxSync Is Low	R/W		 Transmit payload clock enable/TxSYNC is Active Low This exact function of this bit depends on whether the T1 framer is configured to operate in base rate or high speed modes of operation. If the T1 framer is configured to operate in base rate - TxPayload Clock: This bit configures the framer to output a regular clock or a payload clock on the transmit serial clock (TxSERCLK) pin when TxSERCLK is configured to be an output. 0 = Configures the framer to output a 1.544MHz clock on the TxSERCLK pin when TxSERCLK is configured as an output. 1 = Configures the framer to output a 1.544MHz clock on the TxSERCLK pin when TxSERCLK is configured bits. There will be gaps on the TxSERCLK output pin when transmitting overhead bits. If the T1 framer is configured to operate in high-speed or multiplexed modes - TxSYNC is Active Low: This bit is used to select whether the transmit frame boundary (TxSYNC) is active low or active high. 0 = Selects TxSync to be active "Low"
		~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	6330	mo

# **XRT86VX38**



E



#### TABLE 30: TRANSMIT INTERFACE CONTROL REGISTER (TICR)

HEX ADDRESS:0xN120

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4	TxFr1544	R/W	0	Fractional/Signaling Interface Enabled This bit is used to enable or disable the transmit fractional data interface, sig- naling input, as well as the 32MHz transmit clock and the transmit overhead Signal output.
				0 = Configures the 5 time slot identifier pins (TxChn[4:0]) to output the channel number as usual.
				1 = Configures the 5 time slot identifier pins (TxChn[4:0]) to function as the fol- lowing:
				TxChn[0] becomes the Transmit Serial SIgnaling pin (TxSIG_n) for signaling inputs. Signaling data can now be input from the TxSIG pin if configured appropriately.
				TxChn[1] becomes the Transmit Fractional Data Input pin (TxFrTD_n) for frac- tional data input. Fractional data can now be input from the TxFrTD pin if con- figured appropriately.
				TxChn[2] becomes the 32 MHz transmit clock output TxChn[3] becomes the Transmit Overhead Signal which pulses high on the first bit of each multi-frame.
				<b>Note:</b> This bit has no effect in the high speed or multiplexed modes of operation. In high speed or multiplexed modes, TxCHN[0] functions as TxSIGn for signaling input.
3	TxICLKINV	R/W	0	<ul> <li>Transmit Clock Inversion (Backplane Interface)</li> <li>This bit selects whether data transition will happen on the rising or falling edge of the transmit clock.</li> <li>0 = Selects data transition to happen on the rising edge of the transmit clocks.</li> <li>1 = Selects data transition to happen on the falling edge of the transmit clocks.</li> <li>Note: This feature is only available for base rate configuration (i.e. non-</li> </ul>
		-		Chighspeed, and non-multiplexed modes).
2	TxMUXEN	R/W	oducet sheet	Multiplexed Mode Enable This bit enables or disables the multiplexed mode. When multiplexed mode is enable, multiplexed data of four channels at 12.352 or 16.384MHz are demul- tiplexed inside the transmit framer and sent to 2 channels on the line side. The backplane speed will be running at either 12.352 or 16.384MHz depending on the multiplexed mode selected by TxIMODE[1:0] of this register. 0 = Disables the multiplexed mode.
		1.8		1 = Enables the multiplexed mode.
			3	

FUNCTION

TxIMODE[1:0]

Віт

1-0

### 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 30: TRANSMIT INTERFACE CONTROL REGISTER (TICR)

DEFAULT

00

Түре

R/W

		This bit determines two bits depends o	s the transmit interface speed. The exact function of these on whether Multiplexed mode is enabled or disabled. e 32 shows the functions of these two bits for non-multi- lexed modes.:
   		TABLE 31: TRAM	NSMIT INTERFACE SPEED WHEN MULTIPLEXED MODE IS DISABLED (TXMUXEN = 0)
		TxIMODE[1:0]	TRANSMIT INTERFACE SPEED
		00	<b>1.544Mbit/s Base Rate Mode:</b> Transmit Backplane interface signals include: TxSERCLK is an input or output clock at 1.544MHz TxMSYNC is the superframe boundary at 3ms (ESF) or 1.5ms (SF) TxSYNC is the single frame boundary at 125 us TxSER is the base-rate data input
		01	2.048Mbit/s (High-Speed MVIP Mode): Transmit backplane interface signals include: TxSERCLK is an input clock at 1.544MHz TxMSYNC is the high speed input clock at 2.048MHz to input high-speed data TxSYNC can be configured as a single frame or super- frame boundary, depending on the setting of bit 5 of reg- ister 0xN109 TxSER is the high-speed data input
~*	e produce datand		<ul> <li>4.096Mbit/s High-Speed Mode: Transmit Backplane interface signals include: TxSERCLK is an input clock at 1.544MHz</li> <li>TxMSYNC will become the high speed input clock at 4.096MHz to input high-speed data</li> <li>TxSYNC can be configured as a single frame or super- frame boundary, depending on the setting of bit 5 of reg- ister 0xN109</li> <li>TxSER is the high-speed data input</li> </ul>
		11	8.192Mbit/s High-Speed Mode: Transmit Backplane interface signals include: TxSERCLK is an input clock at 1.544MHz

Transmit Interface Mode selection

REV. 1.0.4

HEX ADDRESS:0xN120

**DESCRIPTION-OPERATION** 

TxMSYNC will become the high speed input clock at

TxSYNC can be configured as a single frame or superframe boundary, depending on the setting of bit 5 of reg-

8.192MHz to input high-speed data

TxSER is the high-speed data input

ister 0xN109





## TABLE 30: TRANSMIT INTERFACE CONTROL REGISTER (TICR)

HEX ADDRESS:0xN120

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION	
1-0	TxIMODE[1:0]	R/W	00	(Continued) TABLE 32: TRANSMIT INTERFACE SPEED WHEN MULTIPLEXED MODE IS ENABLED (TXMUXEN = 1)		
				TxIMODE[1:0]	TRANSMIT INTERFACE SPEED	
				00	<b>Bit-Multiplexed Mode at 12.352MHz is Enabled:</b> Transmit backplane interface is taking four-channel mul- tiplexed data at a rate of 12.352Mbit/s from channel 0 and bit-demultiplexing the serial data into 4 channels and output to the line on channels 0 through 3. The TxSYNC signal pulses (High" during the framing bit of each DS-1 frame.	
				01	Reserved	
			uct le	10 10 10 10 10 10 10 10 10 10 10 10 10 1	<ul> <li>HMVIP High-Speed Multiplexed Mode Enabled:</li> <li>Transmit backplane interface is taking four-channel multiplexed data at a rate of 16.384Mbit/s from channel 0 and byte-demultiplexing the serial data into 4 channels and output on channels 0 through 3. The TxSYNC signal pulses "High" during the last two bits of the previous DS-1 frame and the first two bits of the current DS-1 frame.</li> <li>H.100 High-Speed Multiplexed Mode Enabled:</li> <li>Transmit backplane interface is taking four-channel multiplexed data at a rate of 16.384Mbit/s from channel 0 and byte-demultiplexing the serial data into 4 channels and output to the line on channels 0 through 3. The TxSYNC signal pulses "High" during the last bit of the previous DS-1 frame.</li> </ul>	
		the f	and ma	Transmit backplar TxSERCLK is an ir TxMSYNC will bec input high-speed m TxSYNC can be co depending on the s TxSER is the high- Note: In high spee	ne interface signals include: hput clock at 1.544MHz ome the highspeed input clock at 12.352 or 16.384MHz to hultiplexed data on the back-plane interface onfigured as a single frame or super-frame boundary, setting of bit 5 of register 0xN109	

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

#### TABLE 33: BERT CONTROL & STATUS REGISTER (BERTCSR0)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-4	Reserved	-	-	These bits are n	ot used
3	BERT_Switch	R/W	0	BERT Switch	
				This bit enables XRT86VX38 dev	or disables the BERT switch function within the vice.
					BERT switch function, BERT functionality will be on the receive and transmit framer. T1 Receive
				framer will gener	rate the BERT pattern and insert it onto the receive
				transmit backpla	ace, and T1 Transmit Framer will be monitoring the ne interface for BERT pattern and declare BERT
					as locked onto the input pattern. s disabled, T1 Transmit framer will generate the
				BERT pattern to	the line interface and the receive framer will be
				BERT has locke	ne for BERT pattern and declare BERT LOCK if d onto the input pattern.
					BERT Switch Feature.
					BERT Switch Feature.
2	BER[1]	R/W	0	Bit Error Rate This bit is used t	onset BERT bit error at the rates presented at the
1	BER[0]	R/W	0	table below. The	exact function of this bit depends on whether BERT
					s enabled or not. (bit 3 within this register). ch function is disabled, bit error will be inserted by
				the T1 transmit f	ramer out to the line interface if this bit is enabled.
					ch function is enabled, bit error will be inserted by amer out to the receive backplane interface if this
			3	bit is enabled.	
			a v	OBER[1:0]	BIT ERROR RATE
			ict are	00/11	Disable Bit Error insertion to the transmit output or receive backplane interface
		ر م	e ,	01	Bit Error is inserted to the transmit output or
		or of	d may no		receive backplane interface at a rate of 1/1000 (one out of one Thousand)
		e jo		10	Bit Error is inserted to the transmit output or
		80 0	Ò		receive backplane interface at a rate of 1/ 1,000,000 (one out of one million)
		S			
0	UnFramedBERT	R/W	0	Unframed BER	
					or disables unframed BERT pattern generation (i.e. framing bits are all BERT data). The exact function
					ds on whether BERT switch function is enabled or
					unction is disabled, T1 Transmit Framer will gener-
					BERT pattern to the line side if this bit is enabled.
				an unframed BE	unction is enabled, T1 Receive Framer will generate RT pattern to the receive backplane interface if this
				bit is enabled. 0 - Disables an i	unframed BERT pattern generation
					Inframed BERT pattern generation





### TABLE 34: RECEIVE INTERFACE CONTROL REGISTER (RICR)

HEX ADDRESS: 0xN122

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RxSyncFrD	R/W	0	Reserved
6	Reserved	-	-	Reserved
5	RxPLClkEnb/ RxSync is low	R/W	0	<ul> <li>Receive payload clock enable/RxSYNC is Active Low</li> <li>This exact function of this bit depends on whether the T1 framer is configured to operate in base rate or high speed modes of operation.</li> <li>If the T1 framer is configured to operate in base rate - TxPayload Clock:</li> <li>This bit configures the T1 framer to either output a regular clock or a payload clock on the receive serial clock (RxSERCLK) pin when RxSERCLK is configured to be an output.</li> <li>0 = Configures the framer to output a 1.544MHz clock on the RxSERCLK pin when RxSERCLK is configured as an output.</li> <li>1 = Configures the framer to output a 1.544MHz clock on the RxSERCLK pin when receiving payload bits. There will be gaps on the RxSERCLK output pin when receiving overhead bits.</li> <li>If the T1 framer is configured to operate in high-speed or multiplexed modes - RxSYNC is Active Low:</li> <li>This bit is used to select whether the receive frame boundary (RxSYNC) is active low or active high.</li> <li>0 = Selects RxSync to be active "High"</li> </ul>
4	RxFr1544	R/W		<ul> <li>1 = Selects RxSync to be active "Low"</li> <li>Receive Fractional/Signaling Interface Enabled</li> <li>This bit is used to enable or disable the receive signaling output and the received recovered clock output. This bit only functions when the device is configured in non-high speed or multiplexed modes of operations. If the device is configured in base rate:</li> <li>0 = Disabled</li> <li>1 = Enabled</li> <li>RxSIG_n for signaling outputs. Signaling data can now be output to the RxSIG pin it configured appropriately.</li> <li>RxSCLK outputs the received recovered clock signal (1.544MHz for T1)</li> <li>Note: This bit has no effect in the high speed or multiplexed modes of operation. In high-speed or multiplexed modes, RxSIG outputs the Signaling data and RxSCLK outputs the recovered clock.</li> </ul>
3	RxICLKINV	N/A	<b>0</b>	<ul> <li>Receive Clock Inversion (Backplane Interface)</li> <li>This bit selects whether data transition will happen on the rising or falling edge of the receive clock.</li> <li>0 = Selects data transition to happen on the rising edge of the receive clocks.</li> <li>1 = Selects data transition to happen on the falling edge of the receive clocks.</li> <li>Note: This feature is only available for base rate configuration (i.e. non-highspeed, or non-multiplexed modes).</li> </ul>

#### TABLE 34: RECEIVE INTERFACE CONTROL REGISTER (RICR)

HEX ADDRESS: 0xN122

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	RxMUXEN	R/W		<b>Receive Multiplexed Mode Enable</b> This bit enables or disables the multiplexed mode on the receive side. When multiplexed mode is enable, data of four channels from the line side are multi- plexed onto one serial stream inside the receive framer and output to the back-plane interface on RxSER. The backplane speed will become either 12.352MHz or 16.384MHz once multiplexed mode is enabled. 0 = Disables the multiplexed mode. 1 = Enables the multiplexed mode.

The produces are be ordered to be and the produces of the prod





### TABLE 34: RECEIVE INTERFACE CONTROL REGISTER (RICR)

HEX ADDRESS: 0xN122

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
1-0	RxIMODE[1:0]	R/W	00	This bit determines tion of these two b enabled or disable bits for non-multipl	<ul> <li>Mode Selection[1:0]</li> <li>s the receive backplane interface speed. The exact funcits depends on whether Receive Multiplexed mode is</li> <li>d. Table 35 and Table 36 shows the functions of these two exed and multiplexed modes.:</li> <li>EIVE INTERFACE SPEED WHEN MULTIPLEXED MODE IS DISABLED (TXMUXEN = 0)</li> </ul>
				RxIMODE[1:0]	RECEIVE INTERFACE SPEED
				00 01 01 01 01 01 01 01 01 01 01 01 01 0	<ul> <li>1.544Mbit/s Base Rate Mode</li> <li>Receive backplane interface signals include:</li> <li>RxSERCLK is an input or output clock at 1.544MHz</li> <li>RxSYNC is an input or output signal which indicates the receive singe frame boundary</li> <li>RxSER is the base-rate data output</li> <li>2.048Mbit/s High-Speed MVIP Mode:</li> <li>Receive backplane interface signals include:</li> <li>RxSERCLK is an input clock at 2.048MHz</li> <li>RxSYNC is an input signal which indicates the receive singe frame boundary</li> <li>RxSERCLK is an input clock at 2.048MHz</li> <li>RxSERCLK is an input signal which indicates the receive singe frame boundary</li> <li>RxSER is the high-speed data output</li> <li>4.096Mbit/s High-Speed Mode:</li> <li>RxSERCLK is an input clock at 4.096MHz</li> <li>RxSERCLK is an input signal which indicates the receive singe frame boundary</li> <li>RxSERCLK is an input clock at 4.096MHz</li> <li>RxSYNC is an input signal which indicates the receive singe frame boundary</li> <li>RxSERCLK is an input clock at 4.096MHz</li> <li>RxSYNC is an input signal which indicates the receive singe frame boundary</li> <li>RxSER is the high-speed data output</li> </ul>
		The	and ma	producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer producer pro	8.192Mbit/s High-Speed Mode: Receive backplane interface signals include: RxSERCLK is an input clock at 8.192MHz RxSYNC is an input signal which indicates the receive singe frame boundary RxSER is the high-speed data output

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 34: RECEIVE INTERFACE CONTROL REGISTER (RICR)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION	
1-0	RxIMODE[1:0]	R/W	00	(Continued):( TABLE 36: RECEIVE INTERFACE SPEED WHEN MULTIPLEXED MODE IS ENABLED (TXMUXEN = 1)		
				TxIMODE[1:0]	TRANSMIT INTERFACE SPEED	
				00	<b>Bit-Multiplexed Mode at 12.352MHz is Enabled:</b> Receive backplane interface is taking data from the four LIU input channels 0 through 3 and bit-multiplexing the four-channel data into one 12.352MHz serial stream and output on channel 0 of the Receive Serial Output (RxSER). The RxSYNC signal pulses "High" during the framing bit of each DS-1 frame.	
				01	Reserved	
				10 1100000	<ul> <li>HMVIP High-Speed Multiplexed Mode Enabled:</li> <li>Receive backplane interface is taking data from the four LIU input channels 0 through 3 and byte-multiplexing the four-channel data into one 16.384MHz serial stream and output to channel 0 of the Receive Serial Output (RxSER). The RxSYNC signal pulses "High" during the last two bits of the previous T1 frame and the first two bits of the current T1 frame.</li> <li>H.100 High-Speed Multiplexed Mode Enabled:</li> </ul>	
		~*	le produces	11 du no 11 du no 10 protorio 10 protori 10 protorio 10 protorio 10 protorio 10 protorio 10 protorio	Receive backplane interface is taking data from the four QU input channels 0 through 3 and byte-multiplexing the four-channel data into one 16.384MHz serial stream and output to channel 0 of the Receive Serial Output (RxSER). The RxSYNC signal pulses "High" during the last bit of the previous T1 frame and the first bit of the current T1 frame.	
			5	RxSERCLK is an in the selected multip RxSYNC is an inp The length of RxS RxSER is the high <b>Note:</b> In high spe	ne interface signals include: nput clock at either 12.352MHz or16.384MHz depending on blexed mode. ut signal which indicates the multiplexed frame boundary. YNC depends on the multiplexed mode selected. -speed data output eed mode, receive data is clocked out on the rising edge of z or 16MHz clock edge.	





### TABLE 37: BERT CONTROL & STATUS REGISTER (BERTCSR1)

HEX ADDRESS: 0xN123

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	PRBSTyp	R/W	0	<b>PRBS Pattern Type</b> This bit selects the type of PRBS pattern that the T1 Transmit/ Receive framer will generate or detect. PRBS 15 (X ¹⁵ + X ¹⁴ +1) Polynomial or QRTS (Quasi-Random Test Signal) Pattern can be generated by the transmit or receive framer depending on whether
				PRBS switch function is enabled or not (bit 3 in register 0xN121). If the PRBS Switch function is disabled, T1 transmit framer will gen- erate either PRBS 15 or QRTS pattern and output to the line inter- face. PRBS 15 or QRTS pattern depends on the setting of this bit. If the PRBS Switch function is enabled, T1 receive framer will gener- ate either PRBS 15 or QRTS pattern and output to the receive back plane interface. PRBS 15 or QRTS pattern depends on the setting of this bit.
				0 = Enables the PRBS 15 ( $X^{16}$ + $X^{14}$ +1) Polynomial generation. 1 = Enables the ORTS (Quasi-Random Test Signal) pattern genera- tion.
6	ERRORIns	R/W	o prodi	<b>Error Insertion</b> This bit is used to insert a single BERT error to the transmit or receive output depending on whether BERT switch function is enabled or not. (bit 3 in register 0xN121). If the BERT Switch function is disabled, T1 transmit framer will insert a single BERT error and output to the line interface if this bit is enabled. If the BERT Switch function is enabled, T1 receive framer will insert a single BERT error and output to the receive back plane interface if this bit is enabled. If the BERT switch function will cause one output bit inverted in the BERT stream. <b>Note:</b> This bit only works if BERT generation is enabled.
5	DATAInv	oR/We she and h	at	<ul> <li>BERT Data Invert:</li> <li>This bit inverts the Transmit BERT output data and the Receive BERT input data. The exact function of this bit depends on whether BERT switch function is enabled or not. (bit 3 in register 0xN121).</li> <li>If the BERT Switch function is disabled and if this bit is enabled, T1 transmit framer will invert the BERT data before it outputs to the line interface, and the T1 receive framer will invert the incoming BERT data before it receives it.</li> <li>If the BERT Switch function and this bit are both enabled, T1 receive framer will invert the BERT data before it outputs to the line inter- face, and the T1 transmit framer will invert the incoming BERT data before it receives it.</li> <li>O - Transmit and Receive Framer will NOT invert the Transmit and Receive BERT data.</li> <li>1 - Transmit and Receive Framer will invert the Transmit and Receive BERT data.</li> </ul>

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 37: BERT CONTROL & STATUS REGISTER (BERTCSR1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4	RxBERTLock	RO	0	Lock Status This bit indicates whether or not the Receive or Transmit BERT lock has obtained. The exact function of this bit depends on whether BERT switch function is enabled or not. (bit 3 in register 0xN121). If the BERT Switch function is disabled, T1 receive framer will declare LOCK if BERT has locked onto the input pattern. If the BERT Switch function is disabled, T1 transmit framer will declare LOCK if BERT has locked onto the input pattern. 0 = Indicates the Receive BERT has not Locked onto the input pat- terns. 1 = Indicates the Receive BERT has locked onto the input patterns.
3	RxBERTEnb	R/W	0	<ul> <li>Receive BERT Detection/Generation Enable</li> <li>This bit enables or disables the receive BERT pattern detection or generation. The exact function of this bit depends on whether BERT switch function is enabled or not. (bit 3 in register 0xN121).</li> <li>If the BERT switch function is disabled and if this bit is enabled, T1 Receive Framer will detect the incoming BERT pattern from the line side and declare BERT lock if incoming data locks onto the BERT pattern.</li> <li>If the BERT switch function and this bit are both enabled, T1 Transmit Framer will detect the incoming BERT pattern from the transmit backplane interface and declare BERT lock if incoming data locks onto the BERT pattern.</li> <li>0 = Disables the Receive BERT pattern detection.</li> <li>1 = Enables the Receive BERT pattern detection.</li> </ul>
2	TxBERTEnb	R/W	o p uct are heet nr	<ul> <li>Transmit BERT Generation Enable</li> <li>This bit enables or disables the Transmit BERT pattern generator.</li> <li>The exact function of this bit depends on whether BERT switch function is enabled or not. (bit 3 in register 0xN121).</li> <li>If BERT switch function is disabled, T1 Transmit Framer will generate the BERT pattern to the line side if this bit is enabled.</li> <li>If BERT switch function is enabled, T1 Receive Framer will generate the BERT pattern to the receive backplane interface if this bit is enabled.</li> <li>0 = Disables the Transmit BERT pattern generator.</li> <li>1 = Enables the Transmit BERT pattern generator.</li> </ul>
1	RxBypass	R/W	0	<b>Receive Framer Bypass</b> This bit enables or disables the Receive T1 Framer bypass. 0 = Disables the Receive T1 framer Bypass. 1 = Enables the Receive T1 Framer Bypass.
0	TxBypass	R/W	0	<b>Transmit Framer Bypass</b> This bit enables or disables the Transmit T1 Framer bypass. 0 = Disables the Transmit T1 framer Bypass. 1 = Enables the Transmit T1 Framer Bypass.





#### TABLE 38: LOOPBACK CODE CONTROL REGISTER - CODE 0 (LCCR0)

HEX ADDRESS: 0xN124

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length ne receive loopback code activation length. s supported by the XRT86VX38 as presented
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11 of 2	Selects 7-bit receive loopback code activa- tion Sequence
				erd	
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th There are four length in the table below	Code Deactivation Length ne receive loopback code deactivation length. s supported by the XRT86VX38 as presented
			or pho	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
		. JCt	are p	00	Selects 4-bit receive loopback code deactivation Sequence
		odre	at not	01	Selects 5-bit receive loopback code deactivation Sequence
	the	12,1	or proc	10	Selects 6-bit receive loopback code deactivation Sequence
	. 9.	3110		11	Selects 7-bit receive loopback code deactivation Sequence

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 38: LOOPBACK CODE CONTROL REGISTER - CODE 0 (LCCR0)

Віт	FUNCTION	Түре	DEFAULT	C	DESCRIPTION-OPERATION
3-2	TXLBCLEN[1:0]	R/W	00		Code Length nsmit loopback code length. There are four he XRT86VX38 as presented in the table
				TXLBCLEN[1:0]	TRANSMIT LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit transmit loopback code Sequence
				01	Selects 5-bit transmit loopback code Sequence
				10	Selects 6 bit transmit loopback code Sequence
				11 .010	Selects 7-bit transmit loopback code Sequence
1	FRAMED	R/W	0	in the transmit path. 0 = Selects an "Unfram	ode amed or unframed loopback code generation ned" loopback code for transmission. loopback code for transmission.
0	AUTOENB	R/W	uct or providence of the set of t	cally upon detecting th the Receive Loopback tion doopback code is e The XRT86VX38 will ca loopback code deactive Code Deactivation regi code is enabled. (Regi 0 = Disables automatic activation code. 1 = Enables automatic activation code. Note: This feature is	XRT86VX38 in remote loopback automati- e loopback code activation code specified in Code Activation Register if Receive activa- enabled (Register address:0xN126). ancel the remote loopback upon detecting the ation code specified in the Receive Loopback ister if the Receive deactivation loopback





#### TABLE 39: TRANSMIT LOOPBACK CODER REGISTER (TLCR)

HEX ADDRESS: 0xN125

HEX ADDRESS: 0xN126

**XRT86VX38** 

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	TXLBC[6:0]	R/W	1010101	<b>Transmit Loopback Code</b> These seven bits determine the transmit loopback code. The MSB of the transmit loopback code is loaded first for transmission.
0	TXLBCENB	R/W	0	<ul> <li>Transmit Loopback Code Enable</li> <li>This bit enables loopback code generation in the transmit path.</li> <li>Transmit loopback code is generated by writing the transmit loopback code in this register and enabling it using this bit. The length and the format of the transmit loopback code is determined by the Loopback Code Control Register.</li> <li>0 = Disables the transmit loopback code generation.</li> <li>1 = Enables the transmit loopback code generation.</li> </ul>

# TABLE 40: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 0 (RLACR0)

Віт	FUNCTION	Түре	DEFAULT	Description-Operation
7-1	RXLBAC[6:0]	R/W	1010101	<b>Receive activation loopback code</b> These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	or produce	Receive activation loopback code enable This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit. The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

# TABLE 41: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER - CODE 0 (RLDCR0) HEX Address: 0xN127

Віт	FUNCTION	Туре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBDC[6:0]	R/W	1010101	<b>Receive deactivation loopback code</b> These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	0	<ul> <li>Receive deactivation loopback code enable</li> <li>This bit enables the receive loopback deactivation code detection.</li> <li>Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit.</li> <li>The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register.</li> <li>0 = Disables the receive loopback code deactivation detection.</li> <li>1 = Enables the receive loopback code deactivation detection.</li> </ul>

60

# XRT86VX38 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

# TABLE 42: RECEIVE LOOPCODE DETECTION SWITCH (RLCDS)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RxLCDetSwitch7	R/W	7	Receive LoopCode Switch 7 If receive loopcode 7 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)
6	RxLCDetSwitch6	R/W	6	Receive LoopCode Switch 6 If receive loopcode 6 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)
5	RxLCDetSwitch5	R/W	5	Receive LoopCode Switch 5 If receive loopcode 5 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TXSER)
4	RxLCDetSwitch4	R/W	4	Receive LoopCode Switch 4 If receive loopcode 4 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TXSER)
3	RxLCDetSwitch3	R/W		Receive LoopCode Switch 3 If receive loopcode 3 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)
2	RxLCDetSwitch2	RAVO	0 112	Receive LoopCode Switch 2 If receive loopcode 2 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)





diffed

#### TABLE 42: RECEIVE LOOPCODE DETECTION SWITCH (RLCDS)

HEX ADDRESS: 0xN128

**XRT86VX38** 

HEX ADDRESS: 0xN129

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	RxLCDetSwitch1	R/W	0	Receive LoopCode Switch 1 If receive loopcode 1 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)
0	RxLCDetSwitch0	R/W	0	Receive LoopCode Switch 0 If receive loopcode 0 is enabled, this bit will determine which input the loopcode will be detected on. By default, the loopcode is search- ing for the line side (RTIP/RRING). 0 - Line Side (RTIP/RRING) 1 - System Side (TxSER)

### TABLE 43: DEFECT DETECTION ENABLE REGISTER (DDER)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	DEFDET	R/W		For defect detection per ANSI T1.231-1997 and T1.403-1999, user should leave this bit set to '1'.

the base in the ba

### 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



### TABLE 44: LOOPBACK CODE CONTROL REGISTER - CODE 1 (LCCR1)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length ne receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					n ^o
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	ode Deactivation Length receive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0000	Selects 4-bit receive loopback code deactivation Sequence
		8	uct are	<b>0</b> 1	Selects 5-bit receive loopback code deacti- vation Sequence
		prov	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	2010	uct or P	11	Selects 7-bit receive loopback code deacti- vation Sequence
		6			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	Framed Loopback C This bit selects either in the transmit path.	Code framed or unframed loopback code generation
					med" loopback code for transmission.
					" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

XRT86VX38

TABLE 45: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 1 (RLACR1) HEX ADDRESS: 0xN12B

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	Receive activation loopback code These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	Receive activation loopback code enable This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

TABLE 46: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER - CODE (RLDCR1) HEX ADDRESS: 0xN12C

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or prod	 Receive deactivation loopback code enable This bit enables the receive loopback deactivation code detection. Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit. The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code deactivation detection. 1 = Enables the receive loopback code deactivation detection.
	the	atandr	101	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 47: LOOPBACK CODE CONTROL REGISTER - CODE 2 (LCCR2)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length ne receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					(N ¹
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	ode Deactivation Length receive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0000	Selects 4-bit receive loopback code deactivation Sequence
		8	uct are	0 1	Selects 5-bit receive loopback code deacti- vation Sequence
		proc	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	20	uct or p neet are d may no	11	Selects 7-bit receive loopback code deacti- vation Sequence
		<b>Š</b>			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	in the transmit path.	framed or unframed loopback code generation
					med" loopback code for transmission.
		<b>D</b> ***			" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

**XRT86VX38** 

#### TABLE 48: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 2 (RLACR2) HEX ADDRESS: 0xN12E

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	<b>Receive activation loopback code</b> These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	<b>Receive activation loopback code enable</b> This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

### TABLE 49: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER - CODE 2 (RLDCR2) HEX ADDRESS: 0xN12F

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or prod	<ul> <li>Receive deactivation loopback code enable</li> <li>This bit enables the receive loopback deactivation code detection.</li> <li>Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit.</li> <li>The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register.</li> <li>0 = Disables the receive loopback code deactivation detection.</li> <li>1 = Enables the receive loopback code deactivation detection.</li> </ul>
	the	atandr	131	

# 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 50: TRANSMIT LOOPCODE GENERATION SWITCH (TLCGS)

HEX ADDRESS: 0xN140

DDRESS: 0xN141

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	Reserved	R/W	0	Reserved
0	TxLCGenSwitch	R/W	0	Transmit LoopCode Switch If the transmit loopcode is enabled, this bit will determine which direction the loopcode will be transmitted. By default, the loopcode is generated on the line side (TTIP/TRING). 0 - Line Side (TTIP/TRING) 1 - System Side (RxSER)

TABLE 51: LOOPCODE TIMER SELECT (LCTS)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-3	Reserved	R/W	0	Reserved
2-0	LCTimer	R/W		Loopcode Timer Select These bits are used to select the timer value for declaring a valid loopcode detection for both Activation and De-Activation. By default, the timer is set to 5 seconds. 000 - De Not Use 001 - Do Not Use 010 - 1 Second 011 - 2 Seconds 100 - 3 Seconds 101 - 4 Seconds 110 - 5 Seconds 111 - 6 Seconds

# TABLE 52: TRANSMIT SPRM AND NPRM CONTROL REGISTER (TSPRMCR)

Віт	FUNCTION	TYPE	DEFAULT	DESCRIPTION-OPERATION
7	FC_Bit	R/W	0	<b>NPRM FC Bit</b> This bit is used to set the value of the FC bit field within the NPRM report.
6	PA_Bit	R/W	0	<b>NPRM PA Bit</b> This bit is used to set the value of the PA bit field within the NPRM report.
5	U1_BIT	R/W	0	<b>U1 Bit</b> This bit provides the contents of the U1 bit within the outgoing SPRM message.



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 52: TRANSMIT SPRM AND NPRM CONTROL REGISTER (TSPRMCR)

HEX ADDRESS: 0xN142

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4	U2_BIT	R/W	0	<b>U2 Bit</b> This bit provides the contents of the U2 bit within the outgoing SPRM message.
3-0	R_BIT	R/W	0000	<b>R Bit</b> This bit provides the contents of the R bit within the outgoing SPRM message.

The produce are not be of the of the

# 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	SLC-96 Data Link Enable	R/W	0	<ul> <li>SLC®96 DataLink Enable</li> <li>This bit permits the user to configure the channel to support the transmission and reception of the "SLC-96 type" of data-link message.</li> <li>0 - Channel does not support the transmission and reception of "SLC-96" type of data-link messages. Regular SF framing bits will be transmitted.</li> <li>1 - Channel supports the transmission and reception of the "SLC-96" type of data-link messages.</li> </ul>
				<b>Note:</b> This bit is only active if the channel has been configured to operate in either the SLC 96 of the ESF Framing formats.
6	MOS ABORT Disable	R/W	0	MOS ABORT Disable: This bit permits the user to either enable or disable the "Automatic MOS ABORT" feature within Transmit HDLC Controller # 2. If the user enables this feature, then Transmit HDLC Controller block # 2 will automatically transmit the ABORT Sequence (e.g., a zero fol- lowed by a string of 7 consecutive "1s") whenever it abruptly transi- tions from transmitting a MOS type of message, to transmitting a BOS type of message. If the user disables this feature, then the Transmit HDLC Controller Block # 2 will NOT transmit the ABORT sequence, whenever it abruptly transitions from transmitting a MOS-type of message to transmitting a BOS-type of message. 0 - Enables the "Automatic MOS Abort" feature 1- Disables the "Automatic MOS Abort" feature
5	Rx_FCS_DIS	R/W	uct are	Receive Frame Check Sequence (FCS) Verification Enable/Dis- able This bit permits the user to configure the Receive HDLC Controller Block # 2 to compute and verify the FCS value within each incoming APD message frame. 0 - Enables FCS Verification 1 - Disables FCS Verification
4	AutoRx	R/WO	610	Auto Receive LAPD Message This bit configures the Receive HDLC Controller Block #2 to discard any incoming BOS or LAPD Message frame that exactly match which is currently stored in the Receive HDLC1 buffer. 0 = Disables this "AUTO DISCARD" feature 1 = Enables this "AUTO DISCARD" feature.
3	Tx_ABORT	R/W	0	<ul> <li>Transmit ABORT</li> <li>This bit configures the Transmit HDLC Controller Block # 2 to transmit an ABORT sequence (string of 7 or more consecutive 1's) to the Remote terminal.</li> <li>0 - Configures the Transmit HDLC Controller Block # 2 to function normally (e.g., not transmit the ABORT sequence).</li> <li>1 - Configures the Transmit HDLC Controller block # 2 to transmit the ABORT Sequence.</li> </ul>





## TABLE 53: DATA LINK CONTROL REGISTER (DLCR2)

HEX ADDRESS: 0xN143

**XRT86VX38** 

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	Tx_IDLE	R/W	0	<ul> <li>Transmit Idle (Flag Sequence Byte)</li> <li>This bit configures the Transmit HDLC Controller Block #2 to unconditionally transmit a repeating string of Flag Sequence octets (0X7E) in the data link channel to the Remote terminal. In normal conditions, the Transmit HDLC Controller block will repeatedly transmit the Flag Sequence octet whenever there is no MOS message to transmit to the remote terminal equipment. However, if the user invokes this "Transmit Idle Sequence" feature, then the Transmit HDLC Controller block will UNCONDITIONALLY transmit a repeating stream of the Flag Sequence octet (thereby overwriting all outbound MOS data-link messages).</li> <li>0 - Configures the Transmit HDLC Controller Block # 2 to transmit data-link information in a "normal" manner.</li> <li>1 - Configures the Transmit HDLC Controller block # 2 to transmit a repeating string of Flag Sequence Octets (0x7E).</li> <li>Note: This bit is ignored if the Transmit HDLC2 controller is operating in the BOS Mode - bit 0 (MOS/BOS) within this</li> </ul>
1	Tx_FCS_EN	R/W	or produced	<ul> <li>register is set to 0.</li> <li>Transmit LAPD Message with Frame Check Sequence (FCS)</li> <li>This bit permits the user to configure the Transmit HDLC Controller block # 2 to compute and append FCS octets to the "back-end" of each outbound MOS data-link message.</li> <li>0. Configures the Transmit HDLC Controller block # 2 to NOT compute and append the FCS octets to the back-end of each outbound MOS data-link message.</li> <li>1. Configures the Transmit HDLC Controller block # 2 TO COM-PUTE and append the FCS octets to the back-end of each outbound MOS data-link message.</li> <li>Nore: This bit is ignored if the transmit HDLC2 controller has been configured to operate in the BOS mode - bit 0 (MOS/BOS) within this register is set to 0.</li> </ul>
0	MOS/BOS	ta di	are p	<ul> <li>Message Oriented Signaling/Bit Oriented Signaling Send</li> <li>This bit permits the user to enable LAPD transmission through</li> <li>HDLC Controller Block # 2 using either BOS (Bit-Oriented Signaling) or MOS (Message-Oriented Signaling) frames.</li> <li>0 - Transmit HDLC Controller block # 2 BOS message Send.</li> <li>1 - Transmit HDLC Controller block # 2 MOS message Send.</li> <li>Note: This is not an Enable bit. This bit must be set to "0" each time a BOS is to be sent.</li> </ul>

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 54: TRANSMIT DATA LINK BYTE COUNT REGISTER (TDLBCR2)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxHDLC2 BUFAvail/ BUFSel	R/W	0	<ul> <li>Transmit HDLC2 Buffer Available/Buffer Select</li> <li>This bit has different functions, depending upon whether the user is writing to or reading from this register, as depicted below.</li> <li>If the user is writing data into this register bit:</li> <li>0 - Configures the Transmit HDLC2 Controller to read out and transmit the data, residing within "Transmit HDLC2 Buffer # 0", via the Data Link channel to the remote terminal equipment.</li> <li>1 - Configures the Transmit HDLC2 Controller to read out and transmit the data, residing within the "Transmit HDLC2 Buffer #1", via the Data Link channel to the remote terminal equipment.</li> <li>1 - Configures the Transmit HDLC2 Controller to read out and transmit the data, residing within the "Transmit HDLC2 Buffer #1", via the Data Link channel to the remote terminal equipment.</li> <li>If the user is reading data from this register bit:</li> <li>0 - Indicates that "Transmit HDLC2 Buffer # 0" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC2 Message Buffer, he/she should proceed to write this message into "Transmit HDLC2 Buffer # 0". Address location: 0xN600.</li> <li>1 - Indicates that "Transmit HDLC2 Buffer # 1" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC2 Message Buffer, he/she should proceed to write this message into "Transmit HDLC2 Buffer # 1" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC2 Message Buffer, he/she should proceed to write this message into "Transmit HDLC2 Buffer # 1" - Address location: 0xN700.</li> <li>NoTE: If one of these Transmit HDLC2 buffers contain a message which has yet to be completely read-in and processed for transmission by the Transmit HDLC2 controller, then this bit will automatically reflect the value corresponding to th</li></ul>
6-0	TDLBC[6:0]	R/W		Transmit HDLC2 Message - Byte Count The exact function of these bits depends on whether the Transmit HDLC 2 Controller is configured to transmit MOS or BOS messages to the Remote Terminal Equipment. In BOS MODE: These bit fields contain the number of repetitions the BOS message must be transmitted before the Transmit HDLC2 controller gener- ates the Transmit End of Transfer (TxEOT) interrupt and halts trans- mission. If these fields are set to 00000000, then the BOS message will be transmitted for an indefinite number of times. In MOS MODE: These bit fields contain the length, in number of octets, of the mes- sage to be transmitted. The length of MOS message specified in these bits include header bytes such as the SAPI, TEI, Control field, however, it does not include the FCS bytes.





### TABLE 55: RECEIVE DATA LINK BYTE COUNT REGISTER (RDLBCR2)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RBUFPTR	R/W	0	<ul> <li>Receive HDLC2 Buffer-Pointer</li> <li>This bit Identifies which Receive HDLC2 buffer contains the most recently received HDLC2 message.</li> <li>0 - Indicates that Receive HDLC2 Buffer # 0 contains the contents of the most recently received HDLC message.</li> <li>1 - Indicates that Receive HDLC2 Buffer # 1 contains the contents of the most recently received HDLC2 Buffer # 1 contains the contents of the most recently received HDLC2 Buffer # 1 contains the contents of the most recently received HDLC2 Buffer # 1 contains the contents of the most recently received HDLC2 Buffer # 1 contains the contents of the most recently received HDLC2 Buffer # 1 contains the contents of the most recently received HDLC message.</li> </ul>
6-0	RDLBC[6:0]	R/W	0000000	Receive HDLC Message - byte count The exact function of these bits depends on whether the Receive HDLC Controller Block #2 is configured to receive MOS or BOS messages. In BOS Mode: These seven bits contain the number of repetitions the BOS mes- sage must be received before the Receive HDLC2 controller gener- ates the Receive End of Transfer (RxEOT) interrupt. If these bits are set to "0000000", the message will be received indefinitely and no Receive End of Transfer (RxEOT) interrupt will be generated. In MOS Mode: These seven bits contain the size in bytes of the HDLC2 message that has been received and written into the Receive HDLC buffer. The length of MOS message shown in these bits include header bytes such as the SAPI, TEI, Control field, AND the FCS bytes.
	the	that has been received and written into the Receive HDLC buffer. The length of MOS message shown in these bits include header bytes such as the SAPI, TEI, Control field, AND the FCS bytes.		

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



## TABLE 56: LOOPBACK CODE CONTROL REGISTER - CODE 3 (LCCR3)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length he receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					(ft)
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	Code Deactivation Length receive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0000	Selects 4-bit receive loopback code deactivation Sequence
		8	JCL 310	<b>0</b> 1	Selects 5-bit receive loopback code deacti- vation Sequence
		prov	hearn	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	732	uct or P	11	Selects 7-bit receive loopback code deacti- vation Sequence
		2			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	in the transmit path.	framed or unframed loopback code generation
					med" loopback code for transmission.
					" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

XRT86VX38

TABLE 57: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 3 (RLACR3) HEX ADDRESS: 0xN147

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	Receive activation loopback code These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	Receive activation loopback code enable This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

TABLE 58: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER CODE 3 (RLDCR3) HEX ADDRESS: 0xN148

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or produced	 Receive deactivation loopback code enable This bit enables the receive loopback deactivation code detection. Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit. The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code deactivation detection. 1 = Enables the receive loopback code deactivation detection.
	The	atandr	131	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 59: LOOPBACK CODE CONTROL REGISTER - CODE 4 (LCCR4)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length he receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					n ¹
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	ode Deactivation Length ecceive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0 000	Selects 4-bit receive loopback code deactivation Sequence
		8	JC 310	0 1	Selects 5-bit receive loopback code deacti- vation Sequence
		Prov	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Asts.	d may no	11	Selects 7-bit receive loopback code deacti- vation Sequence
		6			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	in the transmit path.	framed or unframed loopback code generation
					med" loopback code for transmission.
	Deserved				" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

**XRT86VX38** 

### TABLE 60: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 4 (RLACR4) HEX ADDRESS: 0xN14A

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	<b>Receive activation loopback code</b> These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	<b>Receive activation loopback code enable</b> This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

## TABLE 61: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER - CODE 4 (RLDCR4) HEX ADDRESS: 0xN14B

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or prod	<ul> <li>Receive deactivation loopback code enable</li> <li>This bit enables the receive loopback deactivation code detection.</li> <li>Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit.</li> <li>The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register.</li> <li>0 = Disables the receive loopback code deactivation detection.</li> <li>1 = Enables the receive loopback code deactivation detection.</li> </ul>
	the	atandr	13/1	

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



## TABLE 62: LOOPBACK CODE CONTROL REGISTER - CODE 5 (LCCR5)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length he receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
				and the second sec	n ¹
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	ode Deactivation Length ecceive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0000	Selects 4-bit receive loopback code deactivation Sequence
		8	JC 310	<b>0</b> 1	Selects 5-bit receive loopback code deacti- vation Sequence
		pro	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	2010	uct or e	11	Selects 7-bit receive loopback code deacti- vation Sequence
		<u> </u>			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	Framed Loopback C This bit selects either in the transmit path.	Code framed or unframed loopback code generation
					med" loopback code for transmission.
					" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

XRT86VX38

TABLE 63: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 5 (RLACR5) HEX ADDRESS: 0xN14D

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	Receive activation loopback code These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	Receive activation loopback code enable This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

TABLE 64: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER - CODE 5 (RLDCR5) HEX ADDRESS: 0xN14E

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or prod	 Receive deactivation loopback code enable This bit enables the receive loopback deactivation code detection. Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit. The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code deactivation detection. 1 = Enables the receive loopback code deactivation detection.
	the	atandr	13/1	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 65: LOOPBACK CODE CONTROL REGISTER - CODE 6 (LCCR6)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length he receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					n ¹
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	ode Deactivation Length ecceive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0 000	Selects 4-bit receive loopback code deactivation Sequence
		8	JC 310	0 1	Selects 5-bit receive loopback code deacti- vation Sequence
		Prov	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Asts.	d may no	11	Selects 7-bit receive loopback code deacti- vation Sequence
		6			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	in the transmit path.	framed or unframed loopback code generation
					med" loopback code for transmission.
	Deserved				" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

**XRT86VX38** 

### TABLE 66: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 6 (RLACR6) Hex Address: 0xN150

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	Receive activation loopback code These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	<b>Receive activation loopback code enable</b> This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

## TABLE 67: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER CODE 6 (RLDCR6) HEX ADDRESS: 0xN151

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or produced	<ul> <li>Receive deactivation loopback code enable</li> <li>This bit enables the receive loopback deactivation code detection.</li> <li>Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit.</li> <li>The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register.</li> <li>0 = Disables the receive loopback code deactivation detection.</li> <li>1 = Enables the receive loopback code deactivation detection.</li> </ul>
	the	atadn	131	

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 68: DATA LINK CONTROL REGISTER (DLCR3)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	SLC-96 Data Link Enable	R/W	0	<ul> <li>SLC®96 DataLink Enable</li> <li>This bit permits the user to configure the channel to support the transmission and reception of the "SLC-96 type" of data-link message.</li> <li>0 - Channel does not support the transmission and reception of "SLC-96" type of data-link messages. Regular SF framing bits will be transmitted.</li> <li>1 - Channel supports the transmission and reception of the "SLC-96" type of data-link messages.</li> <li>Note: This bit is only active if the channel has been configured to operate in either the SLC-96 or the ESF Framing formats.</li> </ul>
6	MOS ABORT Disable	R/W	0	<ul> <li>MOS ABORT Disable:</li> <li>This bit permits the user to either enable or disable the "Automatic MOS ABORT" feature within Transmit HDLC Controller # 3. If the user enables this feature, then Transmit HDLC Controller block # 3 will automatically transmit the ABORT Sequence (e.g., a zero followed by a string of 7 consecutive "1s") whenever it abruptly transitions from transmitting a MOS type of message, to transmitting a BOS type of message.</li> <li>If the user disables this feature, then the Transmit HDLC Controller Block # 3 will NOT transmit the ABORT sequence, whenever it abruptly transitions from transmitting a MOS-type of message.</li> <li>0 - Enables the "Automatic MOS Abort" feature</li> <li>1 - Disables the "Automatic MOS Abort" feature</li> </ul>
5	Rx_FCS_DIS	R/W	0	Receive Frame Check Sequence (FCS) Verification Enable/Disable This bit permits the user to configure the Receive HDLC Controller Block # 3 to compute and verify the FCS value within each incoming LAPD message frame. 0 - Enables FCS Verification 1 - Disables FCS Verification
4	AutoRx	R/W	e proste	Auto Receive LAPD Message This bit configures the Receive HDLC Controller Block #3 to discard any incoming BOS or LAPD Message frame that exactly match which is currently stored in the Receive HDLC3 buffer. 0 = Disables this "AUTO DISCARD" feature 1 = Enables this "AUTO DISCARD" feature.
3	Tx_ABORT	R/W	6	<ul> <li>Transmit ABORT</li> <li>This bit configures the Transmit HDLC Controller Block #3 to transmit an ABORT sequence (string of 7 or more consecutive 1's) to the Remote terminal.</li> <li>0 - Configures the Transmit HDLC Controller Block # 3 to function normally (e.g., not transmit the ABORT sequence).</li> <li>1 - Configures the Transmit HDLC Controller block # 3 to transmit the ABORT Sequence.</li> </ul>





## TABLE 68: DATA LINK CONTROL REGISTER (DLCR3)

HEX ADDRESS: 0xN153

**XRT86VX38** 

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	Tx_IDLE	R/W	0	<ul> <li>Transmit Idle (Flag Sequence Byte)</li> <li>This bit configures the Transmit HDLC Controller Block #3 to unconditionally transmit a repeating string of Flag Sequence octets (0X7E) in the data link channel to the Remote terminal. In normal conditions, the Transmit HDLC Controller block will repeatedly transmit the Flag Sequence octet whenever there is no MOS message to transmit to the remote terminal equipment. However, if the user invokes this "Transmit Idle Sequence" feature, then the Transmit HDLC Controller block will UNCONDITIONALLY transmit a repeating stream of the Flag Sequence octet (thereby overwriting all outbound MOS data-link messages).</li> <li>0 - Configures the Transmit HDLC Controller Block # 3 to transmit data-link information in a "normal" manner.</li> <li>1 - Configures the Transmit HDLC Controller block # 3 to transmit a repeating string of Flag Sequence Octes (0x7E).</li> <li>Note: This bit is ignored if the Transmit HDLC3 controller is operating in the BOS Mode - bit 0 (MOS/BOS) within this register is set to 0.</li> </ul>
1	Tx_FCS_EN	R/W	0	<ul> <li>Transmit LAPD Message with Frame Check Sequence (FCS)</li> <li>This bit permits the user to configure the Transmit HDLC Controller block # 3 to compute and append FCS octets to the "back-end" of each outbound MOS data-link message.</li> <li>0 - Configures the Transmit HDLC Controller block # 3 to NOT compute and append the FCS octets to the back-end of each outbound MOS data-link message.</li> <li>1 - Configures the Transmit HDLC Controller block # 3 TO COMPUTE and append the FCS octets to the back-end of each outbound MOS data-link message.</li> <li>1 - Configures the Transmit HDLC Controller block # 3 TO COMPUTE and append the FCS octets to the back-end of each outbound MOS data-link message.</li> <li>Note: This bit is ignored if the transmit HDLC3 controller has been configured to operate in the BOS mode - bit 0 (MOS/BOS) within this register is set to 0.</li> </ul>
0	MOS/BOS	R/W	and may	<ul> <li>Message Oriented Signaling/Bit Oriented Signaling Send</li> <li>This bit permits the user to enable LAPD transmission through HDLC Controller Block # 3 using either BOS (Bit-Oriented Signaling) or MOS (Message-Oriented Signaling) frames.</li> <li>0 - Transmit HDLC Controller block # 3 BOS message Send.</li> <li>1 - Transmit HDLC Controller block # 3 MOS message Send.</li> <li>Note: This is not an Enable bit. This bit must be set to "0" each time a BOS is to be sent.</li> </ul>

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxHDLC3 BUFAvail/ BUFSel	R/W	0	<ul> <li>Transmit HDLC3 Buffer Available/Buffer Select</li> <li>This bit has different functions, depending upon whether the user is writing to or reading from this register, as depicted below.</li> <li>If the user is writing data into this register bit:</li> <li>0 - Configures the Transmit HDLC3 Controller to read out and transmit the data, residing within "Transmit HDLC3 Buffer # 0", via the Data Link channel to the remote terminal equipment.</li> <li>1 - Configures the Transmit HDLC3 Controller to read out and transmit the data, residing within the "Transmit HDLC3 Buffer #1", via the Data Link channel to the remote terminal equipment.</li> <li>1 - Configures the Transmit HDLC3 Controller to read out and transmit the data, residing within the "Transmit HDLC3 Buffer #1", via the Data Link channel to the remote terminal equipment.</li> <li>If the user is reading data from this register bit:</li> <li>0 - Indicates that "Transmit HDLC3 Buffer # 0" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC3 Message Buffer, he/she should proceed to write this message into "Transmit HDLC3 Buffer # 0". Address location: 0xN600.</li> <li>1 - Indicates that "Transmit HDLC3 Buffer # 1" is the next available buffer. In this case, if the user wishes to write in the contents of a new "outbound" Data Link Message into the Transmit HDLC3 Message Buffer, he/she should proceed to write this message into "Transmit HDLC3 Buffer # 1" - Address location: 0xN700.</li> <li>NOTE: If one of these Transmit HDLC3 buffers contain a message which has yet to be completely read-in and processed for transmission by the Transmit HDLC3 controller, then this bit will automatically reflect the value corresponding to the next available buffer when it is read. Changing this bit to the inuse buffer is not permitted.</li> </ul>
6-0	TDLBC[6:0]	R/W		<ul> <li>Transmit HDLC3 Message - Byte Count</li> <li>The exact function of these bits depends on whether the Transmit HDLC 3 Controller is configured to transmit MOS or BOS messages to the Remote Terminal Equipment.</li> <li>In BOS MODE:</li> <li>These bit fields contain the number of repetitions the BOS message must be transmitted before the Transmit HDLC3 controller generates the Transmit End of Transfer (TxEOT) interrupt and halts transmission. If these fields are set to 00000000, then the BOS message will be transmitted for an indefinite number of times.</li> <li>In MOS MODE:</li> <li>These bit fields contain the length, in number of octets, of the message to be transmitted. The length of MOS message specified in these bits include header bytes such as the SAPI, TEI, Control field, however, it does not include the FCS bytes.</li> </ul>





### TABLE 70: RECEIVE DATA LINK BYTE COUNT REGISTER (RDLBCR3)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RBUFPTR	R/W	0	<ul> <li>Receive HDLC2 Buffer-Pointer</li> <li>This bit Identifies which Receive HDLC3 buffer contains the most recently received HDLC3 message.</li> <li>0 - Indicates that Receive HDLC3 Buffer # 0 contains the contents of the most recently received HDLC message.</li> <li>1 - Indicates that Receive HDLC3 Buffer # 1 contains the contents of the most recently received HDLC3 Buffer # 1 contains the contents of the most recently received HDLC3 Buffer # 1 contains the contents of the most recently received HDLC3 Buffer # 1 contains the contents of the most recently received HDLC3 Buffer # 1 contains the contents of the most recently received HDLC3 Buffer # 1 contains the contents of the most recently received HDLC message.</li> </ul>
6-0	RDLBC[6:0]	R/W	0000000	Receive HDLC Message - byte count The exact function of these bits depends on whether the Receive HDLC Controller Block #3 is configured to receive MOS or BOS messages. In BOS Mode: These seven bits contain the number of repetitions the BOS mes- sage must be received before the Receive HDLC3 controller gener- ates the Receive End of Transfer (RxEOT) interrupt. If these bits are set to "0000000", the message will be received indefinitely and no Receive End of Transfer (RxEOT) interrupt will be generated. In MOS Mode: These seven bits contain the size in bytes of the HDLC3 message that has been received and written into the Receive HDLC buffer. The length of MOS message shown in these bits include header bytes such as the SAPI, TEI, Control field, AND the FCS bytes.
	the	ata and h	or prod et are to have not	that has been received and written into the Receive HDLC buffer. The length of MOS message shown in these bits include header bytes such as the SAPI, TEI, Control field, AND the FCS bytes.

## 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



## TABLE 71: LOOPBACK CODE CONTROL REGISTER - CODE 7 (LCCR7)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-6	RXLBCALEN[1:0]	R/W	00	This bit determines th	Code Activation Length he receive loopback code activation length. s supported as presented in the table below:
				RXLBCALEN[1:0]	RECEIVE LOOPBACK CODE ACTIVATION LENGTH
				00	Selects 4-bit receive loopback code activa- tion Sequence
				01	Selects 5-bit receive loopback code activa- tion Sequence
				10	Selects 6-bit receive loopback code activa- tion Sequence
				11	Selects 7-bit receive loopback code activa- tion Sequence
					(ft)
5-4	RXLBCDLEN[1:0]	R/W	00	This bit determines th	Code Deactivation Length receive loopback code deactivation length. supported as presented in the table below
			4	RXLBCDLEN[1:0]	RECEIVE LOOPBACK CODE DEACTIVATION LENGTH
			lork	0000	Selects 4-bit receive loopback code deactivation Sequence
		8	JC 310	<b>0</b> 1	Selects 5-bit receive loopback code deacti- vation Sequence
		prov	neen	10	Selects 6-bit receive loopback code deacti- vation Sequence
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	732	uct or P	11	Selects 7-bit receive loopback code deacti- vation Sequence
		2			
3-2	Reserved	R/W	00	Reserved	
1	FRAMED	R/W	0	in the transmit path.	framed or unframed loopback code generation
					med" loopback code for transmission.
					" loopback code for transmission.
0	Reserved	R/W	0	Reserved	



G

XRT86VX38

TABLE 72: RECEIVE LOOPBACK ACTIVATION CODE REGISTER - CODE 7 (RLACR7) HEX ADDRESS: 0xN157

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	RXLBAC[6:0]	R/W	1010101	Receive activation loopback code These seven bits determine the receive loopback activation code. The MSB of the receive activation loopback code is received first.
0	RXLBACENB	R/W	0	Receive activation loopback code enable This bit enables the receive loopback activation code detection. Receive loopback activation code is detected by writing the expected receive activation loopback code in this register and enabling it using this bit.
				The length and format of the Receive loopback activation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code activation detection. 1 = Enables the receive loopback code activation detection.

TABLE 73: RECEIVE LOOPBACK DEACTIVATION CODE REGISTER CODE (RLDCR7) HEX ADDRESS: 0xN158

Віт	FUNCTION	Түре	DEFAULT	
7-1	RXLBDC[6:0]	R/W	1010101	Receive deactivation loopback code These seven bits determine the receive loopback deactivation code. The MSB of the receive deactivation loopback code is received first.
0	RXLBDCENB	R/W	or prod	 Receive deactivation loopback code enable This bit enables the receive loopback deactivation code detection. Receive loopback deactivation code is detected by writing the expected receive deactivation loopback code in this register and enabling it using this bit. The length and format of the Receive loopback deactivation code is determined by the Loopback Code Control Register. 0 = Disables the receive loopback code deactivation detection. 1 = Enables the receive loopback code deactivation detection.
	the	atandr	13/1	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 74: BERT CONTROL REGISTER (BCR)

HEX ADDRESS: 0xN163

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION		
7-4	Reserved	R/W	0	Reserved		
3-0	BERT[3:0]	R/W	0000	BERT Pattern Select		
				0010 =PRBS X20 + X3 + 1		
				0011 = QRSS X20 + X17 + 1		
				0100 = All Ones		
				0101 = All Zeros		
				0110 = 3 in 24		
				0111 = 1 in 8 1000 = 55 Octet Pattern		
				1000 = 55 Octel Pattern		
				1010 = PRBS X20 + X17 + 1		
				Others = Invalid		
BERT 3 in 2	BERT Pattern Definitions 3 in 24 Dool 0000 0001 0000 0000 1 in 8 Dool 0010 55 Octet (Unframed) This pattern is shown in HEX format for simplification purposes.					
0001	0001 0000 0001 0000 (000		n'ins		
0001				s no o		
1 in 8				80.00 8		
0000	0010			0, 7, 6, 6,		
			Q.			
			101	N N		
55 Oc	tet (Unframed)		x .e			
This p	This pattern is shown in HEX format for simplification purposes.					
	01 01 01 01 80 01 01 0 FF FF FF FF FF FF 80		01 03 01 0	4 01 01 07 01 01 01 01 55 55 55 55 AA AA AA AA 01 01 01 01		

BERT Pattern Definitions

3 in 24

1 in 8

55 Octet (Unframed)

Daly Pattern (Framed)

This pattern is shown in HEX format for simplification purposes.

01 01 01 01 01 01 80 01 01 01 01 01 01 03 01 01 01 01 01 01 01 01 01 55 55 55 AA AA AA AA 01 01 01 01 01 01 FF FF FF FF FF FF 80 01 80 01 80 01 80 01 80 01 80 01 ...

1.1 T1 Synchronization status message

T1 synchronization messages are sent through the FDL (Facility Data Link) bits by using a BOC (Bit Oriented Code) controller within the XRT86VX38 device. The most right bit position in the BOC code is sent first. The SSM message that are used in typical BITS applications are shown below. These messages are defined in specification ANSI T1.101-1999.

QUALITY LEVEL	DESCRIPTION	BOC CODE
1	Stratum 1 Traceable	00000100 11111111
2	Synchronized Traceability Unknown	9 👌 00001000 1111111
3	Stratum 2 Traceable	00001100 1111111
4	Stratum 3 Traceable	00010000 1111111
5	SONET Minimum Clock Traceable	00100010 11111111
6	Stratum 4 Traceable	00101000 11111111
7	Do Not Use for Synchronization	00110000 11111111
User Assignable	Reserved for Network Synchronization Use	01000000 11111111

TABLE 75: T1 SSM MESSAGES

1.2 T1 BOC Receiver

If enabled, the T1 BOC receiver will monitor the FDL bits for SSM messages with various features being supported. Some of these features are Change of Status Alarm, 3 independent pre-set codes for matching validation (each having its own alarm), filter settings for consecutive pattern qualification, and many more.

Note: If the receive BOC is enabled, the part will still report BOS and MOS messages as described in the register descriptions.

1.3 T1 BOC Transmitter

The T1 BOC transmitter will automatically insert an SSM message in the correct FDL bit positions if enabled. Once the message is stored in the TFDL register, Bit 0=1 sends the message, automatically followed by the Abort Sequence.



				•		,	
BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
TxABORT	RMF	[1:0]	RBOCE	BOCR	RBF	[1:0]	SBOC
R/W	R/W	R/W	R/W	Auto Clear	R/W	R/W	Auto Clear
0	0	0	0	0	0	0	0

TABLE 76: SSM BOC CONTROL REGISTER (BOCCR 0xN170H)

BIT 7 - Transmit Abort Sequence Enable

By default, the transmitter will send an IDLE flag after the SSM message (unless continous is set). To send an Abort sequence to over write the IDLE flag, set this bit to '1'.

} 0 - Disabled

} 1 - Enable TxABORT

BITS [6:5] - Receive Match Filter Bits

These bits are used to set the number of consecutive error free patterns that must be received before the receive Match Event is set. This filter can be set to any message, not just a Valid SSM message. This filter does NOT apply to the RFDL valid message or alarm indication. The RFDL alarm and valid register have their own filter. See BITS [2:1] of this register.

- } 00 None
- } 01 3 consecutive patterns
- } 10 5 consecutive patterns
- } 11 7 consecutive patterns

BIT 4 - Receive BOC Enable

This bit is used to enable the BOC receiver. If this bit is set to "0", only standard BOS messages will be processed by the HDLC controller. For clarification, BOC messages can only be processed through the FDL bits.

- } 0 Disabled
- } 1 Enable Receive BOC

BIT 3 - BOC Reset

This bit is used to reset the receive BOC controller. The function of this bit is to reset all the BOC register values to their default values, except the BOC Interrupt registers. This register bit is automatically set back to '0' so that the user only needs to write '1' to send a subsequent reset.

} 1 - Reset BOC

BITS [2:1] - Receive BOC Filter Bits

These bits are used to set the number of consecutive error free patterns that must be received before the receive BOC alarm indication is set and the RFDL Valid Register is updated. This filter does NOT apply to the RFDL Matching Event registers. The 3 RFDL Matching Event Registers have a separate filter that applies equally to all three matching registers. Therefore, there are a total of 2 filters.

- } 00 None
- } 01 3 consecutive patterns
- } 10 5 consecutive patterns
- } 11 7 consecutive patterns

BIT 0 - Send BOC Message

This bit is used to transmit the stored BOC message in the transmit FDL register. This register bit is automatically set back to '0' so that the user only needs to write '1' to send a subsequent BOC message.

- } 0 Normal Operation
- } 1 Send BOC Message



BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Rese	erved			RBO	C[5:0]		
RO	RO	RO	RO	RO	RO	RO	RO
0	0	0	0	0	0	0	0

TABLE 77: SSM RECEIVE FDL REGISTER (RFDLR 0xN171H)

BITS [7:6] - Reserved

BITS [5:0] - Receive BOC Message

These bits contain the most recently received BOC message if the filter setting has been meet in bits[2:1] of register 0xn170h.



BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Rese	erved			RFDL	M1[5:0]		
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0

TABLE 78: SSM RECEIVE FDL MATCH 1 REGISTER (RFDLMR1 0xN172H)

BITS [7:6] - Reserved

BITS [5:0] - Receive FDL Match 1

These bits can be used to set an expected value to be compared to the actual receive FDL message. This register is one of three possible expected values that can be set. Upon a match of this register, an independent alarm will be set. In addition, this register has a filter for consecutive message validation.


TABLE 79: SSM RECEIVE FDL MATCH 2 REGISTER (RFDLMR2 0XN173H)

BIT7	BIT6	BIT5	BIT5 BIT4 BIT3 BIT2 BIT1 B					
Rese	erved			RFDLA	42[5:0]			
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
0	0	0	0	80	0	0	0	

BITS [7:6] - Reserved

BITS [5:0] - Receive FDL Match 2

 These bits can be used to set an expected value to be compared to the actual receive FDL message. This register is one of three possible expected values that can be set. Upon a match of this register, an independent alarm will be set. In addition, this register has a filter for consecutive message validation.



BIT7	BIT6	BITS BIT4 BIT3 BIT2 BIT1					
Rese	erved			RFDLM	//3[5:0]		
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0

BITS [7:6] - Reserved

BITS [5:0] - Receive FDL Match 3

These bits can be used to set an expected value to be compared to the actual receive FDL message. This register is one of three possible expected values that can be set. Upon a match of this register, an independent alarm will be set. In addition, this register has a filter for consecutive message validation.



	14					511)	
BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Rese	erved			TBO	C[5:0]		
RW	RW	RW	RW	RW	RW	RW	RW
0	0	0	0	0	0	0	0

TABLE 81: SSM TRANSMIT FDL REGISTER (TFDLR 0xN175H)

BITS [7:6] - Reserved

BITS [5:0] - Transmit BOC Message

These bits are used to store the BOC message to be transmitted out the FDL bits. Once the message has been stored in this register, Bit 0 within the BOC Control Register is used to automatically transmit the message.

BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
			TBCF	R[7:0]			
RW	RW	RW	RW	RW	RW	RW	RW
0	0	0		0	0	0	1

TABLE 82: SSM TRANSMIT BYTE COUNT REGISTER (TBCR 0xN176H)

BITS [7:0] - Transmit Byte Count Value 🔿

These bits are used to store the amount of repetitions the Transmit BOC message will be sent before an Abort sequence. The default value is "1", If "0" is programmed into this register, the transmit BOC will be set continuously. To stop a continuous transmission, the TxBYTE count should be programmed to a definite value, and then re-send the BOC message.

Note: The TxBYTE Count register 0xN176h is used to set the number of repetitions for this BOC message before the Abort sequence is sent out. The default is one repetition.



TABLE 83: RECEIVE DS-0 MONITOR REGISTERS (RDS0MR) HEX ADDRESS: 0xN15F to 0xN16F (NOT INCLUDING 0xN163) AND 0xN1C0 to 0xN1CF

7-0 F	RxDS-0[7:0]	RO	00000000	Receive DS-0 Monitor The contents of these registers will display a direct copy of the value currently being processed by the receive framer within the selected time slot. This value will reflect the data present at RTIP/RRING
				currently being processed by the receive framer within the selected
				before any conditioning occurs. TS0 = 0xN15F TS1 = 0xN160 TS2 = 0xN161
				TS3 = 0xN162
				TS4 = 0xN164 (Note: 0xN163 is not used) TS5 = 0xN165
				TS6 = 0xN166
				TS7 = 0xN167
				TS8 = 0xN168
				TS9 = 0xN169
				TS10 = 0xN16A
				TS11 = 0xN168
				TS12=0xN16C
				TS13 = 0xN16D
				TS15 = 0xN16F TS16 = 0xN1C0
			10	TS17=0xN1C1
			x .0	TS18 = 0xN1C2
			S 3	TS19 = 0xN1C3
		5	e c	TS20 = 0xN1C4
		30		TS21 = 0xN1C5
		N.	neet ne	TS22 = 0xN1C6
		(v		TS23 = 0xN1C7
		18	6	NOTE: 0xN1C8 to 0XN1CF are not used in T1

TABLE 84: TRANSMIT DS-0 MONITOR REGISTERS (TDS0MR) HEX ADDRESS: 0xN1D0 TO 0xN1EF

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	TxDS-0[7:0]	RO	00000000	Transmit DS-0 Monitor
				The contents of these registers will display a direct copy of the value currently being processed by the transmit framer within the selected time slot. This value will reflect the data present at TxSER before any conditioning occurs. For time slot 0, read register 0xN1D0, for time slot 1, read 0xN1D1, etc. up to time slot 23 which is 0xN1E7. For T1 mode, time slots 24 through 31 are not used.



TABLE 85: DEVICE ID REGISTER (DEVID)

HEX ADDRESS: 0x1FE

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	DEVID[7:0]	RO	0x3C	DEVID This register is used to identify the XRT86VX38 Framer/LIU. The value of this register is 0x3Ch.

TABLE 86: REVISION ID REGISTER (REVID)

HEX ADDRESS: 0x1FF

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	REVID[7:0]	RO	00000010	REVID
				 This register is used to identify the revision number of the XRT86VX38. The value of this register for the first revision is A - 0x01h. Note: The content of this register is subject to change when a newer revision of the device is issued.

rore: The content of this register for the device the d

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

HEX ADDRESS: 0xN300 TO 0xN317

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7	LAPDcntl[1]	R/W	1	Transmit LAPD Cont	rol		
6	LAPDcntl[0]	R/W	0	ch one of the three Transmit LAPD controller is config- slot (Octets 0-23) for transmitting LAPD messages. esents the different settings of these two bits.			
				LAPDCNTL[1:0]	LAPD CONTROLLER SELECTED		
				00	Transmit LAPD Controller 1		
				01	Transmit LAPD Controller 2		
				10	The TxDE[1:0] bits in the Transmit Signaling and Data Link Select Register (TSDLSR - Register Address - 0xN10A) bit 3-2) determine the data source for D/E time slots.		
				11	Transmit LAPD Controller 3		
5 - 4	TxZERO[1:0]	R/W	00 S T	transmission However, only Transmit LAPD C	Suppression		
				TxZERO[10]	TYPE OF ZERO CODE SUPPRESSION SELECTED		
					o zero code suppression is used		
			.000	01 A	T&T bit 7 stuffing is used		
		The	produce she	10 G ci n fr	TE zero code suppression is used. If GTE zero ode suppression is used, bit 8 is stuffed in non-sig- aling frame. Otherwise, bit 7 is stuffed in signaling ame if signaling bit is zero.		
			<u></u>	11 D 0	DS zero code suppression is used. The value x98 replaces the input data		





8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

 TABLE 87: TRANSMIT CHANNEL CONTROL REGISTER 0-23 (TCCR 0-23)

HEX ADDRESS: 0xN300 TO 0xN317

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION					
3-0	TxCond(3:0)	R/W	0000	These bits allow with internally g remote terminal sents the differe	nel Conditioning for Timeslot 0 to 23 w the user to substitute the input PCM data (Octets 0-23) enerated Conditioning Codes prior to transmission to the equipment on a per-channel basis. The table below pre- ent conditioning codes based on the setting of these bits. as 0xN300 represents time slot 0, and address 0xN317 rep- to 23.				
				TxCond[1:0]	CONDITIONING CODES				
				0xN / 0xE	Contents of timeslot octet are unchanged.				
				0x1	All 8 bits of the selected timeslot octet are inverted (1's complement) OUTPUT = (TIME_SLOT_OCTET) XOR 0xFF				
				0x2	Even bits of the selected timeslot octet are inverted OUTPUT = (TIME_SLOT_OCTET) XOR 0xAA				
				0x3	Odd bits of the selected time slot octet are inverted OUTPUT = (TIME_SLOT_OCTET) XOR 0x55				
				0x4	Contents of the selected timeslot octet will be substituted with the 8-bit value in the Transmit Programmable User Code Register (0xN320-0xN337),				
				0 0x5 0	Contents of the timeslot octet will be substituted with the value 0x7F (BUSY Code)				
			lor	0x6	Contents of the timeslot octet will be substituted with the value 0xFF (VACANT Code)				
		ne product a	and may	duct a	ducta	Ox7	Contents of the timeslot octet will be substituted with the BUSY time slot code (111#_####), where ###### is the Timeslot number		
					0x8	Contents of the timeslot octet will be substituted with the MOOF code (0x1A)			
		1,93			0x9	Contents of the timeslot octet will be substituted with the A-Law Digital Milliwatt pattern			
		•		0xA	Contents of the timeslot octet will be substituted with the $\mu\text{-Law}$ Digital Milliwatt pattern				
				0xB	The MSB (bit 1) of input data is inverted				
				0xC	All input data except MSB is inverted				
				0xD	Contents of the timeslot octet will be substituted with the PRBS X^{15} + X^{14} + 1/QRTS pattern				
					Note: PRBS $X^{15} + X^{14} + 1$ or QRTS pattern depends on PRBSType selected in the register 0xN123 - bit 7				
				0xF	D/E time slot - The TxDE[2:0] bits in the Transmit Signal- ing and Data Link Select Register (0xN10A) will determine the data source for D/E time slots.				

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



 TABLE 88: TRANSMIT USER CODE REGISTER 0-23 (TUCR 0-23)

HEX ADDRESS: 0xN320 TO 0xN337

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	TUCR[7:0]	R/W	b00010111	Transmit Programmable User code.
				These eight bits allow users to program any code in this register to replace the input PCM data when the Transmit Channel Control Register (TCCR) is configured to replace timeslot octet with pro- grammable user code. (i.e. if TCCR is set to '0x4') The default value of this register is an IDLE Code (b00010111).

The produce are not be ordered to be and many the area in the ordered to be ordered to be and the ordered to b



TABLE 89: TRANSMIT SIGNALING CONTROL REGISTER 0-23 (TSCR 0-23) HEX ADDRESS: 0xN340 to 0xN357

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	A (x)	R/W	See Note	 Transmit Signaling bit A This bit allows user to provide signaling Bit A (Octets 0-23) if Robbed-bit signaling is enabled (Rob_Enb bit of this register set to 1) and if signalling data is inserted from TSCR (TxSIGSRC[1:0] = 01 in this register). Note: Register 0xN340 represents signaling data for Time Slot 0, and 0xN357 represents signaling data for Time Slot 23.
6	В (у)	R/W	See Note	 Transmit Signaling bit B This bit allows user to provide signaling Bit B (Octets 0-23) if Robbed-bit signaling is enabled (Rob_Enb bit of this register set to 1) and if signalling data is inserted from TSCR (TxSIGSRC[1:0] = 01 in this register). Note: Register 0xN340 represents signaling data for Time Slot 0, and 0xN357 represents signaling data for Time Slot 23.
5	C (x)	R/W	See Note	Transmit Signaling bit C This bit allows user to provide signaling Bit C (Octets 0-23) if Robbed-bit signaling is enabled (Rob_Enb bit of this register set to 1) and if signalling data is inserted from TSCR (TxSIGSRC[1:0] = 01 in this register). Note: Register 0xN340 represents signaling data for Time Slot 0, and 0xN357 represents signaling data for Time Slot 23.
4	D (x)	R/W	See Note	 Transmit Signaling bit D This bit allows user to provide signaling Bit D (Octets 0-23) if Robbed-bit signaling is enabled (Rob_Enb bit of this register set to 1) and if signalling data is inserted from TSCR (TxSIGSRC[1:0] = 01 in this register). Note: Register 0xN340 represents signaling data for Time Slot 0, and 0xN357 represents signaling data for Time Slot 23.
3	Reserved	.000	See Note	Reserved
2	Rob_Enb	RAN	See Note	 Robbed-bit signaling enable This bit enables or disables Robbed-bit signaling transmission. If robbed-bit signaling is enabled, signaling data is conveyed in the 8th position of each signaling channel by replacing the original LSB of the voice channel with signaling data. 0 = Disables Robbed-bit signaling. 1 = Enables Robbed-bit signaling.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

HEX ADDRESS: 0xN340 TO 0xN357 TABLE 89: TRANSMIT SIGNALING CONTROL REGISTER 0-23 (TSCR 0-23)

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION		
1	TxSIGSRC[1]	R/W	See Note	Channel signaling			
0	TxSIGSRC[0]	R/W	See Note	These bits determine the source for signaling information, see table below.			
				TxSIGSRC[1:0]	SIGNALING SOURCE SELECTED		
				00/11	Signaling data is inserted from input PCM data (TxSERn pin)		
				01	Signaling data is inserted from this register (TSCRs).		
				10	Signaling data is inserted from the Transmit Signaling input pin (TxSIG_n) if the Transmit Signaling Interface bit is enabled (i.e. TxF1544 bit = 1 in the Transmit Interface Control Register (TICR) Register 0xN120),		
			or	= 0xN1, 0xN341+0xN	SI		
		۶	uct of	ho orde			



REV. 1.0.4



TABLE 90: RECEIVE CHANNEL CONTROL REGISTER 0-23 (RCCR 0-23)

HEX ADDRESS: 0xN360 TO 0xN377

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7	LAPDcntl[1]	R/W	1	Receive LAPD Con	trol		
6	LAPDcntl[0]	R/W	0		ich one of the three Receive LAPD controller v E time slot (Octets 0-23) for receiving LAPD me		
				LAPDCNTL[1:0]	RECEIVE LAPD CONTROLLER SELECTED		
				00	Receive LAPD Controller 1		
				01	Receive LAPD Controller 2		
				10	The RxDE[1:0] bits in the Receive Signaling and Data Link Select Register (RSDLSR - Address - 0xN10C) determine the data source for Receive D/E time slots.		
				11	Receive LAPD Controller 3		
5-4	RxZERO[1:0]	R/W	00	messages. reception. Note: Register 0xN D/E time slo Type of Zero Suppr	<u>S</u>	talink for	
			lor	RxZERO[1:0]	TYPE OF ZERO CODE SUPPRESSION SELECTED		
			S 2	00	No zero code suppression is used	1	
			d'et	01	AT&T bit 7 stuffing is used		
		thepi	andmay	10	GTE zero code suppression is used. If GTE zero code suppression is used, bit 8 is stuffed in non-signaling frame. Otherwise, bit 7 is stuffed in signaling frame if signaling bit is zero.		
			v	11	DDS zero code suppression is used. The value 0x98 replaces the input data]	

TABLE 90: RECEIVE CHANNEL CONTROL REGISTER 0-23 (RCCR 0-23)

HEX ADDRESS: 0xN360 TO 0xN377

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION						
3-0	RxCOND[3:0]	R/W	0000	These bits allow internally gener plane interface ent conditioning Note: Regist	nel Conditioning for Timeslot 0 to 23 w the user to substitute the input line data (Octets 0-23) with rated Conditioning Codes prior to transmission to the back- on a per-channel basis. The table below presents the differ- g codes based on the setting of these bits. ter address 0xN300 represents time slot 0, and address 7 represents time slot 23.					
				RxCond[1:0]	CONDITIONING CODES					
				0xN / 0xE	Contents of timeslot octet are unchanged.					
				0x1	All 8 bits of the selected times of octet are inverted (1's complement) OUTPUT = (TIME SLOT OCTET) XOR 0xFF					
				0x2	Even bits of the selected timeslot octet are inverted OUTPUT = (TIME_SLOT_OCTET) XOR 0xAA					
				0x3	Odd bits of the selected time slot octet are inverted OUTPUT = (TIME_SLOT_OCTET) XOR 0x55					
				0x4	Contents of the selected timeslot octet will be substituted with the 8 -bit value in the Receive Programmable User Code Register (0xN380-0xN397),					
				0x5 0x6	Contents of the timeslot octet will be substituted with the value 0x7F (BUSY Code)					
			duct	o ox7	walue 0xFF (VACANT Code) Contents of the timeslot octet will be substituted with the BUSY time slot code (111#_####), where ###### is the Timeslot number					
	414		or she	proshe data dh	or she	or she	data du	data nd n	0x8	Contents of the timeslot octet will be substituted with the MOOF code (0x1A)
		datada							datend	datend
			6	0xA	Contents of the timeslot octet will be substituted with the $\mu\text{-Law}$ Digital Milliwatt pattern					
				0xB	The MSB (bit 1) of input data is inverted					
				0xC	All input data except MSB is inverted					
				0xD	Contents of the timeslot octet will be substituted with the PRBS X^{15} + X 14 + 1/QRTS pattern					
					Note: PRBS X ¹⁵ + X ¹⁴ + 1 or QRTS pattern depends on PRBSType selected in the register 0xN123 - bit 7					
				0xF	D/E time slot - The RxDE[2:0] bits in the Transmit Signal- ing and Data Link Select Register (0xN10C) will determine the data source for Receive D/E time slots.					
				1						





TABLE 91: RECEIVE USER CODE REGISTER 0-23 (RUCR 0-23)

HEX ADDRESS: 0xN380 TO 0xN397

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	RxUSER[7:0]	R/W		Receive Programmable User code. These eight bits allow users to program any code in this register to replace the received data when the Receive Channel Control Register (RCCR) is configured to replace timeslot octet with the receive programmable user code. (i.e. if RCCR is set to '0x4')

The product are not be ordered to be and the product of the ordered to be ordered to b

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 92: RECEIVE SIGNALING CONTROL REGISTER 0-23 (RSCR 0-23)

HEX ADDRESS: 0XN3A0 TO 0XN3B7

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
6	SIGC_ENB	R/W	0	Signaling substitution enable This bit enables or disables signaling substitution on the receive side. Once signaling substitution is enabled, received signaling bits ABCD will be substituted with the ABCD values in the Receive Sub- stitution Signaling Register (RSSR). Signaling substitution only occurs in the output PCM data (RxSERn). Receive Signaling Array Register (RSAR - Address 0xN500-0xN51F) and the external Signaling bus (RxSIG_n) output pin will not be affected. 0 = Disables signaling substitution on the receive side. 1 = Enables signaling substitution on the receive side.
5	OH_ENB	R/W	0	Signaling OH interface output enable This bit enables or disables signaling information to output via the Receive Overhead pin (RxOH_m). The signaling information in the receive signaling array registers (RSAR - Address 0xN500-0xN51F) is output to the receive overhead output pin (RxOH_n) if this bit is enabled. 0 = Disables signaling information to output via RxOH_n. 1 = Enables signaling information to output via RxOH_n.
4	DEB_ENB	R/W	o uct of providence	Per-channel debounce enable This bit enables or disables the signaling debounce feature. When this feature is enabled, the per-channel signaling state must be in the same state for 2 superframes before the Receive Framer updates signaling information on the Receive Signaling Array Regis- ter (RSAR) and the Signaling Pin (RxSIGn). If the signaling bits for two consecutive superframes are not the same, the current state of RSAR and RxSIG will not change. When this feature is disabled, RSAR and RxSIG will be updated as soon as the receive signaling bits have changed. 0 = Disables the Signaling Debounce feature. 1 = Enables the Signaling Debounce feature.
	~*	6 3	dmax	



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 92: RECEIVE SIGNALING CONTROL REGISTER 0-23 (RSCR 0-23)

HEX ADDRESS: 0xN3A0 TO 0xN3B7

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
3-2	RxSIGC[1:0]]	R/W	00		tioning [1:0] user to select the format of signaling substitution on sis, as presented in the table below.
				RxSIGC[1:0]	SIGNALING SUBSTITUTION SCHEMES
				00	Substitutes all signaling bits with one.
					Enables 16-code (A,B,C,D) signaling substi- tution. Users must write to bits 3-0 in the Receive Sig- naling Substitution Register (RSSR) to provide the 16-code (A,B,C,D) signaling substitution val- ues.
				no;	Enables 4-code (A,B) signaling substitution. Users must write to bits 4-5 in the Receive Sig- naling Substitution Register (RSSR) to provide the 4 code (A,B) signaling substitution values.
				neting	Enables 2-code (A) signaling substitution. Users must write to bit 6 in the Receive Signal- ing Substitution Register (RSSR) to provide the 2-code (A) signaling substitution values.
1-0	RxSIGE[1:0]	R/W	er producer	These bits contro	ng Extraction [1:0] I per-channel signaling extraction as presented in Signaling information can be extracted to the g Array Register (RSAR), the Receive Signaling G_n) if the Receive Signaling Interface is enable, verhead Interface output (RxOH_n) if OH_ENB bit of this register).
		000		RxSIGE[1:0]	SIGNALING EXTRACTION SCHEMES
		s. Su	à.	00	No signaling information is extracted.
	The	and n		01	Enables 16-code (A,B,C,D) signaling extraction. All signaling bits A,B,C,D will be extracted.
				10	Enables 4-code (A,B) signaling extraction Only signaling bits A,B will be extracted.
				11	Enables 2-code (A) signaling extraction Only signaling bit A will be extracted.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 93: RECEIVE SUBSTITUTION SIGNALING REGISTER 0-23 (RSSR 0-23)HEX ADDRESS: 0xN3C0 to
0xN3D7

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	Reserved	-	-	Reserved
3	SIG16-A, 4-A, 2-A	R/W	0	16-code/4-code/2-code Signaling Bit A This bit provides the value of signaling bit A to substitute the receive signaling bit A when 16-code or 4-code or 2-code signaling substitu- tion is enabled.
2	SIG16-B, 4-B, 2-A	R/W	0	16-code/4-code Signaling Bit B This bit provides the value of signaling bit B to substitute the receive signaling bit B when 16-code or 4-code signaling substitution is enabled.
1	SIG16-C, 4-A, 2-A	R/W	0	16-code Signaling Bit C This bit provides the value of signaling bit C to substitute the receive signaling bit C when 16-code signaling substitution is enabled.
0	SIG16-D, 4-B, 2-A	R/W	0	16-code Signaling Bit D This bit provides the value of signaling bit D to substitute the receive signaling bit D when 16-code signaling substitution is enabled.

This bit provides the value ignaling bit D when 16-cc



TABLE 94: RECEIVE SIGNALING ARRAY REGISTER 0 TO 23 (RSAR 0-23)

HEX ADDRESS: 0xN500 TO 0xN517

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	Reserved	-	-	Reserved
3	А	RO	0	These READ ONLY registers reflect the most recently received sig-
2	В	RO	0	naling value (A,B,C,D) associated with timeslot 0 to 31. If signaling debounce feature is enabled, the received signaling state must be
1	С	RO	0	the same for 2 superframes before this register is updated. If the signaling bits for two consecutive superframes are not the same, the
0	D	RO	0	current value of this register will not be changed.
				When Bit 7 within register 0xN107 is set to '1', signaling bits in this register are updated on superframe boundary
				If the signaling debounce feature is disabled or if Bit 7 within register 0xN107 is set to '0', this register is updated as soon as the received signaling bits have changed.
				Note: The content of this register only has meaning when robbed- bit signaling is enabled.

Note: The content of the Bit signaling is en


TABLE 95: LAPD BUFFER 0 CONTROL REGISTER (LAPDBCR0)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-0	LAPD Buffer 0	R/W	0	LAPD Buffer 0 (96-Bytes) Auto Incrementing This register is used to transmit and receive LAPD messages within buffer 0 of the HDLC controller. Any one of the three HDLC control- ler can be chosen in the LAPD Select Register (0xN11B). Users should determine the next available buffer by reading the BUFAVAL bit (bit 7 of the Transmit Data Link Byte Count Register 1 (address 0xN114), Register 2 (0xN144) and Register 3 (0xN154) depending on which HDLC controller is selected. If buffer 0 is available, writing to buffer 0 will insert the message into the outgoing LAPD frame after the LAPD message is sent and the data from the transmit buffer cannot be retrieved. After detecting the Receive end of transfer interrupt (RxEOT), users should read the RBUFPTR bit (bit 7 of the Receive Data Link Byte Count Register 1 (address 0xN115), Register 2 (0xN145), or Regis- ter 3 (0xN155) depending on which HDLC controller is selected) to determine which buffer contains the received LAPD message ready to be read. If RBUFPTR bit indicates that buffer 0 is available to be read, reading buffer 0 (Register 0xN600) continuously will retrieve the entire received LAPD message. Note: When writing to or reading from Buffer 0, the register is automatically incremented such that the entire 96 Byte LAPD message can be written into or read from buffer 0 (Register 0xN600) continuously.

TABLE 96: LAPD BUFFER 1 CONTROL REGISTER (LAPDBCR1)

HEX ADDRESS: 0xN700

Віт	FUNCTION	Түре	DEFAUL	Description-Operation
7-0	LAPD Buffer 1	R/W	d may n	 APD Buffer 1 (96-Bytes) Auto Incrementing This register is used to transmit and receive LAPD messages within buffer 1 of the HDLC controller. Any one of the three HDLC controller can be is chosen in the LAPD Select Register (0xN11B). Users should determine the next available buffer by reading the BUFAVAL bit (bit 7 of the Transmit Data Link Byte Count Register 1 (address 0xN114), Register 2 (0xN144) and Register 3 (0xN154) depending on which HDLC controller is selected. If buffer 1 is available, writing to buffer 1 will insert the message into the outgoing LAPD frame after the LAPD message is sent and the data from the transmit buffer 1 cannot be retrieved. After detecting the Receive end of transfer interrupt (RxEOT), users should read the RBUFPTR bit (bit 7 of the Receive Data Link Byte Count Register 1 (address 0xN115), Register 2 (0xN145), or Register 3 (0xN155) depending on which HDLC controller is selected) to determine which buffer contains the received LAPD message ready to be read. If RBUFPTR bit indicates that buffer 1 is available to be read, reading buffer 1 (Register 0xN700) continuously will retrieve the entire received LAPD message. NOTE: When writing to or reading from Buffer 0, the register is automatically incremented such that the entire 96 Byte LAPD message can be written into or read from buffer 0 (Register 0xN600) continuously.

 

A New Direction in Mixed-Signal



TABLE 97: PMON RECEIVE LINE CODE VIOLATION COUNTER MSB (RLCVCU)

HEX ADDRESS: 0xN900

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RLCVC[15]	RUR	0	Performance Monitor "Receive Line Code Violation" 16-bit
6	RLCVC[14]	RUR	0	Counter - Upper Byte: These RESET-upon-READ bits, along with that within the PMON
5	RLCVC[13]	RUR	0	Receive Line Code Violation Counter Register LSB combine to reflect the cumulative number of instances that Line Code Violation
4	RLCVC[12]	RUR	0	has been detected by the Receive T1 Framer block since the last
3	RLCVC[11]	RUR	0	 read of this register. This register contains the Most Significant byte of this 16-bit of the Line Code Violation counter. Note: For all 16-bit wide PMON registers, user must read the Miccounter first before reading the LSB counter in order to response to the test of the LSB counter in order to response to the test of the LSB counter in order to response to the test of test of test of the test of test of
2	RLCVC[10]	RUR	0	
1	RLCVC[9]	RUR	0	
0	RLCVC[8]	RUR	0	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.

TABLE 98: PMON RECEIVE LINE CODE VIOLATION COUNTER LSB (RLCVCL)

The store up

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RLCVC[7]	RUR	0	Performance Monitor "Receive Line Code Violation" 16-bit Counter - Lower Byte:
6	RLCVC[6]	RUR	0	These RESET-upon-READ bits, along with that within the PMON
5	RLCVC[5]	RUR	0	Receive Line Code Violation Counter Register MSB combine to reflect the cumulative number of instances that Line Code Violation
4	RLCVC[4]	RUR	0,00	has been detected by the Receive T1 Framer block since the last read of this register.
3	RLCVC[3]	RUR	9	This register contains the Least Significant byte of this 16-bit of the
2	RLCVC[2]	RUR	0 0	Line Code Violation counter. Note: For all 16-bit wide PMON registers, user must read the MSB
1	RLCVC[1]	RUR	20 0	counter first before reading the LSB counter in order to read
0	RLCVC[0]	RUR	es rot	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.
	0		3	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 99: PMON RECEIVE FRAMING ALIGNMENT BIT ERROR COUNTER MSB (RFAECU) HEX ADDRESS: 0xN902

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RFAEC[15]	RUR	0	Performance Monitor "Receive Framing Alignment Error 16-Bit
6	RFAEC[14]	RUR	0	counter" - Upper Byte: These RESET-upon-READ bits, along with that within the "PMON
5	RFAEC[13]	RUR	0	Receive Framing Alignment Error Counter Register LSB" combine to reflect the cumulative number of instances that the Receive
4	RFAEC[12]	RUR	0	Framing Alignment errors has been detected by the Receive T1 Framer block since the last read of this register. This register contains the Most Significant byte of this 16-bit of the
3	RFAEC[11]	RUR	0	
2	RFAEC[10]	RUR	0	Receive Framing Alignment Error counter. Note: For all 16-bit wide PMON registers, user must read the MSB
1	RFAEC[9]	RUR	0	NOTE: For all 16-bit wide PMON registers, user must read the MS counter first before reading the LSB counter in order to re the accurate PMON counts. To clear PMON count, us must read the MSB counter first before reading the LS counter in order to clear the PMON count.
0	RFAEC[8]	RUR	0	
				no nu

TABLE 100: PMON RECEIVE FRAMING ALIGNMENT BIT ERROR COUNTER LSB (RFAECL) Hex Address: 0xN903 0

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RFAEC[7]	RUR	0	Performance Monitor "Receive Framing Alignment Error 16-Bit Counter" -Lower Byte:
6	RFAEC[6]	RUR	0	These RESET-upon-READ bits, along with that within the "PMON
5	RFAEC[5]	RUR	0	Receive Framing Alignment Error Counter Register MSB" combine to reflect the cumulative number of instances that the Receive
4	RFAEC[4]	RUR	0	Framing Alignment errors has been detected by the Receive T1 Framer block since the last read of this register.
3	RFAEC[3]	RUR	, ¢ , e	This register contains the Least Significant byte of this 16-bit of the
2	RFAEC[2]	RUR	00	Receive Framing Alignment Error counter. Note: For all 16-bit wide PMON registers, user must read the MSB
1	RFAEC[1]	RUR	e de la	counter first before reading the LSB counter in order to read
0	RFAEC[0]	RUR	mal	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.
		. <u>7</u> . %	0	



TABLE 101: PMON RECEIVE SEVERELY ERRORED FRAME COUNTER (RSEFC)

HEX ADDRESS: 0xN904

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RSEFC[7]	RUR	0	Performance Monitor - Receive Severely Errored frame Counter (8-bit Counter)
6	RSEFC[6]	RUR	0	These Reset-Upon-Read bit fields reflect the cumulative number of
5	RSEFC[5]	RUR	0	instances that Receive Severely Errored Frames have been detected by the T1 Framer since the last read of this register.
4	RSEFC[4]	RUR	0	in T1 mode, Severely Errored Frame is defined as having framing bit
3	RSEFC[3]	RUR	0	errors in contiguous windows. In T1 SF mode, SEF is defined if Ft bits have been received consecutively in errors for 0.75ms or 6 SF
2	RSEFC[2]	RUR	0	frames. In T1 ESF mode, SEF is defined if FPS bit have been received consecutively in errors for 3 ms or 24 ESF frames.
1	RSEFC[1]	RUR	0	.6 8
0	RSEFC[0]	RUR	0	the rec

en o his icutively in err



TABLE 102: PMON RECEIVE CRC-6 BIT ERROR COUNTER - MSB (RSBBECU)

HEX ADDRESS: 0xN905

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RSBBEC[15]	RUR	0	Performance Monitor "Receive Synchronization Bit Error 16-Bit Counter" - Upper Byte:
6	RSBBEC[14]	RUR	0	These RESET-upon-READ bits, along with that within the "PMON
5	RSBBEC[13]	RUR	0	Receive Synchronization Bit Error Counter Register LSB" combine to reflect the cumulative number of instances that the Receive Syn-
4	RSBBEC[12]	RUR	0	chronization Bit errors has been detected by the Receive T1 Framer block since the last read of this register.
3	RSBBEC[11]	RUR	0	 This register contains the Most Significant byte of this 16-bit of the Receive Synchronization Bit Error counter. Note: For all 16-bit wide PMON registers, user must read the N counter first before reading the LSB counter in order to read the logical counter in order to read the logical
2	RSBBEC[10]	RUR	0	
1	RSBBEC[9]	RUR	0	
0	RSBBEC[8]	RUR	0	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.

TABLE 103: PMON RECEIVE CRC-6 BIT ERROR COUNTER - LSB (RSBBECL) 0xN906

HEX ADDRESS:

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RSBBEC[7]	RUR	0	Performance Monitor "Receive Synchronization Bit Error 16-Bit
6	RSBBEC[6]	RUR	0	Counter" -Lower Byte: These RESET-upon-READ bits, along with that within the "PMON
5	RSBBEC[5]	RUR	0	Receive Synchronization Bit Error Counter Register MSB" combine to reflect the cumulative number of instances that the Receive Syn-
4	RSBBEC[4]	RUR	0	chronization Bit errors has been detected by the Receive T1 Framer block since the last read of this register.
3	RSBBEC[3]	RUR	e e	This register contains the Least Significant byte of this 16-bit of the
2	RSBBEC[2]	RUR	00	Receive Synchronization Bit Error counter.
1	RSBBEC[1]	RUR	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	NOTE: For all 16-bit wide PMON registers, user must read the MSE counter first before reading the LSB counter in order to read
0	RSBBEC[0]	RUR	may	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSE counter in order to clear the PMON count.
		2021	0	



Віт

7

6

5

4

3

2

1

0

RLFC[7]

RLFC[6]

RLFC[5]

RLFC[4]

RLFC[3]

RLFC[2]

RLFC[1]

RLFC[0]

FUNCTION

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 104: PMON RECEIVE SLIP COUNTER (RSC)

HEX ADDRESS: 0xN909

HEX ADDRESS: 0xN90A

HEX ADDRESS:

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	RSC[7]	RUR	0	Performance Monitor - Receive Slip Counter (8-bit Counter)
6	RSC[6]	RUR	0	These Reset-Upon-Read bit fields reflect the cumulative number of instances that Receive Slip events have been detected by the T1
5	RSC[5]	RUR	0	Framer since the last read of this register.
4	RSC[4]	RUR	0	Note: A slip event is defined as a replication or deletion of a T1 frame by the receive slip buffer.
3	RSC[3]	RUR	0	
2	RSC[2]	RUR	0	
1	RSC[1]	RUR	0	.6 8
0	RSC[0]	RUR	0	this rec

TABLE 105: PMON RECEIVE LOSS OF FRAME COUNTER (RLFC)

RUR

RUR

RUR

TYPE DEFAULT DESCRIPTION-OPERATION RUR 0 Performance Monitor - Receive Loss of Frame Counter (8-bit Counter RUR 0 These Reset Upon-Read bit fields reflect the cumulative number of instances that Receive Loss of Frame condition have been detected RUR 0 by the T1 Framer since the last read of this register. RUR 0 NOTED This counter counts once every time the Loss of Frame RUR 0

condition is declared. This counter provides the capability to Measure an accumulation of short failure events.

TABLE 106: PMON RECEIVE CHANGE OF FRAME ALIGNMENT COUNTER (RCFAC) Ś 0xN90B 2 0

0

0

0

Віт	FUNCTION	TYPE	DEFAULT	DESCRIPTION-OPERATION
7	RCFAC[7]	RUR	0	Performance Monitor - Receive Change of Frame Alignment Counter (8-bit Counter)
6	RCFAC[6]	RUR	0	These Reset-Upon-Read bit fields reflect the cumulative number of
5	RCFAC[5]	RUR	0	instances that Receive Change of Framing Alignment have been detected by the T1 Framer since the last read of this register.
4	RCFAC[4]	RUR	0	NOTE: Change of Framing Alignment (COFA) is declared when the
3	RCFAC[3]	RUR	0	newly-locked framing pattern is different from the one offered by off-line framer.
2	RCFAC[2]	RUR	0	
1	RCFAC[1]	RUR	0	
0	RCFAC[0]	RUR	0	

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 107: PMON LAPD1 FRAME CHECK SEQUENCE ERROR COUNTER 1 (LFCSEC1) Hex Address: 0xN90C

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	FCSEC1[7]	RUR	0	Performance Monitor - LAPD 1 Frame Check Sequence Error Counter (8-bit Counter)
6	FCSEC1[6]	RUR	0	These Reset-Upon-Read bit fields reflect the cumulative number of
5	FCSEC1[5]	RUR	0	instances that Frame Check Sequence Error have been detected by the LAPD Controller 1 since the last read of this register.
4	FCSEC1[4]	RUR	0	Ŭ
3	FCSEC1[3]	RUR	0	
2	FCSEC1[2]	RUR	0	
1	FCSEC1[1]	RUR	0	mis reo
0	FCSEC1[0]	RUR	0	in thu

TABLE 108: PRBS BIT ERROR COUNTER MSB (PBECU)

Віт	FUNCTION	Түре	DEFAULT	
7	PRBSE[15]	RUR	0	Pe
6	PRBSE[14]	RUR	0	ן רו
5	PRBSE[13]	RUR	0	ר כ
4	PRBSE[12]	RUR	0	ł
3	PRBSE[11]	RUR	0	r T
2	PRBSE[10]	RUR	6	Ę
1	PRBSE[9]	RUR	6 0 C	1
0	PRBSE[8]	RUR	e e	

രാ

TABLE 109: PRBS BIT ERFOR COUNTER USB (PBECL)

Ø

HEX ADDRESS: 0XN90E

HEX ADDRESS: 0xN90D

Віт	FUNCTION	TYPE	DEFAULT	DESCRIPTION-OPERATION
7	PRBSE[7]	RUR	0	Performance Monitor - T1 PRBS Bit Error 16-Bit Counter - Lower Byte:
6	PRBSE[6]	RUR	0	These RESET-upon-READ bits, along with that within the "PMON
5	PRBSE[5]	RUR	0	T1 PRBS Bit Error Counter Register MSB" combine to reflect the cumulative number of instances that the ReceiveT1 PRBS Bit errors
4	PRBSE[4]	RUR	0	has been detected by the Receive T1 Framer block since the last
3	PRBSE[3]	RUR	0	read of this register. This register contains the Least Significant byte of this 16-bit of the
2	PRBSE[2]	RUR	0	Receive T1 PRBS Bit Error counter.
1	PRBSE[1]	RUR	0	NOTE: For all 16-bit wide PMON registers, user must read the M counter first before reading the LSB counter in order to reading the LSB counter in order to reading the LSB.
0	PRBSE[0]	RUR	0	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.



XRT86VX38

TABLE 110: TRANSMIT SLIP COUNTER (TSC)

HEX ADDRESS: 0xN90F

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxSLIP[7]	RUR	0	Performance Monitor - Transmit Slip Counter (8-bit Counter)
6	TxSLIP[6]	RUR	0	These Reset-Upon-Read bit fields reflect the cumulative number of instances that Transmit Slip events have been detected by the T1
5	TxSLIP[5]	RUR	0	Framer since the last read of this register.
4	TxSLIP[4]	RUR	0	Note: A slip event is defined as a replication or deletion of a T1 frame by the transmit slip buffer.
3	TxSLIP[3]	RUR	0	
2	TxSLIP[2]	RUR	0	
1	TxSLIP[1]	RUR	0	.6 8
0	TxSLIP[0]	RUR	0	this rec

TABLE 111: EXCESSIVE ZERO VIOLATION COUNTER MSB (EZVCU)

HEX ADDRESS: 0xN910

Віт	FUNCTION	Түре	DEFAULT	Description-Operation
7	EZVC[15]	RUR	0	Performance Monitor - T1 Excessive Zero Violation 16-Bit Counter Upper Byte:
6	EZVC[14]	RUR	0	These RESET upon READ bits, along with that within the "PMON
5	EZVC[13]	RUR	0	T1 Excessive Zero Violation Counter Register LSB" combine to reflect the cumulative number of instances that the ReceiveT1
4	EZVC[12]	RUR	0	Excessive Zero Violation has been detected by the Receive T1 Framer block since the last read of this register.
3	EZVC[11]	RUR	0,0	This register contains the Most Significant byte of this 16-bit of the
2	EZVC[10]	RUR	0	Receive T1 Excessive Zero Violation counter. Note: For all 16-bit wide PMON registers, user must read the MSB
1	EZVC[9]	RUR	0	C counter first before reading the LSB counter in order to read
0	EZVC[8]	RUR	30,0	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.

TABLE 112: EXCESSIVE ZERO VIOLATION COUNTER LSB (EZVCL)

Віт		Түре	DEFAULT	DESCRIPTION-OPERATION
7	EZVC[7]	RUR	0	Performance Monitor - T1 Excessive Zero Violation 16-Bit Counter - Lower Byte:
6	EZVC[6]	RUR	0	These RESET-upon-READ bits, along with that within the "PMON
5	EZVC[5]	RUR	0	T1 Excessive Zero Violation Counter Register MSB" combine to reflect the cumulative number of instances that the ReceiveT1
4	EZVC[4]	RUR	0	Excessive Zero Violation has been detected by the Receive T1 Framer block since the last read of this register.
3	EZVC[3]	RUR	0	This register contains the Least Significant byte of this 16-bit of the
2	EZVC[2]	RUR	0	Receive T1 Excessive Zero Violation counter.
1	EZVC[1]	RUR	0	Note: For all 16-bit wide PMON registers, user must read the MSB counter first before reading the LSB counter in order to read
0	EZVC[0]	RUR	0	the accurate PMON counts. To clear PMON count, user must read the MSB counter first before reading the LSB counter in order to clear the PMON count.

XRT86VX38



TABLE 113: PMON LAPD2 FRAME CHECK SEQUENCE ERROR COUNTER 2 (LFCSEC2) Hex Address: 0xN91C

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	FCSEC2[7]	RUR	0	Performance Monitor - LAPD 2 Frame Check Sequence Error
6	FCSEC2[6]	RUR	0	Counter (8-bit Counter) These Reset-Upon-Read bit fields reflect the cumulative number of
5	FCSEC2[5]	RUR	0	instances that Frame Check Sequence Error have been detected by the LAPD Controller 2 since the last read of this register.
4	FCSEC2[4]	RUR	0	
3	FCSEC2[3]	RUR	0	
2	FCSEC2[2]	RUR	0	
1	FCSEC2[1]	RUR	0	this reo
0	FCSEC2[0]	RUR	0	in thus
				6.40

TABLE 114: PMON LAPD2 FRAME CHECK SEQUENCE ERROR COUNTER 3 (LFCSEC3) Hex Address: 0xN92C 0

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	FCSEC3[7]	RUR	0	Performance Monitor LAPD 3 Frame Check Sequence Error
6	FCSEC3[6]	RUR	0	Counter (8-bit Counter) These Reset-Upon-Read bit fields reflect the cumulative number of
5	FCSEC3[5]	RUR	0	instances that Frame Check Sequence Error have been detected by the LAPD Controller 3 since the last read of this register.
4	FCSEC3[4]	RUR	0	P of see
3	FCSEC3[3]	RUR	0	
2	FCSEC3[2]	RUR	00	
1	FCSEC3[1]	RUR	5 03	
0	FCSEC3[0]	RUR	000)
		the data	dmay	



TABLE 115: BLOCK INTERRUPT STATUS REGISTER (BISR)

HEX ADDRESS: 0xNB00

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved			For E1 mode only
6	LBCODE	RO	0	 Loopback Code Block Interrupt Status This bit indicates whether or not the Loopback Code block has an interrupt request awaiting service. 0 - Indicates no outstanding Loopback Code Block interrupt request is awaiting service 1 - Indicates the Loopback Code block has an interrupt request awaiting service. Interrupt Service routine should branch to the interrupt source and read the Loopback Code Interrupt Status register (address 0xNB0A) to clear the interrupt Note: This bit will be teset to 0 after the microprocessor has performed a read to the Loopback Code Interrupt Status Register.
5	RxClkLOS	RO	0	 Loss of Recovered Clock Interrupt Status This bit indicates whether or not the T1 receive framer is currently declaring the "Loss of Recovered Clock" interrupt. 0 = Indicates that the T1 Receive Framer Block is NOT currently declaring the "Loss of Recovered Clock" interrupt. 1 = Indicates that the T1 Receive Framer Block is currently declaring the "Loss of Recovered Clock" interrupt. 1 = Indicates that the T1 Receive Framer Block is currently declaring the "Loss of Recovered Clock" interrupt. 1 = Indicates that the T1 Receive Framer Block is currently declaring the "Loss of Recovered Clock" interrupt. 1 = Indicates that the T1 Receive Framer Block is currently declaring the "Loss of Recovered Clock" interrupt. NoTE: This bit is only active if the clock loss detection feature is enabled (Register - 0xN100)
4	ONESEC	RO	or prov	One Second Interrupt Status This bit indicates whether or not the T1 receive framer block is cur- rently declaring the "One Second" interrupt. 0 Indicates that the T1 Receive Framer Block is NOT currently declaring the "One Second" interrupt. 1 = Indicates that the T1 Receive Framer Block is currently declar- ing the "One Second" interrupt.
3	HDLC	Role	0	 HDLC Block Interrupt Status This bit indicates whether or not the HDLC block has any interrupt request awaiting service. 0 = Indicates no outstanding HDLC block interrupt request is awaiting service 1 = Indicates HDLC Block has an interrupt request awaiting service. Interrupt Service routine should branch to the interrupt source and read the corresponding Data LInk Status Registers (address 0xNB06, 0xNB16, 0xNB26, 0xNB10, 0xNB18, 0xNB28) to clear the interrupt. Note: This bit will be reset to 0 after the microprocessor has performed a read to the corresponding Data Link Status Registers that generated the interrupt.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 115: BLOCK INTERRUPT STATUS REGISTER (BISR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	SLIP	RO	0	 Slip Buffer Block Interrupt Status This bit indicates whether or not the Slip Buffer block has any outstanding interrupt request awaiting service. 0 = Indicates no outstanding Slip Buffer Block interrupt request is awaiting service 1 = Indicates Slip Buffer block has an interrupt request awaiting service. Interrupt Service routine should branch to the interrupt source and read the Slip Buffer Interrupt Status register (address 0xNB08) to clear the interrupt
				Note: This bit will be reset to 0 after the microprocessor has performed a read to the Slip Buffer Interrupt Status Register.
1	ALARM	RO	0	 Alarm & Error Block Interrupt Status This bit indicates whether or not the Alarm & Error Block has any outstanding interrupt request awaiting service. 0 = Indicates no outstanding interrupt request is awaiting service 1 = Indicates the Alarm & Error Block has an interrupt request awaiting service. Interrupt service routine should branch to the interrupt source and read the corresponding alarm and error status registers (address 0xNB02, 0xNB0E, 0xNB40) to clear the interrupt. Note: This bit will be reset to 0 after the microprocessor has performed a read to the corresponding Alarm & Error Interrupt Status register that generated the interrupt.
0	T1 FRAME	RO	o uctore heet no	 Tri Framer Block Interrupt Status This bit indicates whether or not the T1 Framer block has any outstanding interrupt request awaiting service. Indicates no outstanding interrupt request is awaiting service. Indicates the T1 Framer Block has an interrupt request awaiting service. Interrupt service routine should branch to the interrupt source and read the T1 Framer status register (address 0xNB04) to clear the interrupt Note: This bit will be reset to 0 after the microprocessor has performed a read to the T1 Framer Interrupt Status register.
		the ato	dma	





TABLE 116: BLOCK INTERRUPT ENABLE REGISTER (BIER)

HEX ADDRESS: 0xNB01

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved			For E1 mode only
6	LBCODE_ENB	R/W	0	Loopback Code Block interrupt enable
				This bit permits the user to either enable or disable the Loopback Code Interrupt Block for interrupt generation.
				Writing a "0" to this register bit will disable the Loopback Code Block for interrupt generation, all Loopback Code interrupts will be dis- abled for interrupt generation.
				If the user writes a "1" to this register bit, the Loopback Code Inter- rupts at the "Block Level" will be enabled. However, the individual Loopback Code interrupts at the "Source Level" still need to be enabled to in order to generate that particular interrupt to the inter- rupt pin. 0 - Disables all Loopback Code Interrupt Block interrupt within the device.
				1 - Enables the Loopback Code interrupt at the "Block-Level".
5	RXCLKLOSS	R/W	0	Loss of Recovered Clock Interrupt Enable
				This bit permits the user to either enable or disable the Loss of Recovered Clock Interrupt for interrupt generation.
				0 - Disables the Loss of Recovered Clock Interrupt within the device.
				1 - Enables the Loss of Recovered Clock interrupt at the "Source-Level".
4	ONESEC_ENB	R/W	0 🗙	One Second Interrupt Enable
			NOU	This bit permits the user to either enable or disable the One Second Interrupt for interrupt generation.
			1×20	0 - Disables the One Second Interrupt within the device.
		1		CEnables the One Second interrupt at the "Source-Level".
3	HDLC_ENB	R/W	0 0	HDLC Block Interrupt Enable
		20		This bit permits the user to either enable or disable the HDLC Block for interrupt generation.
				Writing a "0" to this register bit will disable the HDLC Block for inter-
	net	5 10 10	or pro	rupt generation, all HDLC interrupts will be disabled for interrupt generation.
		6		If the user writes a "1" to this register bit, the HDLC Block interrupt at
	V	All I		the "Block Level" will be enabled. However, the individual HDLC
		U.		interrupts at the "Source Level" still need to be enabled in order to generate that particular interrupt to the interrupt pin.
				0 - Disables all SA6 Block interrupt within the device.
				1 - Enables the SA6 interrupt at the "Block-Level".

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 116: BLOCK INTERRUPT ENABLE REGISTER (BIER)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	SLIP_ENB	R/W	0	 Slip Buffer Block Interrupt Enable This bit permits the user to either enable or disable the Slip Buffer Block for interrupt generation. Writing a "0" to this register bit will disable the Slip Buffer Block for interrupt generation, then all Slip Buffer interrupts will be disabled for interrupt generation. If the user writes a "1" to this register bit, the Slip Buffer Block interrupt at the "Block Level" will be enabled. However, the individual Slip Buffer interrupts at the "Source Level" still need to be enabled in order to generate that particular interrupt to the interrupt pin. 0 - Disables all Slip Buffer Block interrupt at the "Block the Slip Buffer Block interrupt at the Slip Buffer Block interrupt at the "Block Level".
1	ALARM_ENB	R/W	0	 Alarm & Error Block Interrupt Enable This bit permits the user to either enable or disable the Alarm & Error Block for interrupt generation. Writing a "0" to this register bit will disable the Alarm & Error Block for interrupt generation, then all Alarm & Error interrupts will be disabled for interrupt generation. If the user writes a "1" to this register bit, the Alarm & Error Block interrupt at the "Block Level" will be enabled. However, the individual Alarm & Error interrupts at the "Source Level" still need to be enabled in order to generate that particular interrupt to the interrupt pin. O - Disables all Alarm & Error Block interrupt at the "Block-Level".
0	T1FRAME_ENB	R/W	o p uct are heet no	 T1 Framer Block Enable This bitpermits the user to either enable or disable the T1 Framer Block for interrupt generation. Writing a "0" to this register bit will disable the T1 Framer Block for interrupt generation, then all T1 Framer interrupts will be disabled for interrupt generation. If the user writes a "1" to this register bit, the T1 Framer Block interrupt at the "Block Level" will be enabled. However, the individual T1 Framer interrupts at the "Source Level" still need to be enabled in order to generate that particular interrupt to the interrupt pin. 0 - Disables all T1 Framer Block interrupt at the "Block Level".





TABLE 117: ALARM & ERROR INTERRUPT STATUS REGISTER (AEISR)

HEX ADDRESS: 0xNB02

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Rx OOF State	RO	0	 Receive Out of Frame Defect State This READ-ONLY bit indicates whether or not the Receive T1 Framer block is currently declaring the "Out of Frame" defect condition within the incoming T1 data-stream, as described below. Out of Frame defect condition is declared when "TOLR" out of "RANG" errors in the framing bit pattern is detected. (Register 0xN10B) 0 – The Receive T1 Framer block is NOT currently declaring the "Out of Frame" defect condition. 1 – The Receive T1 Framer block is currently declaring the "Out of Frame" defect condition.
6	RxAIS State	RO	0	 Receive Alarm Indication Status Defect State This READ-ONLY bit indicates whether or not the Receive T1 Framer block is currently declaring the AIS defect condition within the incoming T1 data-stream, as described below. AIS defect is declared when AIS condition persists for 42 milliseconds. AIS defect is cleared when AIS condition is absent for 42 milliseconds. 0 – The Receive T1 Framer block is NOT currently declaring the AIS defect condition. 1 – The Receive T1 Framer block is currently declaring the AIS defect condition.
5	RxYEL State	RO	oroduc	 Receive Yellow Alarm State This READ-ONLY bit indicates whether or not the Receive T1 Framer block is currently declaring the Yellow Alarm condition within the incoming T1 datastream, as described below. Yellow alarm or Remote Alarm Indication (RAI) is declared when RAI condition persists for 900 milliseconds. Yellow alarm or RAI is cleared immediately when RAI condition is absent even if the T1 Framer is receiving T1 Idle or RAI-CI signatures in ESF mode. 0 – The Receive T1 Framer block is NOT currently declaring the Yellow Alarm condition. 1 – The Receive T1 Framer block is currently declaring the Yellow Alarm condition.
4	LOS_State	RO	datand	Framer Receive Loss of Signal (LOS) State This READ-ONLY bit indicates whether or not the Receive T1 framer is currently declaring the Loss of Signal (LOS) condition within the incoming T1 data-stream, as described below LOS defect is declared when LOS condition persists for 175 consecutive bits. LOS defect is cleared when LOS condition is absent or when the received signal reaches a 12.5% ones density for 175 consecutive bits. 0 = The Receive T1 Framer block is NOT currently declaring the Loss of Signal (LOS) condition. 1 = The Receive T1 Framer block is currently declaring the Loss of Signal (LOS) condition.
3	LCV Int Status	RUR/ WC	0	Line Code Violation Interrupt Status. This Reset-Upon-Read bit field indicates whether or not the Receive T1 LIU block has detected a Line Code Violation interrupt since the last read of this register. 0 = Indicates no Line Code Violation have occurred since the last read of this reg- ister. 1 = Indicates one or more Line Code Violation interrupt has occurred since the last read of this register.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 117: ALARM & ERROR INTERRUPT STATUS REGISTER (AEISR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	Rx OOF State Change	RUR/ WC	0	 Change in Receive Out of Frame Defect Condition Interrupt Status. This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Out of Frame Defect Condition" interrupt has occurred since the last read of this register. Out of Frame defect condition is declared when "TOLR" out of "RANG" errors in the framing bit pattern is detected. (Register 0xN10B) If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block declares the Out of Frame defect condition. 2. Whenever the Receive T1 Framer block clears the Out of Frame defect condition. 0 = Indicates that the "Change in Receive Out of Frame defect condition" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Out of Frame defect condition" interrupt has not occurred since the last read of this register
1	RxAIS State Change	RUR/ WC	0	 Change in Receive AIS Condition Interrupt Status. This Reset-Upon-Read bit field indicates whether or not the "Change in Receive AIS Condition" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block declares the AIS condition. 2. Whenever the Receive T1 Framer block clears the AIS condition 0 = Indicates that the "Change in Receive AIS condition" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive AIS condition" interrupt has occurred since the last read of this register
0	RxYEL State Change	RUR/ WC	o the proc	 Change in Receive Yellow Alarm Interrupt Status. This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Yellow Alarm Condition" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block declares the Yellow Alarm condition. Whenever the Receive T1 Framer block clears the Yellow Alarm condition. Whenever the Receive T1 Framer block clears the Yellow Alarm condition 0 = Indicates that the "Change in Receive Yellow Alarm condition" interrupt has not occurred since the last read of this register I = Indicates that the "Change in Receive Yellow Alarm condition" interrupt has occurred since the last read of this register





TABLE 118: ALARM & ERROR INTERRUPT ENABLE REGISTER (AEIER)

HEX ADDRESS: 0xNB03

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-5	Reserved	-	-	Reserved (E1 mode only)
4	-	-	-	This bit should be set to'0' for proper operation.
3	LCV ENB	R/W	0	Line Code violation interrupt enable This bit permits the user to either enable or disable the "Line Code Viola- tion" interrupt within the XRT86VX38 device. If the user enables this inter- rupt, then the Receive T1 Framer block will generate an interrupt when Line Code Violation is detected. 0 = Disables the interrupt generation when Line Code Violation is detected. 1 = Enables the interrupt generation when Line Code Violation is detected.
2	RxOOF ENB	R/W	0	 Change in Out of Frame Defect Condition interrupt enable This bit permits the user to either enable or disable the "Change in Out of Frame Defect Condition" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. The instant that the Receive T1 Framer block declares the Out of Frame defect condition. 2. The instant that the Receive T1 Framer block clears the Out of Frame defect condition. 0 – Disables the "Change in Out of Frame Defect Condition" Interrupt. 1 – Enables the "Change in Out of Frame Defect Condition" Interrupt.
1	RxAIS ENB	R/W	o duct of sheet	 Change in AIS Condition interrupt enable This bit permits the user to either enable or disable the "Change in AIS Condition" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt in tesponse to either one of the following conditions. 1. The instant that the Receive T1 Framer block declares the AIS condition. 2 The instant that the Receive T1 Framer block clears the AIS condition. 0 – Disables the "Change in AIS Condition" Interrupt. 1 – Enables the "Change in AIS Condition" Interrupt.
0	RXYEL ENB	RW	and on	 Change in Yellow alarm Condition interrupt enable This bit permits the user to either enable or disable the "Change in Yellow Alarm Condition" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. The instant that the Receive T1 Framer block declares the Yellow Alarm condition. 2. The instant that the Receive T1 Framer block clears the Yellow Alarm condition. 0 – Disables the "Change in Yellow Alarm Condition" Interrupt. 1 – Enables the "Change in Yellow Alarm Condition" Interrupt.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 119: FRAMER INTERRUPT STATUS REGISTER (FISR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	DS0_Change	RUR	0	 Change in DS-0 Yellow Alarm Interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in DS-0 Yellow Alarm" interrupt has occurred since the last read of this register. 0 - Indicates that the "Change in DS-0 Yellow Alarm" interrupt has not occurred since the last read of this register. 1 - Indicates that the "Change in DS-0 Yellow Alarm" interrupt has occurred since the last read of this register. 1 - Indicates that the "Change in DS-0 Yellow Alarm" interrupt has occurred since the last read of this register. Note: By default, DS-0 Yellow Alarm is detected on the Ingress (RTip/RRing) side. To detect DS-0 YEL on the Egress (TxSER) side, the DS-0 Switch bit (bit 2) must be set to "1" in register 0xN112.
6	DS0_Status	RO	0	 DS-0 Yellow Alarm Interrupt Status This Read Only bit will indicate the state of the DS-0 Yellow Alarm detection. When a DS-0 Yellow alarm is present, this bit will be pulled "High". When a DS-0 Yellow Alarm is not present, this bit will remain "Low". 0 - DS-0 Yellow Alarm is not Detected 1 - DS-0 Yellow Alarm is Detected Note: By default, DS-0 Yellow Alarm is detected on the Ingress (RTip/ RRing) side. To detect DS-0 YEL on the Egress (TxSER) side, the DS-0 Switch bit (bit 2) must be set to "1" in register 0xN112.
5	SIG	RUR/ WC	o toolice	 Change in Signaling Bits Interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Signaling Bits" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt whenever any one of the four signaling bits values (A,B,C,D) has changed in any one of the 24 channels within the incoming T1 trames. Users can read the signaling change registers (address 0xN10D-0xN10F) to determine which signalling channel has changed. 0 = Indicates that the "Change in Signaling Bits" interrupt has not occurred since the last read of this register. 1 = Indicates that the "Change in Signaling Bits" interrupt has occurred since the last read of this register. 1 = Indicates that the "Change in Signaling Bits" interrupt has occurred since the last read of this register.
4	COFA	RUR/ WC	ata and m	 Change of Frame Alignment (COFA) Interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change of Framing Alignment (COFA)" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt whenever the Receive T1 Framer block detects a Change of Framing Alignment Signal (e.g., the Framing bits have appeared to move to a different location within the incoming T1 data stream). 0 = Indicates that the "Change of Framing Alignment (COFA)" interrupt has not occurred since the last read of this register. 1 = Indicates that the "Change of Framing Alignment (COFA)" interrupt has occurred since the last read of this register.





TABLE 119: FRAMER INTERRUPT STATUS REGISTER (FISR)

HEX ADDRESS: 0xNB04

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	OOF_Status	RUR/ WC	0	Change in Receive Out of Frame Defect Condition Interrupt Status . This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Out of Frame Defect Condition" interrupt has occurred since the last read of this register.
				Out of Frame defect condition is declared when "TOLR" out of "RANG" errors in the framing bit pattern is detected. (Register 0xN10B)
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.
				 Whenever the Receive T1 Framer block declares the Out of Frame defect condition.
				 Whenever the Receive T1 Framer block clears the Out of Frame defect condition
				0 = Indicates that the "Change in Receive Out of Frame defect condition" interrupt has not occurred since the last read of this register
				1 = Indicates that the "Change in Receive Out of Frame defect condition" interrupt has occurred since the last read of this register
2	FMD	RUR/ WC	0	Frame Mimic Detection Interrupt Status This Reset-Upon Read bit field indicates whether or not the "Frame Mimic Detection" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will
				generate an interrupt whenever the Receive T1 Framer block detects the presence of Frame Minic bits (i.e., the Payload bits have appeared to mimic the Framing Bit pattern within the incoming T1 data stream). 0 – Indicates that the "Frame Mimic Detection" interrupt has not occurred since the last read of this register.
			lot 9	1 = Indicates that the "Frame Mimic Detection" interrupt has occurred since the last read of this register.
1	SE	RUR/ WC	ucto ar	Synchronization Bit Error (CRC-6) Interrupt Status The Reset-Upon-Read bit field indicates whether or not the "CRC-6 Error" interrupt has occurred since the last read of this register.
		oro	nein	If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt whenever the Receive T1 Framer block detects a
	~	10 JO	mar	CRC-6 Error within the incoming T1 multiframe. 0 = Indicates that the "CRC-6 Error" interrupt has not occurred since the
		20	No.	last read of this register. 1 = Indicates that the "CRC-6 Error" interrupt has occurred since the last read of this register.
0	FE	RUR/	0	Framing Error Interrupt Status
		WC		This Reset-Upon-Read bit field indicates whether or not a "Framing Error" interrupt has occurred since the last read of this register.
				If this interrupt is enabled, then the Receive T1 Framer block will
				generate an interrupt whenever the Receive T1 Framer block detects one or more Framing Alignment Bit Error within the incoming T1 data stream.
				0 = Indicates that the "Framing Error" interrupt has not occurred since the last read of this register.
				1 = Indicates that the "Framing Error" interrupt has occurred since the last read of this register.
				Note: This bit doesn't not necessarily indicate that synchronization has been lost.

TABLE 120: FRAMER INTERRUPT ENABLE REGISTER (FIER)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	DS0 ENB	R/W	0	 DS-0 Yellow Alarm This bit is used to enable or disable the DS-0 Yellow Alarm interrupt within the framer block. This yellow alarm is independent of the framing format selected. Any time a DS-0 Yellow Alarm occurs (bit 2 = 0 in each DS-0 time slot), bit 7 and bit 6 in register 0xNB04 will report the status. 0 - Disables the interrupt generation 1 - Enables the interrupt generation Note: By default, DS-0 Yellow Alarm is detected on the Ingress (RTip/ RRing) side. To detect DS-0 YEL on the Egress (TxSER) side, the DS-0 Switch bit (bit 2) must be set to "1" in register 0xN112.
6	Reserved	-	-	Reserved
5	SIG_ENB	R/W	0	Change in Signaling Bits Interrupt Enable This bit permits the user to either enable or disable the "Change in Sig- naling Bits" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an inter- rupt when it detects a change in the any four signaling bits (A,B,C,D) in any one of the 24 signaling channels. Users can read the signaling change registers (address 0xN10D-0xN10F) to determine which sig- nalling channel has changed state. 0 - Disables the Change in Signaling Bits Interrupt 1 - Enables the Change in Signaling Bits Interrupt Nore: This bit has no meaning when Robbed-Bit Signaling is disabled.
4	COFA_ENB	R/W	out of a sheat	 Change of Framing Alignment (COFA) Interrupt Enable This bit permits the user to either enable or disable the "Change in FAS Framing Alignment (COFA)" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt when it detects a Change of Framing Alignment Signal (e.g., the Framing bits have appeared to move to a different location within the incoming T1 data stream). 0 - Disables the "Change of Framing Alignment (COFA)" Interrupt. 1 - Enables the "Change of Framing Alignment (COFA)" Interrupt.
3	OOF_ENB	R/W	inde	 Change in Out of Frame Defect Condition interrupt enable This bit permits the user to either enable or disable the "Change in Out of Frame Defect Condition" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. The instant that the Receive T1 Framer block declares the Out of Frame defect condition. 2. The instant that the Receive T1 Framer block clears the Out of Frame defect condition. 0 – Disables the "Change in Out of Frame Defect Condition" Interrupt. 1 – Enables the "Change in Out of Frame Defect Condition" Interrupt.





TABLE 120: FRAMER INTERRUPT ENABLE REGISTER (FIER)

HEX ADDRESS: 0xNB05

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	FMD_ENB	R/W	0	 Frame Mimic Detection Interrupt Enable This bit permits the user to either enable or disable the "Frame Mimic Detection" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt when it detects the presence of Frame mimic bits (i.e., the payload bits have appeared to mimic the framing bit pattern within the incoming T1 data stream). 0 - Disables the "Frame Mimic Detection" Interrupt. 1 - Enables the "Frame Mimic Detection" Interrupt.
1	SE_ENB	R/W	0	Synchronization Bit (CRC-6) Error Interrupt Enable This bit permits the user to either enable or disable the "CRC-6 Error Detection" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an inter- rupt when it detects a CRC-6 error within the incoming T1 multiframe. 0 - Disables the "CRC-6 Error Detection" Interrupt. 1 - Enables the "CRC-6 Error Detection" Interrupt.
0	FE_ENB	R/W	0	 Framing Bit Error Interrupt Enable This bit permits the user to either enable or disable the "Framing Alignment Bit Error Detection" Interrupt, within the XRT86VX38 device. If the user enables this interrupt, then the Receive T1 Framer block will generate an interrupt when it detects one or more Framing Alignment Bit error within the incoming T1 data stream. O-Disables the "Framing Alignment Bit Error Detection" Interrupt. 1 - Enables the "Framing Alignment Bit Error Detection" Interrupt. Note: Detecting Framing Alignment Bit Error doesn't not necessarily indicate that synchronization has been lost.

The data and may not be and may not be



TABLE 121: DATA LINK STATUS REGISTER 1 (DLSR1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	MSG TYPE	RO	0	HDLC1 Message Type Identifier This READ ONLY bit indicates the type of data link message received by Receive HDLC 1 Controller. Two types of data link mes- sages are supported within the XRT86VX38 device: Message Ori- ented Signaling (MOS) or Bit-Oriented Signalling (BOS). 0 = Indicates Bit-Oriented Signaling (BOS) type data link message is received 1 = Indicates Message Oriented Signaling (MOS) type data link message is received
6	TxSOT	RUR/ WC	0	Transmit HDLC1 Controller Start of Transmission (TxSOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the "Transmit HDLC1 Controller Start of Transmission (TxSOT) "Interrupt has occurred since the last read of this register. Transmit HDLC1 Con- troller will declare this interrupt when it has started to transmit a data link message. For sending large HDLC messages, start loading the next available buffer once this interrupt is detected. 0 = Transmit HDLC1 Controller Start of Transmission (TxSOT) inter- rupt has not occurred since the last read of this register 1 = Transmit HDLC1 Controller Start of Transmission interrupt (TxSOT) has occurred since the last read of this register.
5	RxSOT	RUR/ WC	o uct are	Receive HDLC1 Controller Start of Reception (RxSOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receive HDLC1 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register. Receive HDLC1 Con- troller will declare this interrupt when it has started to receive a data link message. 0 Receive HDLC1 Controller Start of Reception (RxSOT) interrupt has not occurred since the last read of this register 1 = Receive HDLC1 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register
4	TxEOT	RURA	0110	Transmit HDLC1 Controller End of Transmission (TxEOT) Inter- rupt Status This Reset-Upon-Read bit indicates whether or not the Transmit HDLC1 Controller End of Transmission (TxEOT) Interrupt has occurred since the last read of this register. Transmit HDLC1 Con- troller will declare this interrupt when it has completed its transmis- sion of a data link message. For sending large HDLC messages, it is critical to load the next available buffer before this interrupt occurs. 0 = Transmit HDLC1 Controller End of Transmission (TxEOT) inter- rupt has not occurred since the last read of this register 1 = Transmit HDLC1 Controller End of Transmission (TxEOT) inter- rupt has occurred since the last read of this register



TABLE 121: DATA LINK STATUS REGISTER 1 (DLSR1)

HEX ADDRESS: 0xNB06

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	RxEOT	RUR/ WC	0	Receive HDLC1 Controller End of Reception (RxEOT) Interrupt Status
				This Reset-Upon-Read bit indicates whether or not the Receive HDLC1 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register. Receive HDLC1 Controller will declare this interrupt once it has completely received a full data link message, or once the buffer is full.
				0 = Receive HDLC1 Controller End of Reception (RxEOT) interrupt has not occurred since the last read of this register
				1 = Receive HDLC1 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register
2	FCS Error	RUR/ WC	0	FCS Error Interrupt Status This Reset-Upon-Read bit indicates whether or not the FCS Error Interrupt has occurred since the last read of this register. Receive HDLC1 Controller will declare this interrupt when it has detected the FCS error in the most recently received data link message. 0 = FCS Error interrupt has not occurred since the last read of this register
				1 = FCS Error interrupt has occurred since the last read of this regis- ter
1	Rx ABORT	RUR/ WC	o	Receipt of Abort Sequence Interrupt Status This Reset-Upon Read bit indicates whether or not the Receipt of Abort Sequence interrupt has occurred since last read of this regis- ter. Receive HDLC1 Controller will declare this interrupt if it detects the Abort Sequence (i.e. a string of seven (7) consecutive 1's) in the incoming data link channel.
		1	orpho	0 = Receipt of Abort Sequence interrupt has not occurred since last read of this register
			, ste p	1 = Receipt of Abort Sequence interrupt has occurred since last read of this register
0	RxIDLE	RUR/		Receipt of Idle Sequence Interrupt Status
	the	to d	131	This Reset-Upon-Read bit indicates whether or not the Receipt of Idle Sequence interrupt has occurred since the last read of this register. The Receive HDLC1 Controller will declare this interrupt if it detects the flag sequence octet (0x7E) in the incoming data link channel. If RxIDLE "AND" RxEOT occur together, then the entire HDLC message has been received.
		-		0 = Receipt of Idle Sequence interrupt has not occurred since last read of this register
				1 = Receipt of Idle Sequence interrupt has occurred since last read of this register.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 122: DATA LINK INTERRUPT ENABLE REGISTER 1 (DLIER1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	-	-	Reserved
6	TxSOT ENB	R/W	0	Transmit HDLC1 Controller Start of Transmission (TxSOT) Interrupt Enable This bit enables or disables the "Transmit HDLC1 Controller Start of Transmission (TxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Transmit HDLC1 Controller will generate an interrupt when it has started to transmit a data link mes- sage. 0 = Disables the Transmit HDLC1 Controller Start of Transmission (TxSOT) interrupt. 1 = Enables the Transmit HDLC7 Controller Start of Transmission (TxSOT) interrupt.
5	RXSOT ENB	R/W	0	Receive HDLC1 Controller Start of Reception (RxSOT) Interrupt Enable This bit enables or disables the "Receive HDLC1 Controller Start of Reception (RxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC1 Controller will generate an interrupt when it has started to receive a data link message. 0 = Disables the Receive HDLC1 Controller Start of Reception (RxSOT) interrupt. 1 = Enables the Receive HDLC1 Controller Start of Reception (RxSOT) interrupt.
4	TxEOT ENB	R/W	o uctore	Transmit HDLC1 Controller End of Transmission (TxEOT) Inter- rupt EnableThis bit enables or disables the "Transmit HDLC1 Controller End of Transmission (TxEOT) "Interrupt within the XRT86VX38 device.Once this interrupt is enabled, the Transmit HDLC1 Controller will generate an interrupt when it has finished transmitting a data link message.0 = Disables the Transmit HDLC1 Controller End of Transmission (TxEOT) interrupt.1 = Enables the Transmit HDLC1 Controller End of Transmission (TxEOT) interrupt.
3	RXEOT ENB	BAV	0	Receive HDLC1 Controller End of Reception (RxEOT) Interrupt Enable This bit enables or disables the "Receive HDLC1 Controller End of Reception (RxEOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC1 Controller will generate an interrupt when it has finished receiving a complete data link mes- sage. 0 = Disables the Receive HDLC1 Controller End of Reception (RxEOT) interrupt. 1 = Enables the Receive HDLC1 Controller End of Reception (RxEOT) interrupt.





TABLE 122: DATA LINK INTERRUPT ENABLE REGISTER 1 (DLIER1)

HEX ADDRESS: 0xNB07

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	FCS ERR ENB	R/W	0	FCS Error Interrupt Enable This bit enables or disables the "Received FCS Error "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC1 Controller will generate an interrupt when it has detected the FCS error within the incoming data link message. 0 = Disables the "Receive FCS Error" interrupt. 1 = Enables the "Receive FCS Error" interrupt.
1	RXABORT ENB	R/W	0	Receipt of Abort Sequence Interrupt Enable This bit enables or disables the "Receipt of Abort Sequence" Inter- rupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC1 Controller will generate an interrupt when it has detected the Abort Sequence (i.e. a string of seven (7) consecutive 1's) within the incoming data link channel. 0 = Disables the "Receipt of Abort Sequence" interrupt. 1 = Enables the "Receipt of Abort Sequence" interrupt.
0	RXIDLE ENB	R/W	0	Receipt of Idle Sequence Interrupt Enable This bit enables or disables the "Receipt of Idle Sequence" Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC1 Controller will generate an interrupt when it has detected the Idle Sequence Octet (i.e. 0x7E) within the incoming data link channel. 0 = Disables the "Receipt of Idle Sequence" interrupt. 1 = Enables the "Receipt of Idle Sequence" interrupt.

the data interest of the data interest of the data interest of the original interest of the orig

TABLE 123: SLIP BUFFER INTERRUPT STATUS REGISTER (SBISR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxSB_FULL	RUR/ WC	0	Transmit Slip buffer Full Interrupt Status This Reset-Upon-Read bit indicates whether or not the Transmit Slip Buffer Full interrupt has occurred since the last read of this register. The transmit Slip Buffer Full interrupt is declared when the transmit slip buffer is filled. If the transmit slip buffer is full and a WRITE oper- ation occurs, then a full frame of data will be deleted, and this inter- rupt bit will be set to '1'. 0 = Indicates that the Transmit Slip Buffer Full interrupt has not occurred since the last read of this register. 1 = Indicates that the Transmit Slip Buffer Full interrupt has occurred
6	TxSB_EMPT	RUR/ WC	0	since the last read of this register. Transmit Slip buffer Empty Interrupt Status This Reset-Upon-Read bit indicates whether or not the Transmit Slip Buffer Empty interrupt has occurred since the last read of this regis- ter. The transmit Slip Buffer Empty interrupt is declared when the transmit slip buffer is emptied. If the transmit slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. 0 = Indicates that the Transmit Slip Buffer Empty interrupt has not occurred since the last read of this register. 1 = Indicates that the Transmit Slip Buffer Empty interrupt has occurred since the last read of this register.
5	TxSB_SLIP	RUR/ WC	o uct or of theet may	 Transmit Slip Buffer Slips Interrupt Status This Reset-Upon-Read bit indicates whether or not the Transmit Slip Buffer Slips interrupt has occurred since the last read of this register. The transmit Slip Buffer Slips interrupt is declared when the transmit slip buffer is either filled or emptied. This interrupt bit will be set to '1' in either one of these two conditions: 1. If the transmit slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. 2. If the transmit slip buffer is full and a WRITE operation occurs, then a full frame of data will be deleted, and this interrupt bit will be set to '1'. 0 = Indicates that the Transmit Slip Buffer Slips interrupt has not occurred since the last read of this register. 1 = Indicates that the Transmit Slip Buffer Slips interrupt has not occurred since the last read of this register. NOTE: Users still need to read the Transmit Slip Buffer Empty Interrupt (bit 6 of this register) or the Transmit Slip Buffer Full Interrupts (bit 7 of this register) to determine whether transmit slip buffer empties or fills.





TABLE 123: SLIP BUFFER INTERRUPT STATUS REGISTER (SBISR)

HEX ADDRESS: 0XNB08

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4	SLC®96 LOCK	RO	0	 SLC®96 is in SYNC This READ ONLY bit field indicates whether or not frame synchronization is achieved when the XRT86VX38 is configured in SLC®96 framing mode. 0 = Indicates that frame synchronization is not achieved in SLC®96 framing mode. 1 = Indicates that frame synchronization is achieved in SLC®96 framing mode.
3	Multiframe LOCK	RO	0	Multiframe is in SYNC This READ ONLY bit field indicates whether or not the T1 Receive Framer Block is declaring T1 Multiframe LOCK status. 0 = Indicates that the T1 Receive Framer is currently declaring T1 multiframe LOSS OF LOCK status 0 = Indicates that the T1 Receive Framer is currently declaring T1 multiframe LOCK status
2	RxSB_FULL	RUR/ WC	o	Receive Slip buffer Full Interrupt Status This Reset Upon-Read bit indicates whether or not the Receive Slip Buffer Full interrupt has occurred since the last read of this register. The Receive Slip Buffer Full interrupt is declared when the receive slip buffer is filled. If the receive slip buffer is full and a WRITE oper- ation occurs, then a full frame of data will be deleted, and this inter- rupt bit will be set to '1'. 0 = Indicates that the Receive Slip Buffer Full interrupt has not occurred since the last read of this register. 1 = Indicates that the Receive Slip Buffer Full interrupt has occurred since the last read of this register.

The product are not of the product are not the product are not the product are not the product and the product are not the pro

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 123: SLIP BUFFER INTERRUPT STATUS REGISTER (SBISR)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	RxSB_EMPT	RUR/ WC	0	Receive Slip buffer Empty Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receive Slip Buffer Empty interrupt has occurred since the last read of this regis- ter. The Receive Slip Buffer Empty interrupt is declared when the receive slip buffer is emptied. If the receive slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. 0 = Indicates that the Receive Slip Buffer Empty interrupt has not occurred since the last read of this register. 1 = Indicates that the Receive Slip Buffer Empty interrupt has occurred since the last read of this register.
0	RxSB_SLIP	RUR/ WC	0 JCL OF P	 Receive Slip Buffer Slips Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receive Slip Buffer Slips interrupt has occurred since the last read of this register. The Receive Slip Buffer Slips interrupt is declared when the receive slip buffer is either filled or emptied. This interrupt bit will be set to '1' in either one of these two conditions: If the receive slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. If the receive slip buffer is full and a WRITE operation occurs, then a full frame of data will be deleted, and this interrupt bit will be set to '1. If the receive slip buffer is full and a WRITE operation occurs, then a full frame of data will be deleted, and this interrupt bit will be set to '1. If the receive slip buffer slips Buffer Slips interrupt has not occurred since the last read of this register. Indicates that the Receive Slip Buffer Slips interrupt has occurred since the last read of this register. Note: Users still need to read the Receive Slip Buffer Empty Interrupt (bit 1 of this register) or the Receive Slip Buffer Empty Interrupts (bit 2 of this register) to determine whether transmit slip buffer empties or fills.





TABLE 124: SLIP BUFFER INTERRUPT ENABLE REGISTER (SBIER)

HEX ADDRESS: 0xNB09

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	TxFULL_ENB	R/W	0	Transmit Slip Buffer Full Interrupt Enable This bit enables or disables the Transmit Slip Buffer Full interrupt within the XRT86VX38 device. Once this interrupt is enabled, the transmit Slip Buffer Full interrupt is declared when the transmit slip buffer is filled. If the transmit slip buffer is full and a WRITE opera- tion occurs, then a full frame of data will be deleted, and the interrupt status bit will be set to '1'. 0 - Disables the Transmit Slip Buffer Full interrupt when the Transmit Slip Buffer fills 1 - Enables the Transmit Slip Buffer Full interrupt when the Transmit Slip Buffer fills.
6	TxEMPT_ENB	R/W	0	Transmit Slip Buffer Empty Interrupt EnableThis bit enables or disables the Transmit Slip Buffer Empty interruptwithin the XRT86VX38 device. Once this interrupt is enabled, thetransmit Slip Buffer Empty interrupt is declared when the transmitslip buffer is emptied. If the transmit slip buffer is emptied and aREAD operation occurs, then a full frame of data will be repeated,and the interrupt status bit will be set to '1'.0 - Disables the Transmit Slip Buffer Empty interrupt when theTransmit Slip Buffer Empty interrupt when the
5	TxSLIP_ENB	R/W	or prod	 Transmit Sip Buffer Slips Interrupt Enable This bit enables or disables the Transmit Slip Buffer Slips interrupt within the XRT86VX38 device. Once this interrupt is enabled, the transmit Slip Buffer Slips interrupt is declared when either the transmit slip buffer is filled or emptied. If the transmit slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and the interrupt status bit will be set to '1'. The interrupt status bit will be set to '1' in either one of these two conditions: If the transmit slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. If the transmit slip buffer is full and a WRITE operation occurs, then a full frame of data will be deleted, and this interrupt bit will be set to '1'. If the transmit Slip Buffer Slips interrupt when the Transmit Slip Buffer empties or fills Enables the Transmit Slip Buffer Slips interrupt when the Transmit Slip Buffer empties or fills.
4-3	Reserved	-	-	Reserved

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 124: SLIP BUFFER INTERRUPT ENABLE REGISTER (SBIER)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	RxFULL_ENB	R/W	0	Receive Slip Buffer Full Interrupt Enable This bit enables or disables the Receive Slip Buffer Full interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive Slip Buffer Full interrupt is declared when the receive slip buffer is filled. If the Receive slip buffer is full and a WRITE opera- tion occurs, then a full frame of data will be deleted, and the interrupt status bit will be set to '1'. 0 - Disables the Receive Slip Buffer Full interrupt when the Transmit Slip Buffer fills 1 - Enables the Receive Slip Buffer Full interrupt when the Transmit Slip Buffer fills.
1	RxEMPT_ENB	R/W	0	Receive Slip buffer Empty Interrupt Enable This bit enables or disables the Receives Slip Buffer Empty interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive Slip Buffer Empty interrupt is declared when the Receive slip buffer is emptied. If the Receive slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and the interrupt status bit will be set to '1'. 0 - Disables the Receive Slip Buffer Empty interrupt when the Trans- mit Slip Buffer empties 1 - Enables the Receive Slip Buffer Empty interrupt when the Trans- mit Slip Buffer empties
0	RxSLIP_ENB	R/W	o uct of p heet n d may n	 Receive Slip buffer Slips Interrupt Enable This bit enables or disables the Receive Slip Buffer Slips interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive Slip Buffer Slips interrupt is declared when either the Receive slip buffer is filled or emptied. If the Receive slip buffer is emptied and a READ operation occurs, then a full frame of data will be repeated, and the interrupt status bit will be set to '1'. The interrupt status bit will be set to '1' in either one of these two conditions: 1. If the Receive slip buffer is full and a READ operation occurs, then a full frame of data will be repeated, and this interrupt bit will be set to '1'. 2. If the Receive slip buffer is full and a WRITE operation occurs, then a full frame of data will be deleted, and this interrupt bit will be set to '1'. 0 - Disables the Receive Slip Buffer Slips interrupt when the Trans- mit Slip Buffer empties or fills.





TABLE 125: RECEIVE LOOPBACK CODE 0 INTERRUPT AND STATUS REGISTER (RLCISR0) HEX ADDRESS: 0xNB0A

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR - address 0xN126) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR - address 0xN127) if Receive Loopback Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o u c s h e s h e	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in reasonse to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC		 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register I = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 126: RECEIVE LOOPBACK CODE 0 INTERRUPT ENABLE REGISTER (RLCIER0) HEX ADDRESS: 0xNB0B

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-2	Reserved	-	-	Reserved
1	RXAENB	R/W	0	 Receive Loopback Activation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code.
				 0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.
0	RXDENB	R/W		 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.
	~	nepita	uct are	



TABLE 127: EXCESSIVE ZERO STATUS REGISTER (EXZSR)

HEX ADDRESS: 0xNB0E

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION					
7-1	Reserved	-	-	Reserved					
0	EXZ_STATUS	RUR/ WC	0	 Change in Excessive Zero Condition Interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Excessive Zero Condition" interrupt within the T1 Receive Framer Block has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will gener- ate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Excessive Zero Condition. 2. Whenever the Receive T1 Framer block clears the Excessive Zero Condition 0 = Indicates the "Change in Excessive Zero Condition" interrupt has NOT occurred since the last read of this register 1 = Indicates the "Change in Excessive Zero Condition" interrupt has occurred since the last read of this register					
TABLE	TABLE 128: EXCESSIVE ZERO ENABLE REGISTER (EXZER)								

TABLE 128: EXCESSIVE ZERO ENABLE REGISTER (EXZER)

Віт	FUNCTION	Түре	DEFAULT	Description-Operation
7-1	-	-	-	Reserved
0	EXZ_ENB	R/W	or produced	 Change in Excessive Zero Condition Interrupt Enable This bit enables or disables the "Change in Excessive Zero Condition" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Excessive Zero Condition. 2. Whenever the Receive T1 Framer block clears the Excessive Zero Condition 0 - Disables the "Change in Excessive Zero Condition" interrupt within the Receive T1 Framer Block 1 - Enables the "Change in Excessive Zero Condition" interrupt within the Receive T1 Framer Block



TABLE 129: SS7 STATUS REGISTER FOR LAPD1 (SS7SR1)

HEX ADDRESS: 0xNB10

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
0) SS7_1_STATUS RUR/ WC	0	SS7 Interrupt Status for LAPD Controller 1 This Reset-Upon-Read bit field indicates whether or not the "SS7" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length.				
						0 = Indicates that the "SS7" interrupt has not occurred since the last read of this register	
1 = Indicates that the "SS7" interrupt has occurred sinc read of this register							
TABLE	TABLE 130: SS7 ENABLE REGISTER FOR LAPD1 (SS7ER1) HEX ADDRESS: 0XNB11						

TABLE 130: SS7 ENABLE REGISTER FOR LAPD1 (SS7ER1)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
0	SS7_1_ENB	R/W	0	 SS7 Interrupt Enable for LAPD Controller 1 This bit enables or disables the "SS7" interrupt within the LAPD Controller 1. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length. 0 - Disables the "SS7" interrupt within the LAPD Controller 1. 1 - Enables the "SS7" interrupt within the LAPD Controller 1.

the data and maximum and maxim



TABLE 131: RxLOS/CRC INTERRUPT STATUS REGISTER (RLCISR) 0xNB12

HEX ADDRESS:

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved
3	RxLOSINT	RUR/ WC	0	 Change in Receive LOS condition Interrupt Status This bit indicates whether or not the "Change in Receive LOS condition" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block declares the Receive LOS condition. Whenever the Receive T1 Framer block clears the Receive LOS condition. Whenever the Receive T1 Framer block clears the Receive LOS condition. Indicates that the "Change in Receive LOS Condition" interrupt has not occurred since the last read of this register. I = Indicates that the "Change in Receive LOS Condition" interrupt has occurred since the last read of this register.
2-0	Reserved	-	-	ne no

TABLE 132: RXLOS/CRC INTERRUPT ENABLE REGISTER (RECIER)

Віт	FUNCTION	Түре	DEFAULT				
3	RxLOS_ENB	R/W	or pho	 Change in Receive LOS Condition Interrupt Enable This bit enables the "Change in Receive LOS Condition" interrupt. 0 = Enables "Change in Receive LOS Condition" Interrupt. 1 Disables "Change in Receive LOS Condition" Interrupt. 			
2-0	-	JUC	\$ \$` \$ \$	Reserved			
	The prosteet not						



8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 133: RECEIVE LOOPBACK CODE 1 INTERRUPT AND STATUS REGISTER (RLCISR1) HEX ADDRESS: 0xNB14

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	e produc	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC	basto	 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register



XRT86VX38

TABLE 134: RECEIVE LOOPBACK CODE 1 INTERRUPT ENABLE REGISTER (RLCIER1) HEX ADDRESS: 0xNB15

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-2	Reserved	-	-	Reserved
1	RXAENB	R/W	0	Receive Loopback Activation Code Interrupt Enable
				This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.
				 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code.
				 Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code.
				0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the Th Receive Framer.
				1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.
0	RXDENB	R/W	or produ	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. Disables the "Change in Receive Loopback Deactivation Code. Disables the "Change in Receive Loopback Deactivation Code. I - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.
	The	atandr	lay.	



TABLE 135: DATA LINK STATUS REGISTER 2 (DLSR2)

HEX ADDRESS: 0xNB16

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	MSG TYPE	RO	0	HDLC2 Message Type Identifier This READ ONLY bit indicates the type of data link message received by Receive HDLC 2 Controller. Two types of data link mes- sages are supported within the XRT86VX38 device: Message Ori- ented Signaling (MOS) or Bit-Oriented Signalling (BOS). 0 = Indicates Bit-Oriented Signaling (BOS) type data link message is received 1 = Indicates Message Oriented Signaling (MOS) type data link message is received
6	TxSOT	RUR/ WC	0	Transmit HDLC2 Controller Start of Transmission (TxSOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the "Transmit HDLC2 Controller Start of Transmission (TxSOT) "Interrupt has occurred since the last read of this register. Transmit HDLC2 Con- troller will declare this interrupt when it has started to transmit a data link message. For sending large HDLC messages, start loading the next available buffer once this interrupt is detected. 0 = Transmit HDLC2 Controller Start of Transmission (TxSOT) inter- rupt has not occurred since the last read of this register 1 = Transmit HDLC2 Controller Start of Transmission interrupt (TxSOT) has occurred since the last read of this register.
5	RxSOT	RUR/ WC	o uct of provide and provide a	Receive HDLC2 Controller Start of Reception (RxSOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receive HDLC2 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register. Receive HDLC2 Con- troller will declare this interrupt when it has started to receive a data link message. 0 = Receive HDLC2 Controller Start of Reception (RxSOT) interrupt has not occurred since the last read of this register 1 = Receive HDLC2 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register
4	Txeot	RUC	0	Transmit HDLC2 Controller End of Transmission (TxEOT) Inter- rupt Status This Reset-Upon-Read bit indicates whether or not the Transmit HDLC2 Controller End of Transmission (TxEOT) Interrupt has occurred since the last read of this register. Transmit HDLC2 Con- troller will declare this interrupt when it has completed its transmis- sion of a data link message. For sending large HDLC messages, it is critical to load the next available buffer before this interrupt occurs. 0 = Transmit HDLC2 Controller End of Transmission (TxEOT) inter- rupt has not occurred since the last read of this register 1 = Transmit HDLC2 Controller End of Transmission (TxEOT) inter- rupt has occurred since the last read of this register



TABLE 135: DATA LINK STATUS REGISTER 2 (DLSR2)

HEX ADDRESS: 0xNB16

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	RxEOT	RUR/ WC	0	Receive HDLC2 Controller End of Reception (RxEOT) Interrupt Status
				This Reset-Upon-Read bit indicates whether or not the Receive HDLC2 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register. Receive HDLC2 Controller will declare this interrupt once it has completely received a full data link message, or once the buffer is full.
				0 = Receive HDLC2 Controller End of Reception (RxEOT) interrupt has not occurred since the last read of this register
				1 = Receive HDLC2 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register
2	FCS Error	RUR/ WC	0	FCS Error Interrupt Status This Reset-Upon-Read bit indicates whether or not the FCS Error Interrupt has occurred since the last read of this register. Receive HDLC2 Controller will declare this interrupt when it has detected the FCS error in the most recently received data link message. 0 = FCS Error interrupt has not occurred since the last read of this
				register 1 = FCS Error interrupt has occurred since the last read of this regis- ter
1	Rx ABORT	RUR/ WC	o	Receipt of Abort Sequence Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receipt of Abort Sequence interrupt has occurred since last read of this regis- ter. Receive HDLC2 Controller will declare this interrupt if it detects the Abort Sequence (i.e. a string of seven (7) consecutive 1's) in the incoming data link channel.
			orpho	0 = Receipt of Abort Sequence interrupt has not occurred since last read of this register 1 = Receipt of Abort Sequence interrupt has occurred since last
		JUCI	31 0	read of this register
0	RxIDLE	RUR/	<u>کې کې</u>	Receipt of Idle Sequence Interrupt Status
	there	210	at	This Reset-Upon-Read bit indicates whether or not the Receipt of Idle Sequence interrupt has occurred since the last read of this reg- ister. The Receive HDLC2 Controller will declare this interrupt if it detects the flag sequence octet (0x7E) in the incoming data link channel. If RxIDLE "AND" RxEOT occur together, then the entire HDLC message has been received.
		•		0 = Receipt of Idle Sequence interrupt has not occurred since last read of this register
				1 = Receipt of Idle Sequence interrupt has occurred since last read of this register.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 136: DATA LINK INTERRUPT ENABLE REGISTER 2 (DLIER2)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	-	-	Reserved
6	TxSOT ENB	R/W	0	Transmit HDLC2 Controller Start of Transmission (TxSOT) Interrupt Enable This bit enables or disables the "Transmit HDLC2 Controller Start of Transmission (TxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Transmit HDLC2 Controller will generate an interrupt when it has started to transmit a data link mes- sage. 0 = Disables the Transmit HDLC2 Controller Start of Transmission (TxSOT) interrupt. 1 = Enables the Transmit HDLC2 Controller Start of Transmission (TxSOT) interrupt.
5	RxSOT ENB	R/W	0	Receive HDLC2 Controller Start of Reception (RxSOT) Interrupt Enable This bit enables or disables the "Receive HDLC2 Controller Start of Reception (RxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC2 Controller will generate an interrupt when it has started to receive a data link message. 0 = Disables the Receive HDLC2 Controller Start of Reception (RxSOT) interrupt. 1 = Enables the Receive HDLC2 Controller Start of Reception (RxSOT) interrupt.
4	TxEOT ENB	R/W	o uct or or neet n	Transmit HDLC2 Controller End of Transmission (TxEOT) Inter- rupt EnableThis bit enables or disables the "Transmit HDLC2 Controller End of Transmission (TxEOT) "Interrupt within the XRT86VX38 device.Once this interrupt is enabled, the Transmit HDLC2 Controller will generate an interrupt when it has finished transmitting a data link message.0 = Disables the Transmit HDLC2 Controller End of Transmission (TxEOT) interrupt.1 = Enables the Transmit HDLC2 Controller End of Transmission (TxEOT) interrupt.
3	RXEOT ENB	RAV S	0	Receive HDLC2 Controller End of Reception (RxEOT) Interrupt Enable This bit enables or disables the "Receive HDLC2 Controller End of Reception (RxEOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC2 Controller will generate an interrupt when it has finished receiving a complete data link mes- sage. 0 = Disables the Receive HDLC2 Controller End of Reception (RxEOT) interrupt. 1 = Enables the Receive HDLC2 Controller End of Reception (RxEOT) interrupt.



HEX ADDRESS: 0xNB17



TABLE 136: DATA LINK INTERRUPT ENABLE REGISTER 2 (DLIER2)

HEX ADDRESS: 0xNB17

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	FCS ERR ENB	R/W	0	FCS Error Interrupt Enable This bit enables or disables the "Received FCS Error "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC2 Controller will generate an interrupt when it has detected the FCS error within the incoming data link message. 0 = Disables the "Receive FCS Error" interrupt. 1 = Enables the "Receive FCS Error" interrupt.
1	RXABORT ENB	R/W	0	Receipt of Abort Sequence Interrupt Enable This bit enables or disables the "Receipt of Abort Sequence"Inter- rupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC2 Controller will generate an interrupt when it has detected the Abort Sequence (i.e. a string of seven (7) consecutive 1's) within the incoming data link channel. 0 = Disables the "Receipt of Abort Sequence" interrupt. 1 = Enables the "Receipt of Abort Sequence" interrupt.
0	RXIDLE ENB	R/W	0	Receipt of Idle Sequence Interrupt Enable This bit enables or disables the "Receipt of Idle Sequence"Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC2 Controller will generate an interrupt when it has detected the Idle Sequence Octet (i.e. 0x7E) within the incoming data link channel. 0 = Disables the "Receipt of Idle Sequence" interrupt. 1 = Enables the "Receipt of Idle Sequence" interrupt.

the data interest of the data interest of the data interest of the original interest of the orig



TABLE 137: SS7 STATUS REGISTER FOR LAPD2 (SS7SR2)

HEX ADDRESS: 0xNB18

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
0	SS7_2_STATUS	RUR/ WC	0	SS7 Interrupt Status for LAPD Controller 2 This Reset-Upon-Read bit field indicates whether or not the "SS7" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length.			
				0 = Indicates that the "SS7" interrupt has not occurred since the last read of this register			
				1 = Indicates that the "SS7" interrupt has occurred since the last read of this register			
TABLE	TABLE 138: SS7 ENABLE REGISTER FOR LAPD2 (SS7ER2)						

TABLE 138: SS7 ENABLE REGISTER FOR LAPD2 (SS7ER2)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
0	SS7_2_ENB	R/W	0	 SS7 Interrupt Enable for LAPD Controller 2 This bit enables or disables the "SS7" interrupt within the LAPD Controller 2. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length. 0 - Disables the "SS7" interrupt within the LAPD Controller 2. 1 - Enables the "SS7" interrupt within the LAPD Controller 2.

the data may not be and the data and the dat



TABLE 139: RECEIVE LOOPBACK CODE 2 INTERRUPT AND STATUS REGISTER (RLCISR2) HEX ADDRESS: 0xNB1A

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	oduct (C)	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC	S	 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. Undicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 140: RECEIVE LOOPBACK CODE 2 INTERRUPT ENABLE REGISTER (RLCIER2) HEX ADDRESS: 0xNB1B

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7-2	Reserved	-	-	Reserved			
1	RXAENB	R/W	0	 Receive Loopback Activation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 			
				 0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T4 Receive Framer. 			
0	RXDENB	R/W	0 UCCLOID	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1. Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 			
	0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.						



TABLE 141: RECEIVE LOOPBACK CODE 3 INTERRUPT AND STATUS REGISTER (RLCISR3) HEX ADDRESS: 0xNB1C

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o u t a ma	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC		 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 142: RECEIVE LOOPBACK CODE 3 INTERRUPT ENABLE REGISTER (RLCIER3) HEX ADDRESS: 0xNB1D

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7-2	Reserved	-	-	Reserved			
1	RXAENB	R/W	0	Receive Loopback Activation Code Interrupt Enable			
				This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.			
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.			
				 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 			
				 Whenever the Receive 1 Framer block no longer detects the Receive Loopback Activation Code. 			
				0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.			
				1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T ⁴ Receive Framer.			
0	RXDENB	R/W	0 UCCLOS OF	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 			
	0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1- Enables the "Change in Receive Loopback Deactivation Code" Interrupt within the T1 Receive Framer.						



TABLE 143: RECEIVE LOOPBACK CODE 4 INTERRUPT AND STATUS REGISTER (RLCISR4) HEX ADDRESS: 0xNB1E

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o u c s n e	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC		 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 144: RECEIVE LOOPBACK CODE 4 INTERRUPT ENABLE REGISTER (RLCIER4) HEX ADDRESS: 0xNB1F

bitthe Receive Loopback Activation Code.0Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.0RXDENBR/W0Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" Interrupt within the T1 Receive Framer.1Image: State of the state of	Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
0 RXDENB R/W 0 Receive Loopback Activation Code" interrupt within the T1 Receive Loopback Activation Code" interrupt in response to either one of the following conditions. 0 RXDENB R/W 0 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Loopback Activation Code. 0 RXDENB R/W 0 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.	7-2	Reserved	-	-	Reserved
0 RXDENB R/W 0 Receive Loopback Deactivation Code Interrupt Enable 1 This bit enables or disables the "Change in Receive Loopback Deactivation Code" Interrupt within the T1 Receive Framer. 1 If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2 Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 3 Deactive Loopback Deactivation Code.	1	RXAENB	R/W	0	 This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.
$O' \to A$	0			orpr	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code.



TABLE 145: RECEIVE LOOPBACK CODE 5 INTERRUPT AND STATUS REGISTER (RLCISR5) HEX ADDRESS: 0xNB20

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o ta na	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upoh-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC	S. S.	 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 146: RECEIVE LOOPBACK CODE 5 INTERRUPT ENABLE REGISTER (RLCIER5) Hex Address: 0xNB21

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7-2	Reserved	-	-	Reserved			
1	RXAENB	R/W	0	 Receive Loopback Activation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 - Disables the "Change in Receive Loopback Activation Code" 			
				interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.			
0	RXDENB	R/W	o uct of of	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" Interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1. Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 			
	0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.						



TABLE 147: RECEIVE LOOPBACK CODE 6 INTERRUPT AND STATUS REGISTER (RLCISR6) HEX ADDRESS: 0xNB22

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o ta ma	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upoh-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC		 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 148: RECEIVE LOOPBACK CODE 6 INTERRUPT ENABLE REGISTER (RLCIER6) HEX ADDRESS: 0xNB23

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION		
7-2	Reserved	-	-	Reserved		
1	RXAENB	R/W	0	Receive Loopback Activation Code Interrupt Enable		
				This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.		
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.		
				 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 		
				 Whenever the Receive 1 Framer block no longer detects the Receive Loopback Activation Code. 		
				0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer.		
				1 - Enables the "Change in Receive Loopback Activation Code" interrupt within the TP Receive Framer.		
0	RXDENB	R/W	0 UCC are	 Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions: 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1. Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 		
0 - Disables the "Change in Receive Loopback Deactivation Code interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code interrupt within the T1 Receive Framer.						



TABLE 149: RECEIVE LOOPBACK CODE 7 INTERRUPT AND STATUS REGISTER (RLCISR7) HEX ADDRESS: 0xNB24

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-4	-	-	-	Reserved (For E1 mode only)
3	RXASTAT	RO	0	Receive Loopback Activation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code, as specified in the Receive Loopback Activation Code Register (RLACR) if Receive Loopback Activation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Activation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Activation Code.
2	RXDSTAT	RO	0	Receive Loopback Deactivation Code State This READ ONLY bit indicates whether or not the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code, as specified in the Receive Loopback Deactivation Code Register (RLDCR) if Receive Loop- back Deactivation Code Detection is enabled. 0 = Indicates that the Receive T1 Framer Block is NOT currently detecting the Receive Loopback Deactivation Code. 1 = Indicates that the Receive T1 Framer Block is currently detecting the Receive Loopback Deactivation Code.
1	RXAINT	RUR/ WC	o o ta na	 Change in Receive Loopback Activation Code interrupt Status This Reset-Upoh-Read bit field indicates whether or not the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1 Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Activation Code" interrupt has occurred since the last read of this register
0	RXDINT	RUR/ WC	S. S.	 Change in Receive Loopback Deactivation Code interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has not occurred since the last read of this register 1 = Indicates that the "Change in Receive Loopback Deactivation Code" interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION



TABLE 150: RECEIVE LOOPBACK CODE 7 INTERRUPT ENABLE REGISTER (RLCIER7) HEX ADDRESS: 0xNB25

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION			
7-2	Reserved	-	-	Reserved			
1	RXAENB	R/W	0	 Receive Loopback Activation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Activation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Activation Code. 0 - Disables the "Change in Receive Loopback Activation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Activation Code" 			
0	RXDENB	R/W		 interrupt within the T1 Receive Framer. Receive Loopback Deactivation Code Interrupt Enable This bit enables or disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the Receive Loopback Deactivation Code. 2. Whenever the Receive T1 Framer block no longer detects the Receive Loopback Deactivation Code. 0 - Disables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer. 			
	0 - Disables the "Change in Receive Loopback Deactivation Code interrupt within the T1 Receive Framer. 1 - Enables the "Change in Receive Loopback Deactivation Code" interrupt within the T1 Receive Framer.						



TABLE 151: DATA LINK STATUS REGISTER 3 (DLSR3)

HEX ADDRESS: 0xNB26

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	MSG TYPE	RUR/ WC	0	HDLC3 Message Type Identifier This READ ONLY bit indicates the type of data link message received by Receive HDLC 3 Controller. Two types of data link messages are supported within the XRT86VX38 device: Message Oriented Signaling (MOS) or Bit-Oriented Signalling (BOS). 0 = Indicates Bit-Oriented Signaling (BOS) type data link message is received 1 = Indicates Message Oriented Signaling (MOS) type data link mes- sage is received
6	TxSOT	RUR/ WC	0	Transmit HDLC3 Controller Start of Transmission (TxSOT) Inter- rupt Status This Reset-Upon-Read bit indicates whether or not the "Transmit HDLC3 Controller Start of Transmission (TxSOT) "Interrupt has occurred since the last read of this register. Transmit HDLC3 Controller will declare this interrupt when it has started to transmit a data link mes- sage. For sending large HDLC messages, start loading the next avail- able buffer once this interrupt is detected. 0 = Transmit HDLC3 Controller Start of Transmission (TxSOT) interrupt has not occurred since the last read of this register 1 = Transmit HDLC3 Controller Start of Transmission interrupt (TxSOT) has occurred since the last read of this register.
5	RxSOT	RUR/ WC		Receive HDLC3 Controller Start of Reception (RxSOT) Interrupt Status This Reset Upon-Read bit indicates whether or not the Receive HDLC3 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register. Receive HDLC3 Controller will declare this interrupt when it has started to receive a data link mes- sage. 0 = Receive HDLC3 Controller Start of Reception (RxSOT) interrupt has not occurred since the last read of this register 1 = Receive HDLC3 Controller Start of Reception (RxSOT) interrupt has occurred since the last read of this register
4	TxEOT	RUR	III OO	Transmit HDLC3 Controller End of Transmission (TxEOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the Transmit HDLC3 Controller End of Transmission (TxEOT) Interrupt has occurred since the last read of this register. Transmit HDLC3 Controller will declare this interrupt when it has completed its transmission of a data link message. For sending large HDLC messages, it is critical to load the next available buffer before this interrupt occurs. 0 = Transmit HDLC3 Controller End of Transmission (TxEOT) interrupt has not occurred since the last read of this register 1 = Transmit HDLC3 Controller End of Transmission (TxEOT) interrupt has occurred since the last read of this register

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 151: DATA LINK STATUS REGISTER 3 (DLSR3)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	RxEOT	RUR/ WC	0	Receive HDLC3 Controller End of Reception (RxEOT) Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receive HDLC3 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register. Receive HDLC3 Controller will declare this interrupt once it has completely received a full data link message, or once the buffer is full. 0 = Receive HDLC3 Controller End of Reception (RxEOT) interrupt has not occurred since the last read of this register 1 = Receive HDLC3 Controller End of Reception (RxEOT) Interrupt has occurred since the last read of this register
2	FCS Error	RUR/ WC	0	FCS Error Interrupt Status This Reset-Upon-Read bit indicates whether or not the FCS Error Inter- rupt has occurred since the last read of this register. Receive HDLC3 Controller will declare this interrupt when it has detected the FCS error in the most recently received data link message. 0 = FCS Error interrupt has not occurred since the last read of this reg- ister 1 = FCS Error interrupt has occurred since the last read of this register
1	Rx ABORT	RUR/ WC	0	Receipt of Abort Sequence Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receipt of Abort Sequence interrupt has occurred since last read of this register. Receive HDLC3 Controller will declare this interrupt if it detects the Abort Sequence (i.e. a string of seven (7) consecutive 1's) in the incoming data link channel. 0 = Receipt of Abort Sequence interrupt has not occurred since last read of this register 1 = Receipt of Abort Sequence interrupt has occurred since last read of this register
0	RxIDLE	RUR/ WC	asheet and may	Receipt of Idle Sequence Interrupt Status This Reset-Upon-Read bit indicates whether or not the Receipt of Idle Sequence interrupt has occurred since the last read of this register. The Receive HDLC3 Controller will declare this interrupt if it detects the flag sequence octet (0x7E) in the incoming data link channel. If RxI- DLE "AND" RxEOT occur together, then the entire HDLC message has been received. 0 = Receipt of Idle Sequence interrupt has not occurred since last read of this register 1 = Receipt of Idle Sequence interrupt has occurred since last read of this register.



HEX ADDRESS: 0xNB26



TABLE 152: DATA LINK INTERRUPT ENABLE REGISTER 3 (DLIER3)

HEX ADDRESS: 0xNB27

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	-	-	Reserved
6	TxSOT ENB	R/W	0	Transmit HDLC3 Controller Start of Transmission (TxSOT) Interrupt Enable This bit enables or disables the "Transmit HDLC3 Controller Start of Transmission (TxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Transmit HDLC3 Controller will generate an interrupt when it has started to transmit a data link mes- sage. 0 = Disables the Transmit HDLC3 Controller Start of Transmission (TxSOT) interrupt. 1 = Enables the Transmit HDLC3 Controller Start of Transmission (TxSOT) interrupt.
5	RXSOT ENB	R/W	0	Receive HDLC3 Controller Start of Reception (RxSOT) Interrupt Enable This bit enables or disables the "Receive HDLC3 Controller Start of Reception (RxSOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC3 Controller will generate an interrupt when it has started to receive a data link message. 0 = Disables the Receive HDLC3 Controller Start of Reception (RxSOT) interrupt.
4	TXEOT ENB	R/W	or prod	 Transmit HDLC3 Controller End of Transmission (TxEOT) Interput Enable This bit enables or disables the "Transmit HDLC3 Controller End of Transmission (TxEOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Transmit HDLC3 Controller will generate an interrupt when it has finished transmitting a data link message. 0 = Disables the Transmit HDLC3 Controller End of Transmission (TxEOT) interrupt. 1 = Enables the Transmit HDLC3 Controller End of Transmission (TxEOT) interrupt.
3	RXEOT ENB	RAV	0	Receive HDLC3 Controller End of Reception (RxEOT) Interrupt Enable This bit enables or disables the "Receive HDLC3 Controller End of Reception (RxEOT) "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC3 Controller will generate an interrupt when it has finished receiving a complete data link mes- sage. 0 = Disables the Receive HDLC3 Controller End of Reception (RxEOT) interrupt. 1 = Enables the Receive HDLC3 Controller End of Reception (RxEOT) interrupt.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 152: DATA LINK INTERRUPT ENABLE REGISTER 3 (DLIER3)

HEX ADDRESS: 0xNB27

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	FCS ERR ENB	R/W	0	FCS Error Interrupt Enable This bit enables or disables the "Received FCS Error "Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC3 Controller will generate an interrupt when it has detected the FCS error within the incoming data link message. 0 = Disables the "Receive FCS Error" interrupt. 1 = Enables the "Receive FCS Error" interrupt.
1	RXABORT ENB	R/W	0	Receipt of Abort Sequence Interrupt Enable This bit enables or disables the "Receipt of Abort Sequence" Inter- rupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC3 Controller will generate an interrupt when it has detected the Abort Sequence (i.e. a string of seven (7) consecutive 1's) within the incoming data link channel. 0 = Disables the "Receipt of Abort Sequence" interrupt. 1 = Enables the "Receipt of Abort Sequence" interrupt.
0	RXIDLE ENB	R/W	0	Receipt of Idle Sequence Interrupt Enable This bit enables or disables the "Receipt of Idle Sequence" Interrupt within the XRT86VX38 device. Once this interrupt is enabled, the Receive HDLC3 Controller will generate an interrupt when it has detected the Idle Sequence Octet (i.e. 0x7E) within the incoming data link channel. 0 = Disables the "Receipt of Idle Sequence" interrupt. 1 = Enables the "Receipt of Idle Sequence" interrupt.

, the , ink chai = Disables ti 1 = Enables the of producet are be of producet are be of producet are be of producet are be of producet are be





TABLE 153: SS7 STATUS REGISTER FOR LAPD3 (SS7SR3)

HEX ADDRESS: 0xNB28

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
0	SS7_3_STATUS	RUR/ WC	0	 SS7 Interrupt Status for LAPD Controller 3 This Reset-Upon-Read bit field indicates whether or not the "SS7" interrupt has occurred since the last read of this register. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length. 0 = Indicates that the "SS7" interrupt has not occurred since the last read of this register
TABLE	E 154: SS7 ENABLE REG	SISTER FO	DR LAPD3	1 = Indicates that the "SS7" interrupt has occurred since the last read of this register

TABLE 154: SS7 ENABLE REGISTER FOR LAPD3 (SS7ER3)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
0	SS7_3_ENB	R/W	0	 SS7 Interrupt Enable for LAPD Controller 3 This bit enables or disables the "SS7" interrupt within the LAPD Controller 3. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt when the Received LAPD message is more than 276 Bytes in length. 0 - Disables the "SS7" interrupt within the LAPD Controller 3. 1 - Enables the "SS7" interrupt within the LAPD Controller 3.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
[7:6]	Reserved	-	-	Reserved
5	RxAIS-CI_state	RO	0	Receive Alarm Indication Signal-Customer Installation (AIS-CI) State This READ ONLY bit field indicates whether or not the Receive T1 Framer is currently detecting the Alarm Indication Signal-Customer Installation (AIS- CI) condition. Alarm Indication Signal-Customer Installation (AIS-CI) is intended for use in a network to differentiate between an issue within the network or the Cus- tomer Installation (CI). AIS-CI is an all ones signal with an embedded signature of 01111100 11111111 (right-to left) which recurs at 386 bit intervals in-the DS-1 signal. 0 = Indicates the Receive T1 Framer is currently NOT detecting the AIS-CI condition 1 = Indicates the Receive T1 Framer is currently detecting the AIS-CI condi- tion Note: This bit only works if AIS-CI detection is enabled (Register 0xN11C)
4	RxRAI-CI_state	RO	oroduc	Rx RAI-CI State This READ ONLY bit field indicates whether or not the Receive T1 Framer is currently declaring the Remote Alarm Indication - Customer Installation (RAI-CI) condition. (This is for T1 ESF framing mode only) Remote Alarm Indication - Customer Installation (RAI-CI) is intended for use in a network to differentiate between an issue within the network or the Customer Installation (CI). RAI-CI is a repetitive pattern with a period of 1.08 seconds. It is comprised of 0.99 seconds of RAI message (00000000 11111111 Right-to-left) and a 90 ms of RAI-CI signature (00111110 11111111 Right to left) to form a RAI-CI signal. 0 = Indicates the Receive T1 Framer is currently NOT detecting the RAI-CI condition 1 = Indicates the Receive T1 Framer is currently detecting the RAI-CI condition NOTE: This bit only works if RAI-CI detection is enabled (Register 0xN11C)
[3:2]	Reserved			Reserved
			gand	



HEX ADDRESS: 0xNB40



TABLE 155: CUSTOMER INSTALLATION ALARM STATUS REGISTER (CIASR)

HEX ADDRESS: 0xNB40

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	RxAIS-CI	RUR/ WC	0	Change in Receive AIS-CI Condition Interrupt Status This Reset-Upon-Read bit field indicates whether or not the "Change in AIS- CI Condition" interrupt within the T1 Receive Framer Block has occurred since the last read of this register.
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.
				1. Whenever the Receive T1 Framer block detects the AIS-CI Condition.
				 Whenever the Receive T1 Framer block clears the AIS-CI Condition Indicates the "Change in AIS-CI Condition" interrupt has NOT occurred
				since the last read of this register
				1 = Indicates the "Change in AIS-CI Condition" interrupt has occurred since the last read of this register
0	RxRAI-CI	RUR/	0	Change in Receive RAI-CI Condition Interrupt Status
		WC		This Reset-Upon-Read bit field indicates whether or not the "Change in RAI- CI Condition" interrupt within the T1 Receive Framer Block has occurred since the last read of this register.
				If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions.
				1. Whenever the Receive T1 Framer block detects the RAI-CI Condition.
				2. Whenever the Receive T1 Framer block clears the RAI-CI Condition
				0 = Indicates the "Change in RAI-CI Condition" interrupt has NOT occurred since the last read of this register
				1 = Indicates the "Change in RAI-CI Condition" interrupt has occurred since the last read of this register

TABLE 156: CUSTOMER INSTALLATION ADARM STATUS REGISTER (CIAIER)

HEX ADDRESS: 0xNB41

Віт	FUNCTION	Түре	DEFAULT	
1	RxAIS-CI_ENB	R/W	andman	 Change in Receive AIS-CI Condition Interrupt Enable This bit enables or disables the "Change in AIS-CI Condition" interrupt within the T1 Receive Framer Block. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the AIS-CI Condition. 2. Whenever the Receive T1 Framer block clears the AIS-CI Condition 0 - Disables the "Change in AIS-CI Condition" interrupt. 1 - Enables the "Change in AIS-CI Condition" interrupt.
0	RxRAI-CI_ENB	R/W	0	 Change in Receive RAI-CI Condition Interrupt Enable This bit enables or disables the "Change in RAI-CI Condition" interrupt within the T1 Receive Framer Block. If this interrupt is enabled, then the Receive T1 Framer block will generate an interrupt in response to either one of the following conditions. 1. Whenever the Receive T1 Framer block detects the RAI-CI Condition. 2. Whenever the Receive T1 Framer block clears the AIS-CI Condition 0 - Disables the "Change in RAI-CI Condition" interrupt. 1 - Enables the "Change in RAI-CI Condition" interrupt.



BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
RMTCH3	RMTCH2	BOCC	RFDLAD	RFDLF	TFDLE	RMTCH1	RBOC
RUR	RUR	RUR	RUR	RUR	RUR	RUR	RUR
0	0	0	0	0	0	0	0

TABLE 157: T1 BOC INTERRUPT STATUS REGISTER (BOCISR 0xNB70H)

BIT 7 - Receive FDL Match 3 Event

This bit is set when the receive FDL message is equal to the RFDL Match 3 message, and filter validation has occured.

- } 0 No Match
- } 1 Match 3

BIT 6 - Receive FDL Match 2 Event

This bit is set when the receive FDL message is equal to the RFD Match 2 message, and filter validation has occured.

- } 0 No Match
- } 1 Match 2

BIT 5 - BOC Clear Event (Loss of BOC)

This bit is set when 3 or more consecutive Non-BOC messages occur (Non-BOC means that the message meets the '0xxxxx011111111' framing format, but does not contain a valid BOC).

- } 0 No Change
- } 1 BOC Cleared

BIT 4 - RFDL Abort Detect Event

This bit is set when nine consecutive ones are detected within the FDL bits.

- } 0 Normal
- } 1 RFDL Abort

BIT 3 - RFDL Register Full Event (Receive Start of Transfer)

This bit is set when the RFDU register is full. This register is not gated by the filter.

മ

- } 0 Not Full
- } 1 Full



BIT 2 - TFDL Register Empty Event (Transmit End of Transfer)

This bit is set when the TFDL register has been emptied according to amount of repetitions programmed into the TxBYTE count register 0xn178h. This alarm is meant to be an indicator of a complete BOC transmission for system alert or to initiate a response for future processing.

} 0 - Not Emptied

} 1 - Emptied

BIT 1 - Receive FDL Match 1 Event

This bit is set when the receive FDL message is equal to the RFDL Match 1 message, and filter validation has occured.

- } 0 No Match
- } 1 Match 1

BIT 0 - Receive BOC Detector Change of Status

O - Receive BOC Detector Change of Status This bit is set to 1 any time a change has occured with the RFDL message. This alarn will NOT be set unless the filter setting has been satisfied.
 O - No Change
 1 - Change of Status



TABLE 158: T1 BOC INTERRUPT ENABLE REGISTER (BOCIER 0xNB71H)

BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
RMTCH3	RMTCH2	BOCC	RFDLAD	RFDLF	TFDLE	RMTCH1	RBOC
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0

BIT 7 - Receive FDL Match 3 Event

This bit is used to enable the RFDL Match 3 message Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 6 - Receive FDL Match 2 Event

ces ne de la company de la com This bit is used to enable the RFDL Match 2 message Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 5 - BOC Clear Event

This bit is used to enable the BOC Clear Event Interrupt

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 4 - RFDL Abort Detect Event

This bit is used to enable the RFDL Abort Detect Event Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 3 - RFDL Register Full Event

This bit is used to enable the RFDL Full Interrupt

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 2 - TFDL Register Empty Event

This bit is used to enable the TFDL Empty Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 1 - Receive FDL Match 1 Event

This bit is used to enable the RFDL Match 1 message Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled

BIT 0 - Receive BOC Detector Change of Status

This bit is used to enable the BOC detector change of status Interrupt.

- } 0 Disabled
- } 1 Interrupt Enabled



BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0		
Reserved	Unstable		Reserved						
RUR	RUR	RUR	RUR	RUR	RUR	RUR	RUR		
0	0	0	0	0	0	0	0		

TABLE 159: T1 BOC UNSTABLE INTERRUPT STATUS REGISTER (BOCUISR 0xNB74H)

BIT 7 - Reserved

BIT 6 - Unstable SSM Message Interrupt Status

This bit will be set to '1' anytime the receive SSM message has changed from its previous value, IF the SSM message was valid. Therefore, this interrupt is only active once the BOChas received a valid SSM message. This register is Reset Upon Read.

- } 0 No Change in SSM
- } 1 Change in SSM

BITS [5:0] - Reserved

received in the termination of terminatione



TABLE 160: T1 BOC UNSTABLE INTERRUPT ENABLE REGISTER (BOCUIER 0xNB75H)

BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0	
Reserved	Unstable	Reserved						
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
0	0	0	0	0	0	0	0	

BIT 7 - Reserved

BIT 6 - Unstable SSM Message Interrupt Enable

This bit is used to enable the Unstable SSM message Interrupt. Unstable is defined as anytime the receive SSM message has changed from its previous value, IF the SSM message was valid. Therefore, this interrupt is only active once the BOC has received a valid SSM message.

} 0 - Disabled

} 1 - Interrupt Enabled

BITS [5:0] - Reserved

in the second se



2.0 LINE INTERFACE UNIT (LIU SECTION) REGISTERS

TABLE 161: LIU CHANNEL CONTROL REGISTER 0 (LIUCCR0)

HEX ADDRESS: 0x0FN0

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	QRSS_n/ PRBS_n	R/W	0	QRSS/PRBS Select Bits These bits are used to select between QRSS and PRBS. $0 = PRBS_n (2^{15} - 1)$ $1 = QRSS_n (2^{20} - 1)$
6	PRBS_Rx_n/ PRBS_Tx_n	R/W	orprod	PRBS Receive/Transmit Select: This bit is used to select where the output of the PRBS Generator is directed if PRBS generation is enabled. 0 = Normal Operation - PRBS generator is output on TTIP and TRING if PRBS generator is output on RPOS and RCLK. 1 = PRBS Generator is output on RPOS and RCLK. Bit 6 = "0" TX TTIP PBRS Generator Bit 6 = "1" RPOS Generator RX RPOS
5	RXON_n	RMA	230 p	Receiver ON:This bit permits the user to either turn on or turn off the Receive Section of XRT86VX38. If the user turns on the Receive Section, then XRT86VX38 will begin to receive the incoming data-stream via the RTIP and RRING input pins.Conversely, if the user turns off the Receive Section, then the entire Receive Section except the MCLKIN Phase Locked Loop (PLL) will be powered down.0 = Shuts off the Receive Section of XRT86VX38.1 = Turns on the Receive Section of XRT86VX38.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 161: LIU CHANNEL CONTROL REGISTER 0 (LIUCCR0)

172

HEX ADDRESS: 0x0FN0

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
4-0	EQC[4:0]	R/W	00000	Equalizer Control [4:0]:
				These bits are used to control the transmit pulse shaping, transmit line build-out (LBO) and receive sensitivity level.
				The Transmit Pulse Shape can be controlled by adjusting the Trans- mit Line Build-Out Settings for different cable length in T1 mode. Transmit pulse shape can also be controlled by using the Arbitrary mode, where users can specify the amplitude of the pulse shape by using the 8 Arbitrary Pulse Segments provided in the LIU registers (0xNF08-0xNF0F), where n is the channel number.
				The XRT86VX38 device supports both long haul and short haul applications which can also be selected using the EQC[4:0] bits.
				Table 162.presents the corresponding Transmit Line Build Out and Receive Sensitivity settings using different combinations of these five EQC[4:0] bits.

ever Sensitivity settings using two EQC[4:0] bits.





TABLE 162: EQUALIZER CONTROL AND TRANSMIT LINE BUILD OUT

EQC[4:0]	T1 Mode/Receive Sensitivity	TRANSMIT LBO	CABLE
0x00h	T1 Long Haul/36dB	0dB	100Ω TP
0x01h	T1 Long Haul/36dB	-7.5dB	100Ω TP
0x02h	T1 Long Haul/36dB	-15dB	100Ω TP
0x03h	T1 Long Haul/36dB	-22.5dB	100Ω TP
0x04h	T1 Long Haul/45dB	0dB	100Ω TP
0x05h	T1 Long Haul/45dB	-7.5dB	100Ω TP
0x06h	T1 Long Haul/45dB	-15dB	100Ω TP
0x07h	T1 Long Haul/45dB	-22.5dB	100Ω TP
0x08h	T1 Short Haul/15dB	0 to 133 feet (0.6dB)	100Ω TP
0x09h	T1 Short Haul/15dB	133 to 266 feet (1.2dB)	100Ω TP
0x0Ah	T1 Short Haul/15dB	266 to 399 feet (1.8dB)	100Ω TP
0x0Bh	T1 Short Haul/15dB	399 to 533 feet (2.4dB)	100Ω TP
0x0Ch	T1 Short Haul/15dB	533 to 655 feet (3.0dB)	100Ω TP
0x0Dh	T1 Short Haul/15dB	Arbitrary Pulse	100Ω TP
0x0Eh	T1 Gain Mode/29dB	0 to 133 feet (0.6dB)	100Ω TP
0x0Fh	T1 Gain Mode/29dB	133 to 266 feet (1.2dB)	100Ω TP
0x10h	T1 Gain Mode/29dB	266 to 399 feet (1.8dB)	100Ω TP
0x11h	T1 Gain Mode/29dB	399 to 533 feet (2.4dB)	100Ω TP
0x12h	T1 Gain Mode/29dB	533 to 655 feet (3.0dB)	100Ω TP
0x13h	T1 Gain Mode/29dB	Arbitrary Pulse	100Ω TP
0x14h	T1 Gain Mode/29dB	0dB	100Ω TP
0x15h	C T1 Gain Mode/29dB	-7.5dB	100Ω TP
0x16h	T1 Gain Mode/29dB	-15dB	100Ω TP
0x17h	Gain Mode/29dB	-22.5dB	100Ω TP
0x18h	E1 Long Haul/36dB	ITU G.703	75Ω Coax
0x19h	E1 Long Haul/36dB	ITU G.703	120Ω TP
0x1Ah	E1 Long Haul/45dB	ITU G.703	75Ω Coax
0x1Bh	E1 Long Haul/45dB	ITU G.703	120Ω TP
0x1Ch	E1 Short Haul/15dB	ITU G.703	75Ω Coax
0x1Dh	E1 Short Haul/15dB	ITU G.703	120Ω TP
0x1Eh	E1 Gain Mode/29dB	ITU G.703	75Ω Coax
0x1Fh	E1 Gain Mode/29dB	ITU G.703	120Ω TP

DEFAULT

TABLE 163: LIU CHANNEL CONTROL REGISTER 1 (LIUCCR1)

Түре

FUNCTION

Віт

	HEX ADDRESS: 0x0FN1
DESCRIPTION-OPER	ATION
ination Select:	

7	RXTSEL_n	R/W	0	Receiver T	ermination	Select:		
,				Receiver Termination Select: Upon power up, the receivers are in "High" impedance. The receive termination can be selected by setting this bit according to the fol- lowing table:				
					RXTSEL	. RX Te	ermination	
					0	"High" I	mpedance	
					1	Int	ernal	
6	TXTSEL_n	R/W	0	This bit is u		t between in ne T1 transn	ternal termination	
						"Hig	h" Impedance	-
					ne <u>19</u> 1		Internal	
			orp	These bits are used to control the transmit and receive termination impedance when the LIU block is configured in Internal Termination Mode In internal termination mode, (i.e., TXTSEL = "1" and RXTSEL = "1"), internal transmit and receive termination can be selected according to the following table: $\frac{\hline TERSEL1}{0} \frac{\hline Internal Transmit}{and Receive} \\ \hline Termination} \\ \hline 0 & 0 & 100\Omega \\ \hline 0 & 1 & 110\Omega \\ \hline 1 & 0 & 75\Omega \\ \hline 1 & 1 & 120\Omega \\ \hline \end{array}$				
				the [TERSEL1	TERSEL0	Internal Tran and Receiv Terminatio	ve
		0	We 1 .		0	0	100Ω	
	~	0 0	n'a .		0	1	110Ω	
		800	6		1	0	75Ω	
		0			1	1	120Ω	
				Note: In			n mode, the tr e transformer.	ansmitter output
3	RxJASEL_n	R/W	0	This bit per the Receive 0 = Disable within the F 1 = Enables	e Path within s the Jitter A Receive T1 L	to enable of the XRT86 ttenuator to U Block. ttenuator to	or disable the Jit /X38 device. operate in the F operate in the R	





TABLE 163: LIU CHANNEL CONTROL REGISTER 1 (LIUCCR1)

HEX ADDRESS: 0x0FN1

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT		De	SCRIPTION-O	PERATION		
2	TxJASEL_n	R/W	0	 Transmit Jitter Attenuator Enable This bit permits the user to enable or disable the Jitter Attenuator in the Transmit Path within the XRT86VX38 device. 0 = Disables the Jitter Attenuator to operate in the Transmit Path within the Transmit T1 LIU Block. 1 = Enables the Jitter Attenuator to operate in the Transmit Path within the Transmit T1 LIU Block. 				ath	
1	JABW_n	R/W	0	Jitter Attenuator Bandwidth Select: In T1 mode, the Jitter Attenuator Bandwidth is always 3Hz, an bit has no effect on the Jitter Attenuator Bandwidth. The FIFO D0 of this register) will be used to select the FIFO size, accord the table below.				S (bit	
				Mode	JABW bit D1	FIFOS_n bit D0	JA B-W Hz	FIFO Size	
				T1	0	0	3	32	
				T1	0	1	3	64	
				T1		0	3	32	
				T1 O		1	3	64	
				E	60	0	10	32	
				E1	0	1	10	64	
			×	E	1	0	1.5	64	
				E10	1	1	1.5	64	
			1 ⁹ .0	1.9e.					
0 FIFOS_n R/W 0 FIFO Size Select: See table of bit D1 above for the function of this bit.								f this	
0 FIFOS_n R/W 0 FIFO Size Select: See table of bit D1 above for the function of the bit.									

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 164: LIU CHANNEL CONTROL REGISTER 2 (LIUCCR2)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	INVQRSS_n	R/W	0	Invert QRSS Pattern: This bit inverts the output PRBS/QRSS pattern if the LIU Block is configured to transmit a PRBS/QRSS pattern. 0 = The LIU will NOT invert the output PRBS/QRSS pattern 1 = The LIU will invert the output PRBS/QRSS pattern
6-4	TXTEST[2:0]	R/W	000	Transmit Test Pattern [2:0]:These bits are used to configure the Transmit T1 LIU Block to generate and transmit test patterns according to the following table.Use of these bits automatically places the LIU section in Single Railmode. When this happens, the Framer section must be placed inSingle Rail mode in Reg 0xN101.TXTEST0Test Pattern
				0 X X No Pattern
				1 0 TDQRSS
				1 TAOS
				1 0 TLUC
		e da ar		 TDQRSS (Transmit/Detect Quasi-Random Signal): QRSS pattern is a 2²⁰-1 pseudo-random bit sequence (PRBS) with to more than 14 consecutive zeros. TAOS (Transmit All Ones): Whenever the user implements this configuration setting, the Transmit T1_LIU Block will ignore the data that it is accepting from the Transmit T1_Framer block (as well as the upstream system-side terminal equipment) and overwrite this data with the All Ones Pattern. TLUC (Transmit Network Loop-Up Code): The Transmit T1_LIU Block will generate and transmit the Network Loop-Up Code of "00001" to the line for the selected channel number n. When Network Loop-Up code is being transmitted, the XRT86VX38 will ignore the "Automatic Loop-Code detection and Remote Loop-Back activation" (NLCDE1 = "1", NLCDE0 = "1" of register 0xNF03) in order to avoid activating Remote Digital Loop-Back automatically when the remote terminal responds to the Loop-Back request. TLDC (Transmit Network Loop-Down Code): The Transmit T1_LIU Block will generate and transmit the Network Loop-Down Code of "001" to the line for the selected channel number n.



HEX ADDRESS: 0x0FN2



TABLE 164: LIU CHANNEL CONTROL REGISTER 2 (LIUCCR2)

HEX ADDRESS: 0x0FN2

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	TXON_n	R/W	0	Transmitter ON:
				This bit permits the user to either turn on or turn off the Transmit Driver of XRT86VX38. If the user turns on the Transmit Driver, then XRT86VX38 will begin to transmit T1 data (on the line) via the TTIP and TRING output pins.
				Conversely, if the user turns off the Transmit Driver, then the TTIP and TRING output pins will be tri-stated.
				0 = Shuts off the Transmit Driver associated with the XRT86VX38 device and tri-states the TTIP and TRING output pins.
				1 = Turns on the Transmit Driver associated with the XRT86VX38 device.
				Note: If the user wishes to exercise software control over the state of the Transmit Driver of the XRT86VX38, then it is imperative that the user pull the TxON pin to a logic "HIGH" level.
2-0	LOOP2_n	R/W	000	Loop-Back control [2:0]: These bits control the Loop-Back Modes of the LIU section, accord- ing to the table below.
				LOOP1 LOOP0 Loop-Back Mode
				X X No Loop-Back
				1 0 0 Dual Loop-Back
			6	0 1 Analog Loop-Back
			of the second	1 1 0 Remote Loop-Back
			01 10	1 1 1 Digital Loop-Back

The product are not be The product are not be

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 165: LIU CHANNEL CONTROL REGISTER 3 (LIUCCR3)

HEX ADDRESS: 0x0FN3

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION	
7-6	NLCDE[1:0]	R/W		These bits are use	ode Detection Enable [1:0]: ed to control the Loop-Code detection on the ording to the table below. This part must be letect	
				NLCDE[1:0]	NETWORK LOOP CODE DETECTION ENABLE	
				00	Disables Loop Code Detection	
				01	Enables Loop-Up Code Detection on the Receive Path.	
				10	Enables Loop-Down Code Detection on the Receive Rath.	
				11	Enables Automatic Loop-Up Code Detection on the Receive Path and Remote Loop-Back Activation upon detecting Loop-Up Code.	
	K	e prod	uct or providence of the second	Loop-Up code Pai pattern), When the more than 5 secon 0xNF05) is set to register 0xNF04), Loop-Down Code The XRT86VX38 is Loop-Down code I pattern). When the more than 5 secon 0xNF05) is set to register 0xNF04), Automatic Loop- Activation Enable When this mode is ter 0xNF05) is res monitor the receiv is detected for Ion register 0xNF05) i Once the remote I matically program Down code. The N ing the Loop-Up c The Remote Loop XRT86VX38 receiv	 configured to monitor the receive data for term (i.e. a string of four '0's followed by or a presence of the "00001" pattern is detecting, the status of the NLCD bit (bit 3 of reg "1" and if the NLCD interrupt is enabled (bit an interrupt will be generated. c Detection Enable: is configured to monitor the receive data for Pattern (i.e. a string of two '0's followed by e presence of the "001" pattern is detected nds, the status of the NLCD bit (bit 3 of reg "1" and if the NLCD interrupt is enabled (bit an interrupt will be generated. c Detection Enable: is configured to monitor the receive data for Pattern (i.e. a string of two '0's followed by e presence of the "001" pattern is detected nds, the status of the NLCD bit (bit 3 of reg "1" and if the NLCD interrupt is enabled (bit an interrupt will be generated. Up Code Detection and Remote Loop B e: a enabled, the state of the NLCD bit (bit 3 of et to "0" and the XRT86VX38 is configured to "0" and the XRT86VX38 is configured to set "1", and Remote Loop-Back is activated, the XRT86VX38 is a med to monitor the receive data for the Loop-Up code. If the "00001" ger than 5 seconds, then the XRT86VX38 is a med to monitor the receive data for the Loop-Up code. If the "00001" ger than 5 seconds, the XRT86VX38 is a med to monitor the receive data for the Loop-Up code. If the "00001" ger than 5 seconds, then the XRT86VX38 is a figure of the to monitor the receive data for the Loop-Up code. If the "00001" ger than 5 seconds, then the NLCD bit (bit 3 of the State of the XRT86VX38 is a figure of the to monitor the receive data for the Loop-Up code. If the "00001" ger than 5 seconds, then the NLCD bit (bit 5 of the State of the Intervence) and the XRT86VX38 is a figure of the to monitor the receive data for the Loop-Up code. If the chip stops 	ne '1' ed for jister it 3 of or the one '1' for jister it 3 of ack of regis- to pattern : 3 of ted. auto- op- s receiv- econds
5	CODES_n	R/W	0		s bit selects B8ZS encoding and decoding a "1" selects AMI coding scheme. This bit	
4-3	Reserved	R/W	00	These Bits are No	t Used	





TABLE 165: LIU CHANNEL CONTROL REGISTER 3 (LIUCCR3)

HEX ADDRESS: 0x0FN3

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	INSBPV_n	R/W	0	 Insert Bipolar Violation: When this bit transitions from "0" to "1", a bipolar violation is inserted in the transmitted data stream of the selected channel number n. Bipolar violation can be inserted either in the PRBS pattern, or input data when operating in single-rail mode. The state of tis bit is sampled on the rising edge of the respective TCLK_n. Note: To ensure the insertion of a bipolar violation, a "0" should be written in this bit location before writing a "1".
1	INSBER_n	R/W	0	 Insert Bit Error: This bit is used to insert a single bit error on the transmitter of the T1 LIU Block. When the T1 LIU Block is configured to transmit and detect the QRSS pattern, (i.e., TxTEST[2:0] bits set to 'b100'), a "0" to "1" transition of this bit will insert a bit error in the transmitted QRSS pattern of the selected channel number n. The state of this bit is sampled on the rising edge of the respective TCLK_n. Note: To ensure the insertion of bit error, a "0" should be written in this bit location before writing a "1".
0	Reserved	R/W	0	This Bit is Not Used

R/W 0 This Bit Is Not Use

HEX	ADDRESS:	0x0FN4
	ADDRESS.	

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	RO	0	This Bit Is Not Used
6	DMOIE_n	R/W	0	Change of Transmit DMO (Drive Monitor Output) Condition Inter- rupt Enable:
				This bit permits the user to either enable or disable the "Change of Transmit DMO Condition" Interrupt. If the user enables this interrupt, then the XRT86VX38 device will generate an interrupt any time when either one of the following events occur.
				 Whenever the Transmit Section toggles the DMO Status bit (Bit 6 or Register 0xNF05) to "1".
				 Whenever the Transmit Section toggles the DMO Status bit (Bit 6 or Register 0xNF05) to "0"
				0 – Disables the "Change in the DMO Condition" Interrupt. 1 – Enables the "Change in the DMO Condition" Interrupt.
5	FLSIE_n	R/W	0	FIFO Limit Status Interrupt Enable:
				This bit permits the user to either enable or disable the "FIFO Limit Sta- tus" Interrupt. If the user enables this interrupt, then the XRT86VX38 device will generate an interrupt when the jitter attenuator Read/Write FIFO pointers are within +/ 3 bits.
				0 = Disables the "FIFO Limit Status" Interrupt 1 = Enables the "FIFO Limit Status" Interrupt
4		DAV	0	
4	LCVIE_n	R/W	0	Line Code Violation Interrupt Enable: Writing a "1" to this bit enables Line Code Violation Interrupt generation, writing a "0" masks it.
				NOTE: Only use for Framer Bypass operation. When framer is in path, use Framer LCV interrupt enable in register 0xNB03.
3	NLCDIE_n	R/W	0	Change in Network Loop-Code Detection Interrupt Enable:
		~	oducet sheet	This bit permits the user to either enable or disable the "Change in Net- work Loop-Code Detection" Interrupt. If the user enables this interrupt, then the XRT86VX38 device will generate an interrupt any time when either one of the following events occur.
		they	ana	 Whenever the Receive Section (within XRT86VX38) detects the Network Loop-Code (Loop-Up or Loop-Down depending on which Loop-Code the Receive LIU is configured to detect).
		0	she	 Whenever the Receive Section (within XRT86VX38) no longer detects the Network Loop-Code (Loop-Up or Loop-Down depending on which Loop-Code the Receive LIU is configured to detect).
				 0 – Disables the "Change in Network Loop-Code Detection" Interrupt. 1 – Enables the "Change in Network Loop-Code Detection" Interrupt.
2	AISDIE_n	R/W	0	 AIS Detection Interrupt Enable: Writing a "1" to this bit enables Alarm indication Signal detection interrupt generation, writing a "0" masks it. Note: Only use for Framer Bypass operation. When framer is in path, use Framer AIS interrupt enable in register 0xNB03.





TABLE 166: LIU CHANNEL CONTROL INTERRUPT ENABLE REGISTER (LIUCCIER)

HEX ADDRESS: 0x0FN4

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	RLOSIE_n	R/W	0	Change of the Receive LOS (Loss of Signal) Defect Condition Inter- rupt Enable:
				This bit permits the user to either enable or disable the "Change of the Receive LOS Defect Condition" Interrupt. If the user enables this interrupt, then the XRT86VX38 device will generate an interrupt any time when either one of the following events occur.
				 Whenever the Receive Section (within XRT86VX38) declares the LOS Defect Condition.
				 Whenever the Receive Section (within XRT86VX38) clears the LOS Defect condition.
				0 – Disables the "Change in the LOS Defect Condition" Interrupt.
				1 – Enables the "Change in the LOS Defect Condition" Interrupt.
0	QRPDIE_n	R/W	0	Change in QRSS Pattern Detection Interrupt Enable:
				This bit permits the user to either enable or disable the "Change in QRSS Pattern Detection" Interrupt. If the user enables this interrupt, then the XRT86VX38 device will generate an interrupt any time when either one of the following events occur.
				 Whenever the Receive Section (within XRT86VX38) detects the QRSS Pattern.
				 Whenever the Receive Section (within XRT86VX38) no longer detects the QRSS Pattern.
				0 – Disables the "Change in QRSS Pattern Detection" Interrupt.
				1 - Enables the "Change in QRSS Pattern Detection" Interrupt.

Note: Register 0xNF04, 0xNF05 and 0xNF06 only work if the LIU is placed in Single Rail mode. If done so, the Framer block must also be placed in Single Rail mode in Register 0xN101.

. vo and 0xNF06 only work ...v be placed in Single Rail mode in the other the place of the other the place of the other the ot

TABLE 167: LIU CHANNEL CONTROL STATUS REGISTER (LIUCCSR)

HFX	ADDRESS:	0x0FN5
	ADDILLUS.	

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	RO	0	
6	DMO_n	RO	0	Driver Monitor Output (DMO) Status: This READ-ONLY bit indicates whether or not the Transmit Section is currently declaring the DMO Alarm condition. The Transmit Section will check the Transmit Output T1 Line signal for bipolar pulses via the TTIP and TRING output signals. If the Transmit Section were to detect no bipolar signal for 128 consecu- tive bit-periods, then it will declare the Transmit DMO Alarm condi-
				 the bit-peniods, then it will declare the Transmit DMO Alarm conditions. This particular alarm can be used to check for fault conditions on the Transmit Output Line Signal path. The Transmit Section will clear the Transmit DMO Alarm condition the instant that it detects some bipolar activity on the Transmit Output Line signal. Indicates that the Transmit Section of XRT86VX38 is NOT currently declaring the Transmit DMO Alarm condition. I = Indicates that the Transmit Section of XRT86VX38 is currently declaring the Transmit DMO Alarm condition. Mote: If the DMO interrupt is enabled (DMOIE - bit D6 of register)
5	FLS_n	RO	o uct or pr	 OXNF04), any transition on this bit will generate an Interrupt. FIFO Limit Status. This READ-ONLY bit indicates whether or not the XRT86VX38 is currently declaring the FIFO Limit Status. This bit is secto a "1" to indicate that the jitter attenuator Read/Write FIFO pointers are within +/- 3 bits. Indicates that the XRT86VX38 is NOT currently declaring the FIFO Limit Status. 1 = Indicates that the XRT86VX38 is currently declaring the FIFO Limit Status. 1 = Indicates that the XRT86VX38 is currently declaring the FIFO Limit Status. Note: If the FIFO Limit Status Interrupt is enabled, (FLSIE bit - bit D5 of register 0xNF04), any transition on this bit will generate an Interrupt.
4	LCV_n	ROD	010	Line Code Violation: This bit is set to "1" to indicate that the receiver of channel n is currently detecting a Line Code Violation or an excessive number of zeros in the B8ZS mode. If the LCVIE bit is enabled any transition on this bit will generate an interrupt. Note: Only use for Framer Bypass operation.



XRT86VX38



TABLE 167: LIU CHANNEL CONTROL STATUS REGISTER (LIUCCSR)

HEX ADDRESS: 0x0FN5

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
3	NLCD_n	RO	or produce to the product of the pro	Network Loop-Code Detection Status Bit: This bit operates differently in the Manual or the Automatic Network Loop-Code detection modes. Manual Loop-Up Code detection mode (.i.e If NLCDE1 = "0" and NLCDE0 = "1"), this bit gets set to "1" as soon as the Loop-Up Code ("00001") is detected in the receive data for longer than 5 seconds. This bit stays high as long as the Receive T1 LIU Block detects the presence of the Loop-Up code in the receive data and it is reset to "0" as soon as it stops receiving the Loop-Up Code. If the NLCD interrupt is enabled, the XRT86VX38 will initiate an interrupt on every transition of the NLCD status bit. Manual Loop-Down Code detection mode (i.e., If NLCDE1 = "1" and NLODE0 = "0"), this bit gets set to "1" as soon as the Loop-Down Code ("001") is detected in the receive data for longer than 5 seconds. This bit stays high as long as the Receive T1 LIU Block detects the presence of the Loop-Down code in the receive data and it is reset to "0" as soon as it stops receiving the Loop-Down Code. If the NLCD E1 = "1" and NLODE0 = "0"), this bit gets set to "1" as soon as the Loop-Down code in the receive data and it is reset to "0" as soon as it stops receiving the Loop-Down Code. If the NLCD interrupt is enabled, the XRT86VX38 will initiate an interrupt on every transition of the NLCD status bit. Automatic Loop-Code detection mode (i.e., If NLCDE1 = "1" and NLCDE0 ="1"), the state of the NLCD sta- us bits reset to "0" and the XRT86VX38 is programmed to monitor the receive input data for the Loop-Up code. This bit is set to a "1" to indicate that the Network Loop Code is detected for more than 5 seconds. Simultaneously, the Remote Loop-Back condition is automatically activated and the XRT86VX38 is programmed to monitor the receive data for the Network Loop Down code. The NLCD bit stays 'high' as long as the Remote Loop- Up code. Remote Loop-Back is removed only if the XRT86VX38 detects the Loop-Down Code "001" pattern for longer than 5 sec- onds in the re
2	AISD_n	RO	0	 Alarm Indication Signal detect : This bit is set to "1" to indicate All Ones Signal is detected by the receiver of channel n. If the AISDIE bit is enabled any transition on this bit will generate an interrupt. Note: Only use for Framer Bypass operation. When framer is in path, use Framer RxAIS State in register 0xNB02.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 167: LIU CHANNEL CONTROL STATUS REGISTER (LIUCCSR)

HEX ADDRESS: 0x0FN5

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	RLOS_n	RO	0	 Receive Loss of Signal Defect Condition Status: This READ-ONLY bit indicates whether or not the Receive LIU Block is currently declaring the LOS defect condition. 0 = Indicates that the Receive Section is NOT currently declaring the LOS Defect Condition. 1 = Indicates that the Receive Section is currently declaring the LOS Defect condition.
				Note: If the RLOSIE bit (bit D1 of Register 0xNF04) is enabled, any transition on this bit will generate an Interrupt.
0	QRPD_n	RO	0	Quasi-random Pattern Detection Status: This READ-ONLY bit indicates whether or not the Receive LIU Block is currently declaring the QRSS Pattern LOCK status. 0 = Indicates that the XRT86VX38 is NOT currently declaring the QRSS Pattern LOCK. 1 = Indicates that the XRT86VX38 is currently declaring the QRSS Pattern LOCK. 1 = Indicates that the XRT86VX38 is currently declaring the QRSS Pattern LOCK. Note: If the QRPDIE bit (bit D0 of register 0xNF04) is enabled, any transition on this bit will generate an Interrupt.

Note: Register 0xNF04, 0xNF05 and 0xNF06 only work if the LU is placed in Single Rail mode. If done so, the Framer block must also be placed in Single Rail mode in Register 0xN101.





TABLE 168: LIU CHANNEL CONTROL INTERRUPT STATUS REGISTER (LIUCCISR)

HEX ADDRESS: 0x0FN6

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	RO	0	
6	DMOIS_n		Change of Transmit DMO (Drive Monitor Output) Condition Interrupt Status:	
				This RESET-upon-READ bit indicates whether or not the "Change of the Transmit DMO Condition" Interrupt has occurred since the last read of this register.
				 0 = Indicates that the "Change of the Transmit DMO Condition" Interrupt has NOT occurred since the last read of this register. 1 = Indicates that the "Change of the Transmit DMO Condition" Interrupt has occurred since the last read of this register.
				This bit is set to a "1" every time when DMO_n status bit (bit 6 of Register 0xNF05) has changed since the last read of this register.
				Note: Users can determine the current state of the "Transmit DMO Condition" by reading out the content of bit 6 within Register 0xNF05
5	FLSIS_n	RUR/ WC	0	FIFO Limit Interrupt Status: This RESET upon READ bit indicates whether or not the "FIFO
				Limit Interrupt has occurred since the last read of this register.
				0 = Indicates that the "FIFO Limit Status" Interrupt has NOT occurred since the last read of this register.
			,00	1 Findicates that the "FIFO Limit Status" Interrupt has occurred
			. 9	since the last read of this register.
		تى	oren	This bit is set to a "1" every time when FIFO Limit Status bit (bit 5 of Register 0xNF05) has changed since the last read of this register.
		odue	et not	Note: Users can determine the current state of the "FIFO Limit" by reading out the content of bit 5 within Register 0xNF05
4	LCVIS_n	RUR	0	Line Code Violation Interrupt Status: This bit is set to a "1" every time the LCV_n status has changed since the last read.
	1.8	and		Note: Only use for Framer Bypass operation. When framer is in path, use Framer LCV Int Status in register 0xNB02.
3	NLCDIS_n	RUR/	0	Change in Network Loop-Code Detection Interrupt Status:
		WC		This RESET-upon-READ bit indicates whether or not the "Change in Network Loop-Code Detection" Interrupt has occurred since the last read of this register.
				0 = Indicates that the "Change in Network Loop-Code Detection" Interrupt has NOT occurred since the last read of this register.
				1 = Indicates that the "Change in Network Loop-Code Detection" Interrupt has occurred since the last read of this register.
				This bit is set to a "1" every time when NLCD status bit (bit 3 of Reg- ister 0xNF05) has changed since the last read of this register.
				Note: Users can determine the current state of the "Network Loop-Code Detection" by reading out the content of bit 3 within Register 0xNF05

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 168: LIU CHANNEL CONTROL INTERRUPT STATUS REGISTER (LIUCCISR)

HEX ADDRESS: 0x0FN6

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
2	AISDIS_n	RUR	0	 AIS Detection Interrupt Status: This bit is set to a "1" every time the AISD_n status has changed since the last read. Note: Only use for Framer Bypass operation. When framer is in path, use Framer RxAIS State Change in register 0xNB02.
1	RLOSIS_n	RUR/ WC	0	 Change of Receive LOS (Loss of Signal) Defect Condition Interrupt Status: This RESET-upon-READ bit indicates whether or not the "Change of the Receive LOS Defect Condition" Interrupt has occurred since the last read of this register. 0 = Indicates that the "Change of the Receive LOS Defect Condition" Interrupt has NOT occurred since the last read of this register. 1 - Indicates that the "Change of the Receive LOS Defect Condition" Interrupt has occurred since the last read of this register. 1 - Indicates that the "Change of the Receive LOS Defect Condition" Interrupt has occurred since the last read of this register. Note: The user can determine the current state of the "Receive LOS Defect condition" by reading out the contents of Bit 1 (Receive LOS Defect Condition Status) within Register 0xNF05.
0	QRPDIS_n	RUR/ WC	o uct are	 Change in Quasi-Random Pattern Detection Interrupt Status: This RESET-upon-READ bit indicates whether or not the "Change in QRSS Pattern Detection" Interrupt has occurred since the last read of this register. 0 = Indicates that the "Change in QRSS Pattern Detection" Interrupt has NOT occurred since the last read of this register. 1 = Indicates that the "Change in QRSS Pattern Detection" Interrupt has occurred since the last read of this register. 1 = Indicates that the "Change in QRSS Pattern Detection" Interrupt has occurred since the last read of this register. This bit is set to a "1" every time when QRPD status bit (bit 0 of Register 0xNF05) has changed since the last read of this register. Note: Users can determine the current state of the "QRSS Pattern Detection" by reading out the content of bit 0 within Register 0xNF05

NOTE: Register 0xNF04, 0xNF05 and 0xNF06 only work if the LIU is placed in Single Rail mode. If done so, the Framer block must also be placed in Single Rail mode in Register 0xN101.

datend





TABLE 169: LIU CHANNEL CONTROL CABLE LOSS REGISTER (LIUCCCCR)

HEX ADDRESS: 0x0FN7

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-6	Reserved	RO	0	
5-0	CLOS[5:0]	RO	0	Cable Loss [5:0]:
				These bits represent the six bit receive selective equalizer setting which is also a binary word that represents the cable attenuation indication within ± 1 dB.
				CLOS5_n is the most significant bit (MSB) and CLOS0_n is the least significant bit (LSB).
				Note: In RxSYNC (Sect 13) mode, ExLOS must be configured (this will set the DLOS to 4,096 bits which does not meet G.775). However, the CLOS bits can be used to meet the DLOS requirements of G.775 with a simple software procedure. To meet G.775, simply choose a desired value of attenuation (For example: 12dB) to monitor in this register for RLOS within a time period of 175 Clock Cycles +/-75. The internal RLOS alarm should be masked unless ExLOS is being used For more details, please contact the factory.

```
TABLE 170: LIU CHANNEL CONTROL ARBITRARY REGISTER (LIUCCAR1)
```

HEX ADDRESS: 0x0FN8

Віт	FUNCTION	Түре	
7	Reserved	R/W	
6-0	Arb_Seg1	R/W	Arbitrary Transmit Pulse Shape, Segment 1: These seven bits form the first of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode". These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB). Note: Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

TABLE 171: LIU CHANNEL CONTROL ARBITRARY REGISTER 2 (LIUCCAR2)

HEX ADDRESS: 0x0FN9

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W	0	
6-0	Arb_Seg2	R/W	0	Arbitrary Transmit Pulse Shape, Segment 2
				These seven bits form the second of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbi-trary Mode".
				These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB).
				Note: Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

TABLE 172: LIU CHANNEL CONTROL ARBITRARY REGISTER 3 (LIUCCAR3)

HEX ADDRESS: 0x0FNA

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W	0	
6-0	Arb_seg3	R/W	0	Arbitrary Transmit Pulse Shape, Segment 3
				These seven bits form the third of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode".
				These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB).
				Note: Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

TABLE 173: LIU CHANNEL CONTROL ARBITRARY REGISTER 4 (LIUCCAR4)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W	0	
6-0	Arb_seg4	R/W	0	Arbitrary Transmit Pulse Shape, Segment 4 These seven bits form the forth of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode". These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB). Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0×NF00

TABLE 174: LIU CHANNEL CONTROL ARBITRAR REGISTER 5 (LIUCCAR5)

Hex Address: 0x0FNC

Віт	FUNCTION	Түре	DEFAULT	Description-Operation
7	Reserved	R/W	00	10°
6-0	Arb_seg5	R/WS	dmayn	Arbitrary Transmit Pulse Shape, Segment 5 These seven bits form the fifth of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode". These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB). Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.





TABLE 175: LIU CHANNEL CONTROL ARBITRARY REGISTER 6 (LIUCCAR6)

HEX ADDRESS: 0x0FND

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W	0	
6-0	Arb_seg6	R/W	0	Arbitrary Transmit Pulse Shape, Segment 6
				These seven bits form the sixth of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode".
				These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB).
				Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

TABLE 176: LIU CHANNEL CONTROL ARBITRARY REGISTER 7 (LIUCCAR7)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W	0	ion and
6	Arb_seg7	R/W	0	Arbitrary Transmit Pulse Shape, Segment 7
			Prod	These seven bits form the seventh of the eight segments of the transmit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode". These seven bits represent the amplitude of the nth channel's arbitrary oulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB). Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

TABLE 177: LIU CHANNEL CONTROL ARBITRARY REGISTER 8 (LIUCCAR8)

Hex Address: 0x0FNF

HEX ADDRESS: 0x0FNE

Віт	FUNCTION	TYPE	DEFAULT	DESCRIPTION-OPERATION
7	Reserved	R/W		
6	Arb_seg8	R/W	0	Arbitrary Transmit Pulse Shape, Segment 8
	The	13,00		These seven bits form the eight of the eight segments of the trans- mit shape pulse when the XRT86VX38 is configured in "Arbitrary Mode".
		<i>S</i> ,		These seven bits represent the amplitude of the nth channel's arbi- trary pulse in signed magnitude format with Bit 6 as the sign bit and Bit 0 as the least significant bit (LSB).
				Arbitrary mode is enabled by writing to the EQC[4:0] bits in register 0xNF00.

TABLE 178: LIU GLOBAL CONTROL REGISTER 0 (LIUGCR0)

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION	
7	SR	R/W	0	Single Rail mode This bit must set to "1" for Single Rail mode to use LIU diagnotic fea- tures. The Framer section must be programmed as well in Register 0xN101. 0 - Dual Rail 1 - Single Rail	
6	ATAOS	R/W	0	Automatic Transmit All Ones Upon RLOS: This bit enables automatic transmission of All Ones Pattern upon detecting the Receive Loss of Signal (RLOS) condition. Once this bit is enabled, the Transmit 11 Framer Block will automat- ically transmit an All "Ones" data to the line for the channel that detects an RLOS condition. 0 = Disables the "Automatic Transmit All Ones" feature upon detect- ing RLOS 1 = Enables the "Automatic Transmit All Ones" feature upon detect- ing RLOS	
5	RCLKE	R/W	0	Receive Clock Data (Framer Bypass mode) 0 = RPOS/RNEG data is updated on the rising edge of RCLK 1 = RPOS/RNEG data is updated on the falling edge of RCLK	
4	TCLKE	R/W	0	Transmit Clock Data (Framer Bypass mode) 0 = TPOS/TNEG data is sampled on the falling edge of TCLK 1 = TPOS/TNEG data is sampled on the rising edge of TCLK	
3	DATAP	R/W		Data Polarity 0 = Transmit input and receive output data is active "High" 1 = Transmit input and receive output data is active "Low"	
2	Reserved	8		This Bit Is Not Used	
2 Reserved This Bit Is Not Used					



XRT86VX38

HEX ADDRESS: 0x0FE0



TABLE 178: LIU GLOBAL CONTROL REGISTER 0 (LIUGCR0)

HEX ADDRESS: 0x0FE0

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	GIE	R/W	0	Global Interrupt Enable:
				This bit allows users to enable or disable the global interrupt gener- ation for all channels within the E1 LIU Block. Once this global inter- rupt is disabled, no interrupt will be generated to the Microprocessor Interrupt Pin even when the individual "source" interrupt status bit pulses 'high'.
				If this global interrupt is enabled, users still need to enable the indi- vidual "source" interrupt in order for the E1 LIU Block to generate an interrupt to the Microprocessor pin.
				0 - Disables the global interrupt generation for all channels within the E1 LIU Block.
				1 - Enables the global interrupt generation for all channels within the E1 LIU Block.
0	SRESET	R/W	0	Software Reset µP Registers:
				This bit allows users to reset the XRT86VX38 device. Writing a "1" to this bit and keeping it at '1' for longer than 10µs initiates a device reset through the microprocessor interface. Once the XRT86VX38 is reset, all internal circuits are placed in the reset state except the microprocessor register bits.
				0 = Disables software reset to the XRT86VX38 device. 1 = Enables software reset to the XRT86VX38 device.

eset, all i microproc 0 = Disable 1 = Enables

TABLE 179: LIU GLOBAL CONTROL REGISTER 1 (LIUGCR1)

Віт	FUNCTION	Түре	DEFAULT			DESCRIPTIO	N-OPERATION	
7	TxSYNC(Sect 13)	R/W	0	When chrnor except ority o 0 = T1	nous waveforr t with frequent ver every othe pulse specifie	to '1', the LIU n as describe cy equal to 1.3 er LIU setting ed in EQC bit	transmitter will send a d in Section 13 of ITU- 544MHz. This register on the transmit path.	T G.703,
6	RxSYNC(Sect 13)	R/W	0	When to accept 0 = No 1 = Se Note:	ept a waveform t with frequency ormal T1 (Equ ection 13 Synce 1. For the (0xFE1) mu applies to the 2. If RLOS ExLOS), the	o '1', the CDR m as describe cy equal to 1. alizer Bit Sett chronous Puls RxSyno(Sec ust be set to be receiver. is required to on the CLOS[3	block of the receiver is d in Section 13 of ITU- 544MHz. ings - EQU[4:0]) e at 1.544MHz t 13) mode, bit 1 in o '1' to enable ExLOS meet G.775 in this mo 5:0] bits in Register 0x0 N7 for more details.	-T G.703 this register 5. This only ode (and not
5-4	Gauge [1:0]	R/W	oo uct of provide the set of the	This b to sele	ect the wire ga	h Guage0 bit	(bit 4 within this register hown in the table below Wire Size 22 and 24 Gauge 22 Gauge 24 Gauge 26 Gauge	
3	Reserved	XO	(n°	This b	it is not used			
2	RXMUTE	R	0	This b matica for the defect In othe will au the Re Receiv 0 – Dis 1 – En	ally pull its Rec duration that condition. er words, if thi tomatically "m ceive T1 Fran ve T1 LIU Bloo sables the "Mu ables the "Mu	user to config covered Data) the Receive s feature is en oute" the Reco ner block any ck declares th uting upon LO uting upon LO		aytime (and the LOS LIU Block g routed to on that) the h.



HEX ADDRESS: 0x0FE1

REV. 1.0.4



TABLE 179: LIU GLOBAL CONTROL REGISTER 1 (LIUGCR1)

HEX ADDRESS: 0x0FE1

XRT86VX38

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
1	EXLOS			Extended LOS Enable: This bit allows users to extend the number of zeros at the receive input before RLOS is declared. When Extended LOS is enabled, the Receive T1 LIU Block will declare RLOS condition when it receives 4096 number of consecu- tive zeros at the receive input.
				 When Extended LOS is disabled, the Receive T1 LIU Block will declare RLOS condition when it receives 175 number of consecutive zeros at the receive input. 0 = Disables the Extended LOS Feature. 1 = Enables the Extended LOS Feature.
0	ĪCT	R/W	0	 In-Circuit-Testing Enable: This bit allows users to tristate the output pins of all channels for incircuit testing purposes. When In-Circuit-Testing is enabled, all output pins of the XRT86VX38 are "Tri-stated". When In-Circuit-Testing is disabled, all output pins will resume to normal condition. 0 = Disables the In-Circuit-Testing Feature. 1 = Enables the In-Circuit-Testing Feature.

. (2	
5	ve	5	'
)	
LIUGCI	R2)		

HEX ADDRESS: 0x0FE2

TABLE	180: LIU GLOBAL C	ONTROL R	EGISTER	2 (LIUG	CR2)	•
_	_	_				_

Віт	FUNCTION	Түре	DEFAULT DESCRIPTION-OPERATION
7	Force to "0"	R/W	0 0 Set to "0"
6-0	Reserved	R/W	These Bits Are Not Used

00	Reserved		These bits /
		~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	
		.0 .0	
		or no	
	0	× ~ ~ ~	
TABLE	181: LIU GLOBAL CO	NTROL REG	ISTER 3 (LIUGCR3)
		6 0	

HEX ADDRESS: 0x0FE4

Віт		TYPE	DEFAULT	DESCRIPTION-OPERATION
7-0	Reserved	R/W	0	These Bits are Not Used.

### 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

### TABLE 182: LIU GLOBAL CONTROL REGISTER 4 (LIUGCR4)

HEX ADDRESS: 0x0FE9

Віт	FUNCTION	Түре	DEFAULT		DESCRIPTION-OPERATION
7-4	Reserved	R/W	0		
3-0	CLKSEL[3:0]	R/W	0001		t [3:0] w users to select the programmable input clock IN input pin, according to the table below.
				CLKSEL[3:0]	CLOCK RATE OF THE MCLKIN INPUT PIN
				0000	2.048MHz
				0001	1.544MHz
				0010 - 0111	Reserved
				1000	4.096MHz
				1001	3.088MHz
				1010	8.192MHz
				1011	6.176MHz
				1100	16.384MHz
				<b>51101</b>	12.352MH
				100	2.048MHz
				O (11110	1.544MHz
	\$	ne data	uct are neet no		provide any one of the above clock frequencies to IN input pin for the device to be functional.





### TABLE 183: LIU GLOBAL CONTROL REGISTER 5 (LIUGCR5)

HEX ADDRESS: 0x0FEA

**XRT86VX38** 

Віт	FUNCTION	Түре	DEFAULT	DESCRIPTION-OPERATION
7-1	Reserved	-	0	These bits are reserved
0	GCHIS0	RUR/ WC	0	<b>Global Channel 0 Interrupt Status Indicator</b> This Reset-Upon-Read bit field indicates whether or not an interrupt has occurred on Channel 0 within the XRT86VX38 device since the last read of this register.
				0 = Indicates that No interrupt has occurred on Channel 0 within the XRT86VX38 device since the last read of this register.
				1 = Indicates that an interrupt has occurred on Channel 0 within the XRT86VX38 device since the last read of this register.


the last the



### ORDERING INFORMATION

PRODUCT NUMBER	PACKAGE	OPERATING TEMPERATURE RANGE
XRT86VX38IB256	256 PIn Fine Pitch Ball Grid Array	-40°C to +85°C
XRT86VX38IB329	329 PIn Fine Pitch Ball Grid Array	-40°C to +85°C


### PACKAGE DIMENSIONS FOR 256 PIN FINE PITCH BALL GRID ARRAY

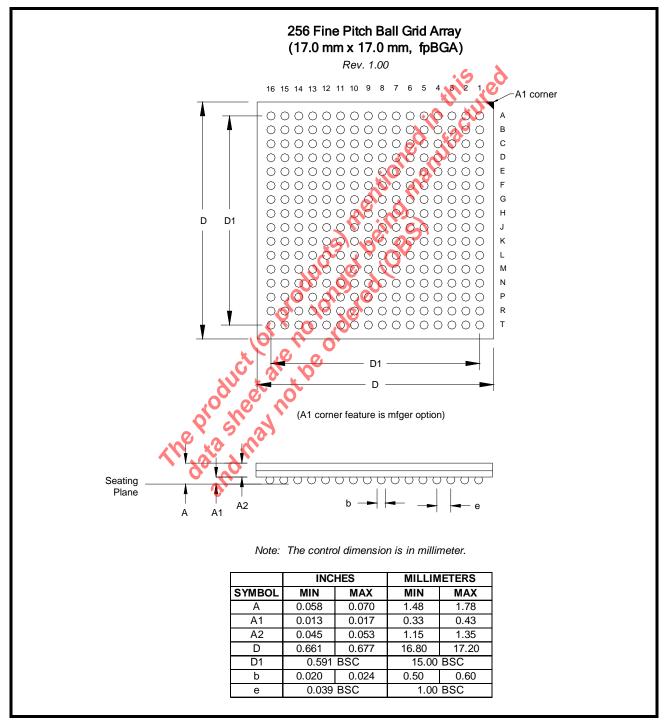



#### 8-CHANNEL T1/E1/J1 FRAMER/LIU COMBO - T1 REGISTER DESCRIPTION

#### PACKAGE DIMENSIONS FOR 329 PIN FINE PITCH BALL GRID ARRAY

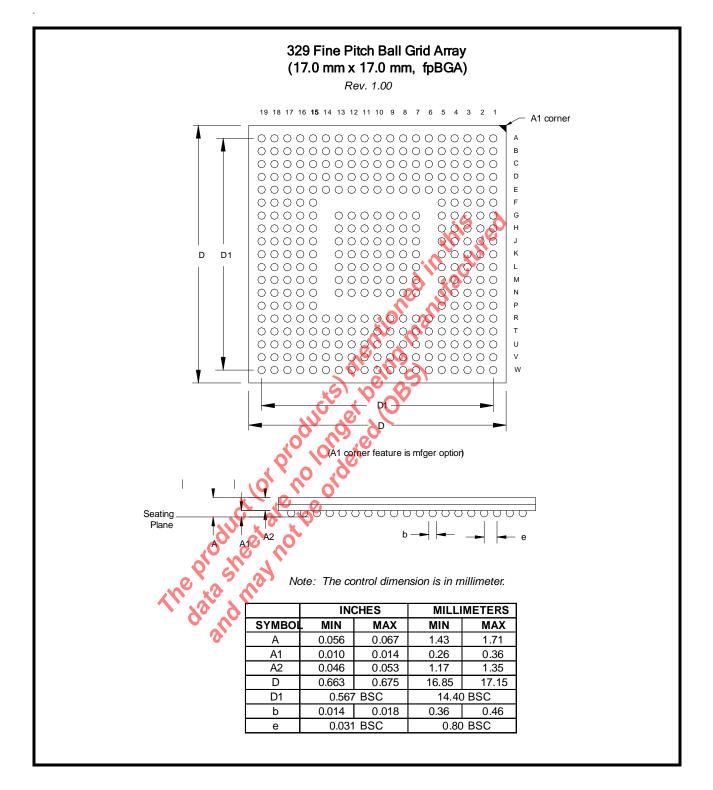



### **REVISION HISTORY**

<b>REVISION #</b>	Dате	DESCRIPTION
1.0.0	May 2009	Release of the XRT86VX38 T1 Register Description Datasheet.
1.0.1	June 15, 2009	Update the packaging name to fpBGA, update applications and features lists.
1.0.2	January 29, 2010	Clarified the RxSYNC (Sect 13) operation for the RLOS feature, added GPIO Registers 0x0102 and 0x4102, and general edits.
1.0.3	June 24, 2011	Modified EQC table (removed "N" channel reference), added LCV and AIS inter- rupt bit definitions to registers 0xFN4, 0xFN5 & 0xFN6, and added FAR_END and NPRM bit definitions to reg 0xN11D.
1.0.4	October 29, 2013	Changed to new Exar logo, updated Rev ID, modified RDS0MR, TDS0MR, TICR, RICR and PRBSCSR0 register descriptions

Peright to make reliability s no lice inger v EXAR Corporation reserves the right to make changes to the products contained in this publication in order to improve design, performance or reliability. EXAR Corporation assumes no responsibility for the use of any circuits described herein, conveys no license under any patent or other right, and makes no representation that the circuits are free of patent infringement. Charts and schedules contained here in are only for illustration purposes and may vary depending upon a user's specific application. While the information in this publication has been carefully checked; no responsibility, however, is assumed for inaccuracies.

EXAR Corporation does not recommend the use of any of its products in life support applications where the failure or malfunction of the product can reasonably be expected to cause failure of the life support system or to significantly affect its safety or effectiveness. Products are not authorized for use in such applications unless EXAR Corporation receives, in writing, assurances to its satisfaction that: (a) the risk of injury or damage has been minimized; (b) the user assumes all such risks; (c) potential liability of EXAR Corporation is adequately protected under the circumstances.

Copyright 2013 EXAR Corporation

Datasheet November 2013.

Reproduction, in part or whole, without the prior written consent of EXAR Corporation is prohibited.